


CL510 Document Camera

Installation Guide

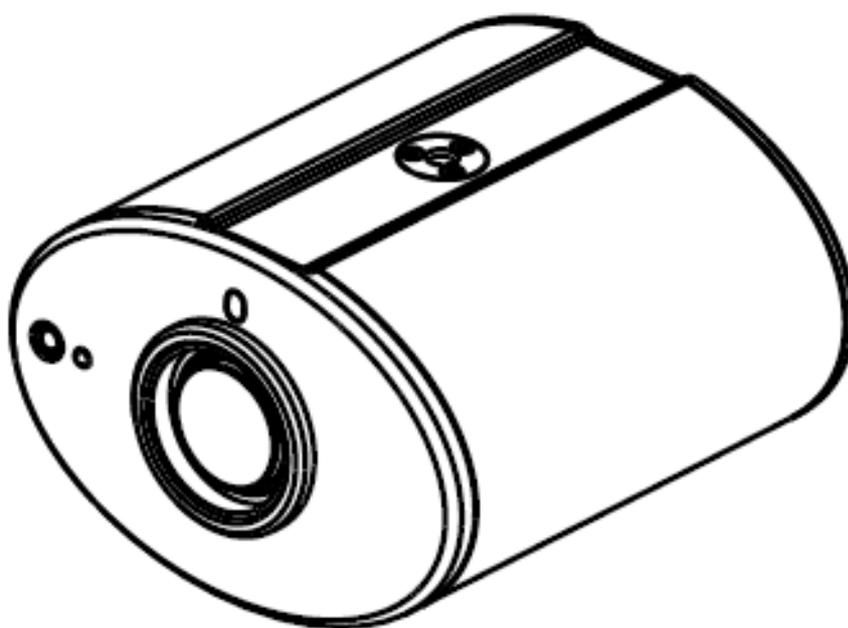

Version: V06
Date: 2015/05/07

Table of Contents

Copyright Information	2
Chapter 1 Safety Instructions	3
Precautions	3
FCC Warning.....	3
FDA Warning.....	3
EN55022 (CE Radiation) Warning	3
EN60825 (Laser) Warning	3
Caution.....	3
Chapter 2 Package Contents	4
Chapter 3 Product Description	5
3.1 Body size	5
3.2 IO description	7
Chapter 4 Installation and Connections	8
4.1 Preparation before installation.....	8
4.2 Switch setting	10
4.3 System diagram.....	11
4.4 Set up the power frequency	11
4.5 Set the position of the object to be captured (Laser mark)	11
4.6 AF Table Set for auto focus setting	12
Chapter 5 Troubleshooting	14
Attachment 1	15

Copyright Information

Copyrights © Lumens Digital Optics Inc. All rights reserved.

Lumens is a trademark that is currently being registered by Lumens Digital Optics Inc.

Copying, reproducing or transmitting this file is not allowed if a license is not provided by Lumens Digital Optics Inc. unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, Lumens Digital Optics Inc. hereby reserves the right to make changes to product specifications without prior notice. The information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies, nevertheless without any intention of infringement.

Disclaimer of warranties: Lumens Digital Optics Inc. is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.

Chapter 1 Safety Instructions

Always follow these safety instructions when setting up and using the Ceiling Camera:

1. Use attachments only as recommended.
2. Use the type of power source indicated on the Ceiling Camera. If you are not sure of the type of power available, consult your distributor or local electricity company for advice.
3. Always take the following precautions when handling the plug. Failure to do so may result in sparks or fire.
 - Ensure the plug is free of dust before inserting it into a socket.
 - Ensure that the plug is inserted into the socket securely.
4. Do not overload wall sockets, extensions leads or multi-way plug boards as this may cause fire or electric shock.
5. Do not place the Ceiling Camera where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
6. Do not block the slots and openings in the Ceiling Camera case. They provide ventilation and prevent the Ceiling Camera from overheating. Do not place the Ceiling Camera on the soft surface of sofas, carpets or others.
7. Never push any kind of objects through cabinet slots. Never allow any kind of liquid to spill into the Ceiling Camera.
8. Except as specifically instructed in this User Manual, do not attempt to operate this product by yourself. Opening or removing covers may expose you to dangerous voltages and other hazards. Refer all servicing to licensed service personnel.
9. Unplug the Ceiling Camera during thunderstorms or if it is not going to be used for an extended period. Do not place the Ceiling Camera or remote control on top of heat-emitting equipment or heated objects such as a car, etc.
10. Unplug the Ceiling Camera from the wall outlet and refer serving to licensed service personnel when the following situations happen:
 - If the power cable or plug becomes damaged or frayed.
 - If liquid is spilled into it or the Ceiling Camera has been exposed to rain or water.
11. Due to safety concerns, please make sure the ceiling mounting which you purchased complies with UL and VESA standard. And it's highly recommended to have the technical persons who are certified by local agents to apply installation and replacement.

<Note> Using an incorrect battery type in the remote control may result in breakdown. Follow your country's instructions on how to dispose of used batteries.

■ Precautions

Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

If the Ceiling Camera will not be used for an extended time, unplug it from the power socket.

	<table border="1" style="margin: auto;"> <tr><td style="text-align: center;">Note</td></tr> <tr><td style="text-align: center;">Risk of Electric Shock</td></tr> </table>	Note	Risk of Electric Shock	
Note				
Risk of Electric Shock				
<p>Caution: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to licensed service Personnel.</p>				
	<p>This symbol indicates that this equipment may contain dangerous voltage which could cause electric shock.</p>	<table border="1" style="margin: auto;"> <tr><td style="text-align: center;"></td></tr> </table> <p>This symbol indicates that there are important operating and maintenance instructions in this User Manual with this unit.</p>		
				

■ FCC Warning

This Ceiling Camera has been tested and found to comply with the limits for a Class A digital device, pursuant to Article 15-J of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

■ FDA Warning

This Device Complies with DHHS Radiation Rules, 21CFR Chapter 1, Subchapter J.

■ EN55022 (CE Radiation) Warning

This product is intended for use in a commercial, industrial, or educational environment. It is not intended for residential use.

This is a Class A product. In a residential environment it may cause radio interference, in which case the user may be required to take adequate measures. The typical use is in a conference room, meeting room or auditorium.

■ EN60825 (Laser) Warning


	Laser Radiation Do Not Stare Into Beam Class 2 Laser Product
--	--

■ Caution

Danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type. Dispose batteries according to manufacture's instructions.

Chapter 2 Package Contents

CL510

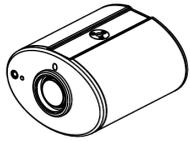

Quick Start Guide

(For download of other language versions, please visit Lumens website)




Instruction for Installation



Remote Control



Power Adapter

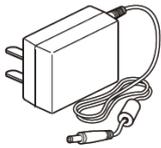

Appearance may vary depending on country/region

USB Cable




VGA Cable



IR extender




Ceiling Mount / Hanger

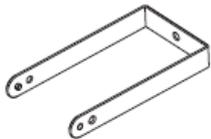



Chapter 3 Product Description

3.1 Body size


3.1.1 The size of CL510 is as follows:

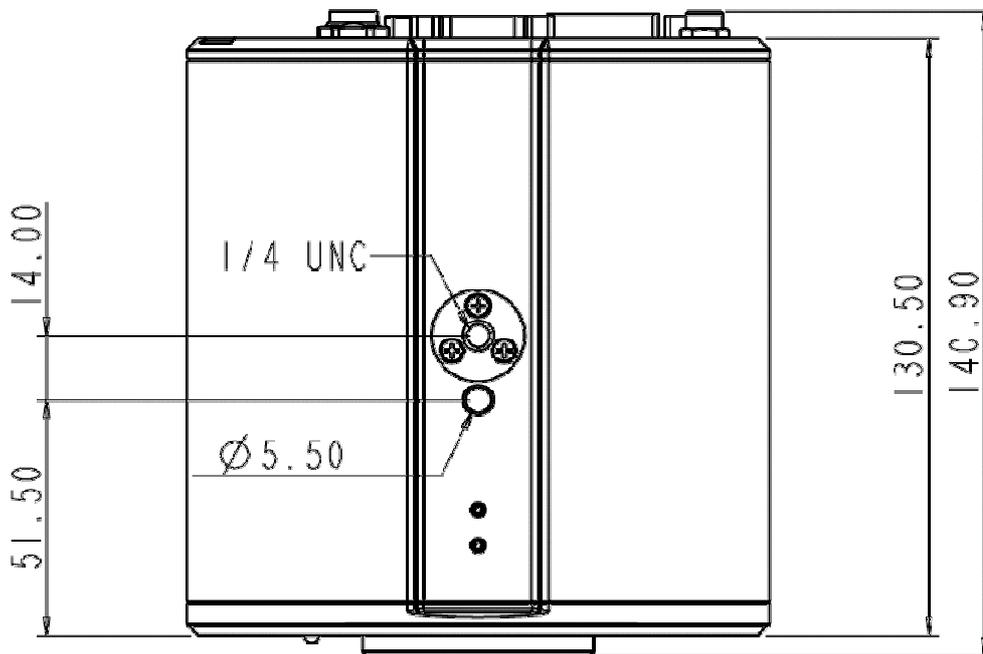



Length: 126mm
(4.96inch)
Width: 86mm
(3.39inch)
Height: 140.9mm
(5.55inch)

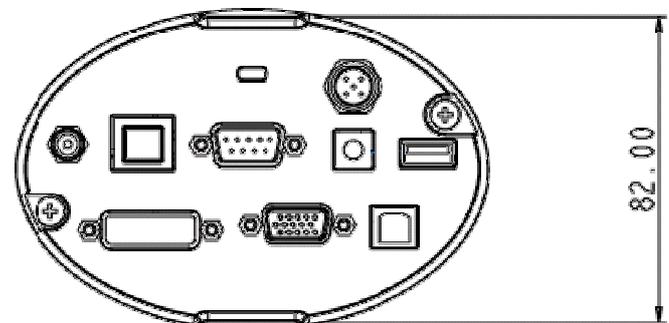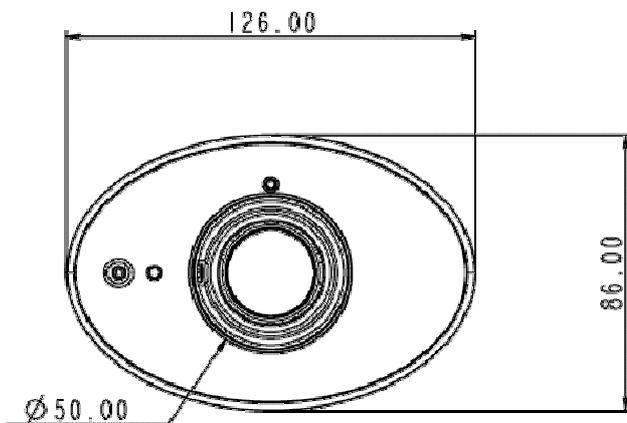


3.1.2 The size of CL510 together with U-hanger is as follows:

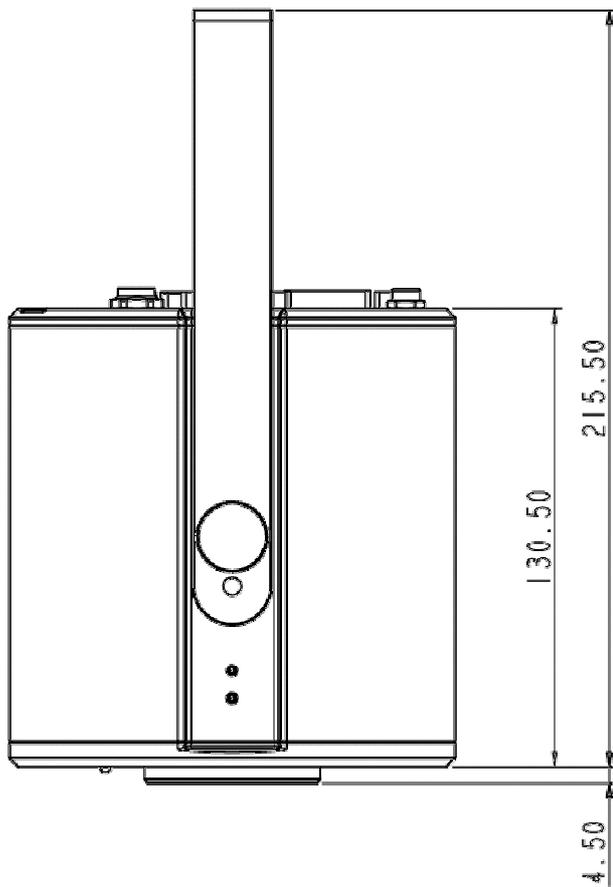

Length: 126mm (4.96inch)
Width: 86mm (3.39inch)
Height: 220mm (8.66inch)

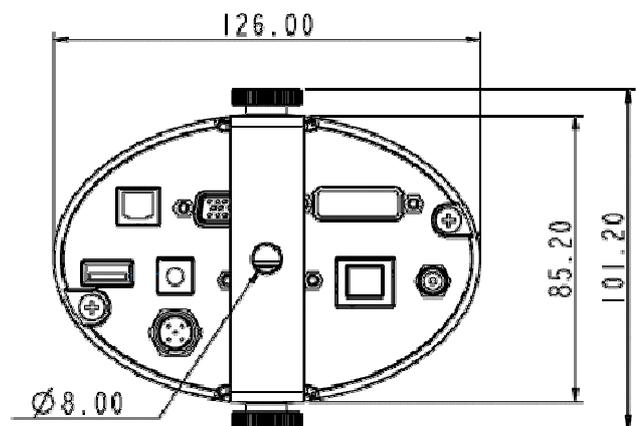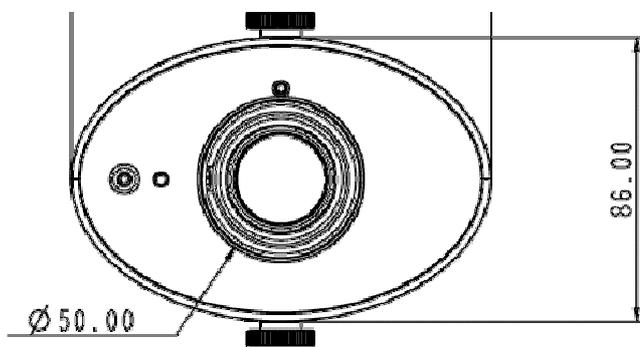

3.2 IO description

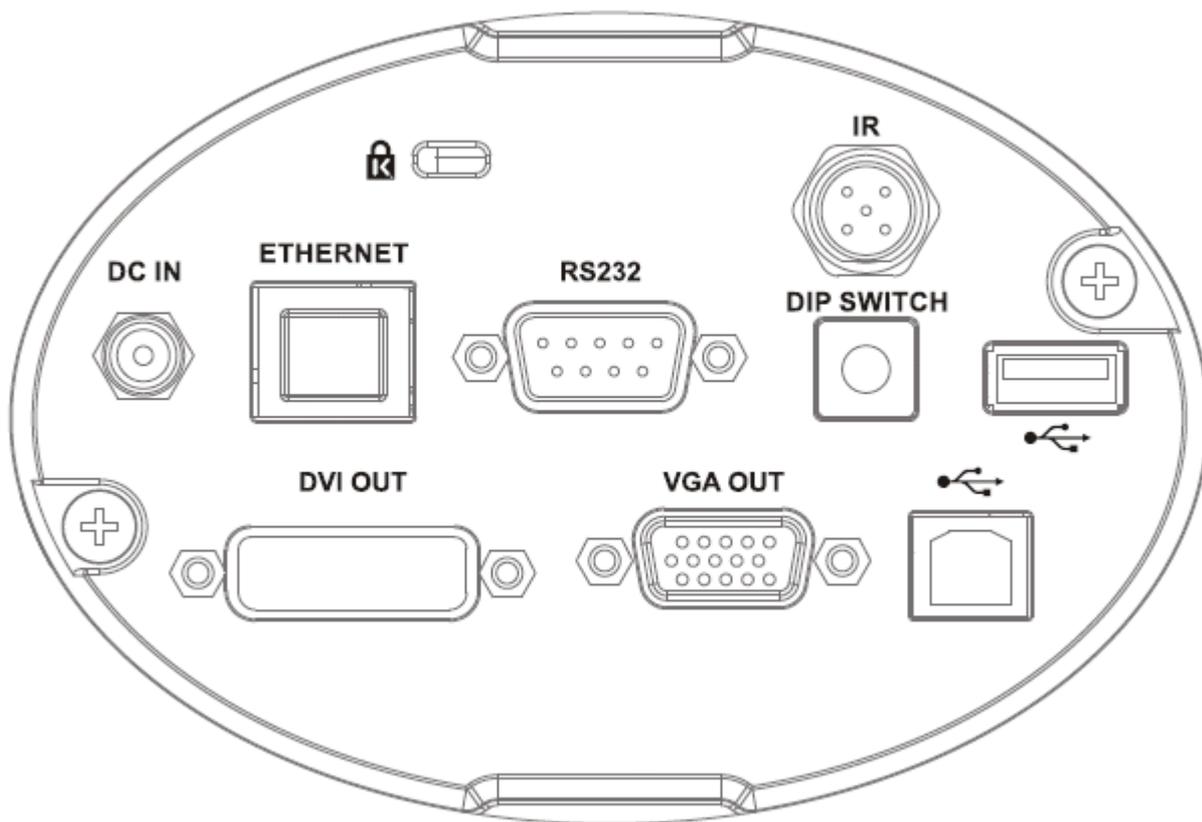



1. **DC IN:** Power input
2. **ETHERNET:** RJ-45 Network cable interface
3. **DVI OUT:** DVI Image out
4. **RS232:** RS232 Interface
5. **VGA OUT:** VGA Image out
6. **IR:** IR Interface
7. **DIP SWITCH:** DIP Switch setting
8. **USB PORT (A-type):** USB Port
9. **USB PORT (B-type):** USB Port

Chapter 4 Installation and Connections


Installation and connection of CL510 Ceiling Camera requires special skills. To install by yourself, please follow necessary steps, ensure steady and tight installation of the device, and pay attention to your safety to avoid any accident.

4.1 Preparation before installation

- 4.1.1 Ensure the safety of the installation environment. Please do not install the device on unstable ceiling or in a place where the device is in danger of falling to avoid any accident.
- 4.1.2 Please check whether accessories in the box are complete or not. Please contact the supplier for any shortage, and make sure to keep the accessories in the box intact.
- 4.1.3 Please choose a proper place for installation of CL510 in advance. Please determine an installation place according to the following requirements:
 - 4.1.3.1 Confirm the position for the object to be captured.
 - 4.1.3.2 Calculate the height required for hanging the device according to the position of the object to be captured. If it is not possible to install the device at this height, you need to change the position of the object to be captured.
- 4.1.4 Please prepare the following tools for easy installation and shorter installation time:
 - 4.1.4.1 Accessories of CL510 in the box
 - 4.1.4.2 Hanging parts (ceiling mounted hanger, screw for fixing the hanger 1/4-UNC x 4 pcs)
 - 4.1.4.3 Drilling machine, screw driver
 - 4.1.4.4 Ladder

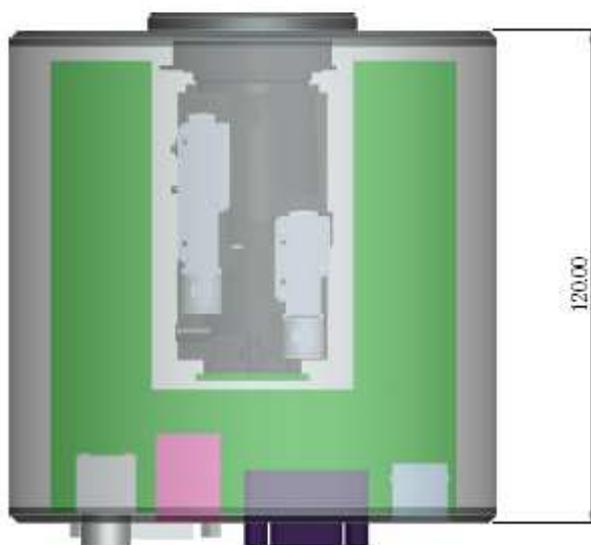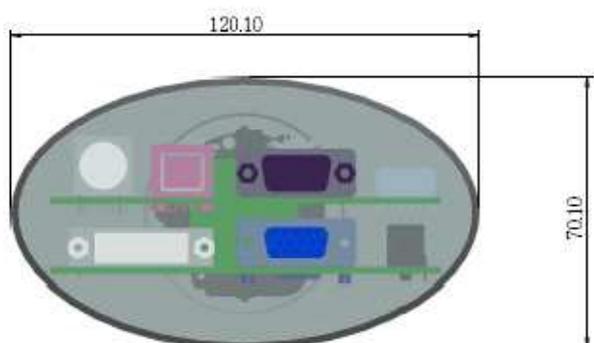


- To achieve the best effect, please ensure that the machine is set at a distance of not more than 2 meters away from the object to be captured.

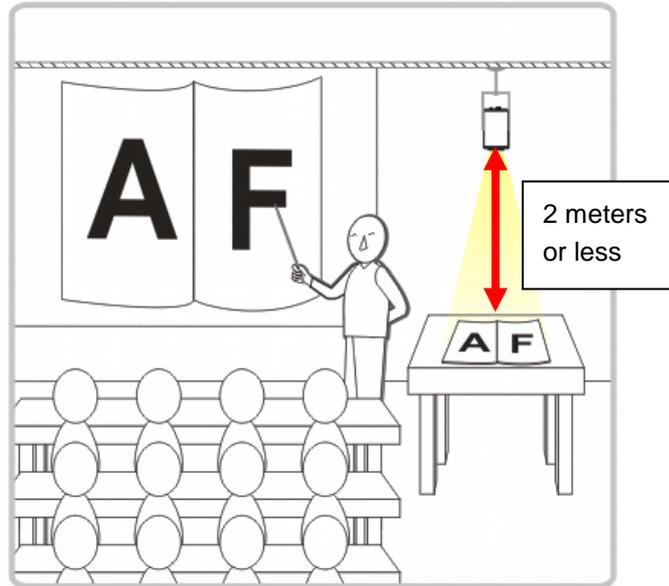

4.1.5 Schematic diagram for the size of U-hanger and preparation before installation


4.1.5.1 Schematic diagram for the size of U-hanger

The installation personnel should prepare the screw hanger in compliance with the size of the hole used for securing the U-hanger. (The screw hanger should be used with UL-Listed approval.)

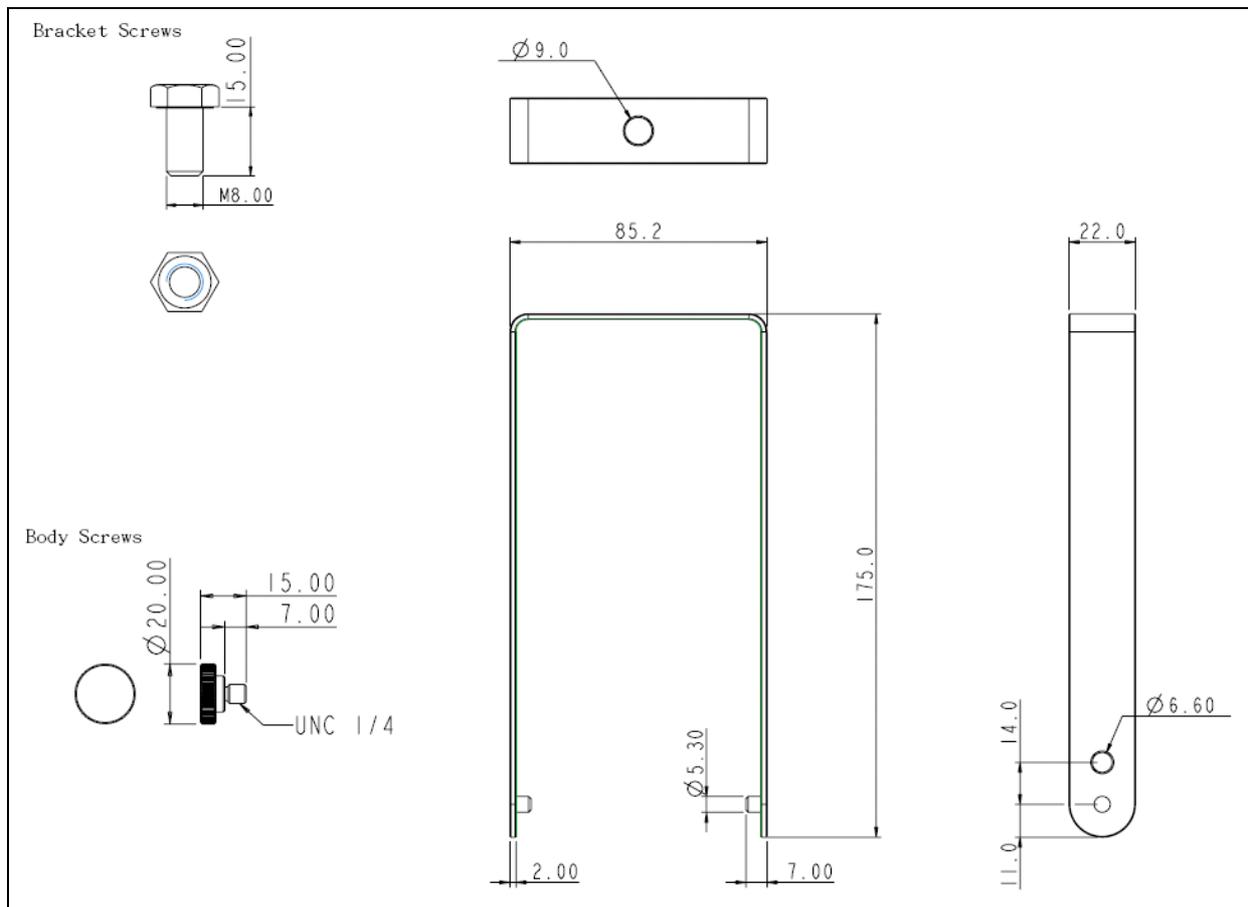


4.1.5.2 Installation steps

- Adjust the DIP SWITCH to the desired output specifications
- Assemble the U-hanger and the device using screws supplied.
- Please follow the instruction for the screw hanger to install it on the ceiling.
- Screw the device onto the screw hanger and complete the installation.

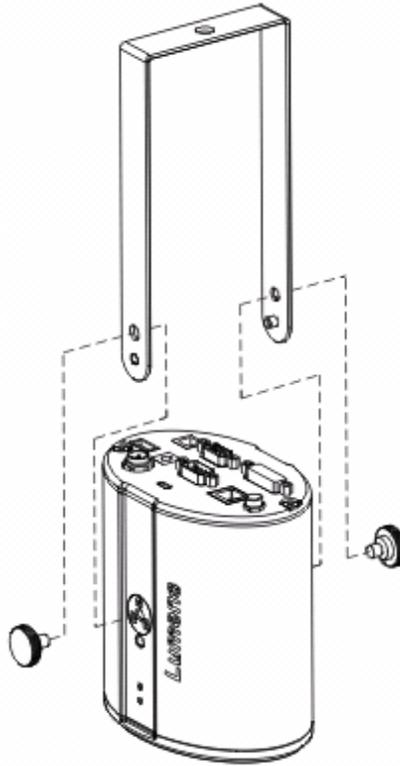


4.2 Switch setting

<Note> You should unplug and reconnect the power cord, and then restart the CL510 for all DIP switch settings to take effect.

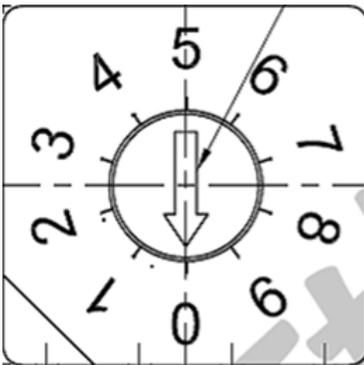

Output Mode	Position of DIP Switch
Default (XGA)	0
SXGA	1
WXGA	2
UXGA	3
1080P	4

4.3 System diagram

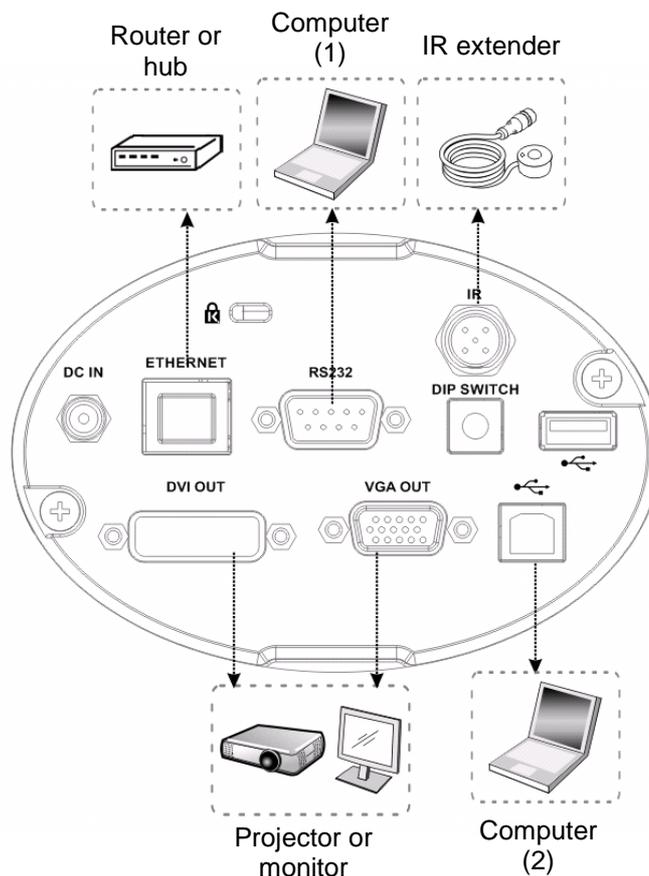


4.4 Set up the power frequency

Set the applicable power frequency depending on different regions. Please refer to [Appendix 1](#) for applicable frequency.


- 4.4.1 After using the remote control to turn on the power, press [MENU] on the **remote control** to enter the Service Menu.
- 4.4.2 Press [▶] or [◀] to the [Advanced] menu.
- 4.4.3 Press [▼] to the [Power Frequency].
- 4.4.4 Press [▶] or [◀] to adjust the frequency.
- 4.4.5 Press [MENU] to exit.

4.5 Set the position of the object to be captured (Laser mark)

- 4.5.1 Prepare a cross point screw driver.
- 4.5.2 After using the remote control to turn on the power, press [LASER] on the remote control to enable the laser mark (the red cross round box).
- 4.5.3 Press [FREEZE] -> [DEL] -> [◀] on the remote control to enable the center positioning mark (the blue round box).
- 4.5.4 Use a cross point screw driver to adjust the laser knob of the machine (the adjustment should be made at the place marked by the red box in the following figure).

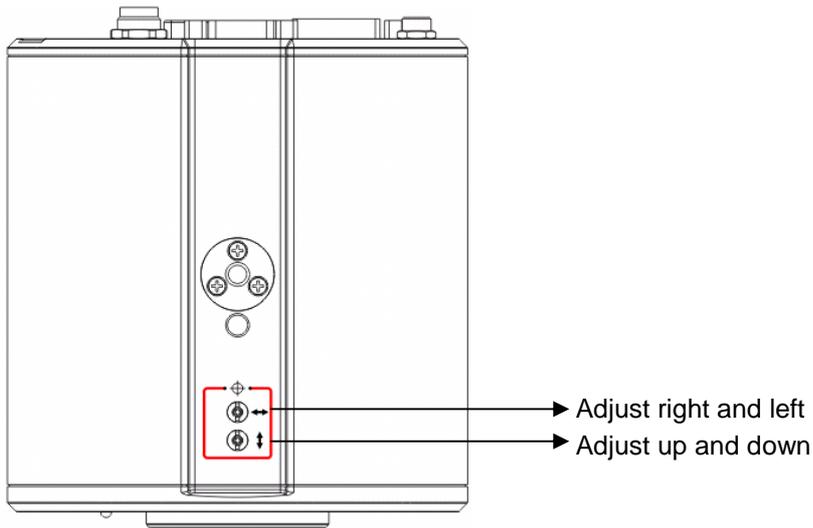

4.5.5 Adjust the cross laser mark (red box) deviated on the screen to the center point of the blue positioning mark, as shown in the following figure:

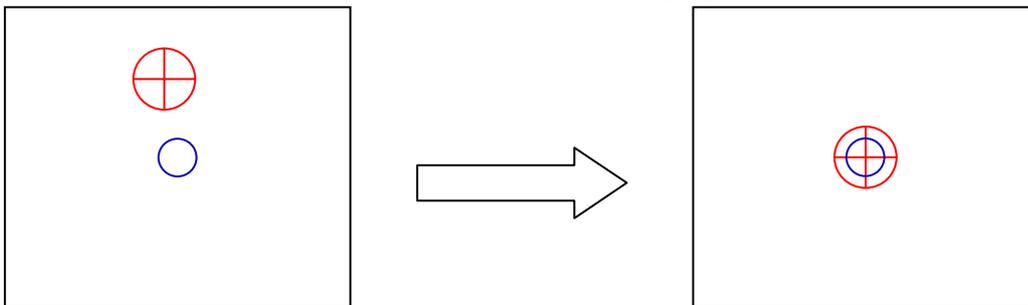


4.6 AF Table Set for auto focus setting

4.6.1 Set up AF table

This setting can speed up the AF operation.

1. Press [FREEZE] -> [DEL] -> [ENTER] on the **remote control** to enter the **Service Menu**.
2. Press [▶] or [◀] to select the [Image] menu.
3. Press [▼] to <Without Close-up Lens> -> [Focus Table], and press [Enter] to activate the **Focus Table**.
<Note> If Close-up Lens (Optional) was installed, select <With Close-up Lens> for operation.
4. Press [MENU] to select [**Adjust**], and press [Enter] to adjust.
5. Press [MENU] to select [**Save**], and press [Enter] to save.
6. Press [▶] or [◀] to select [**Yes**], and press [Enter] to save it.

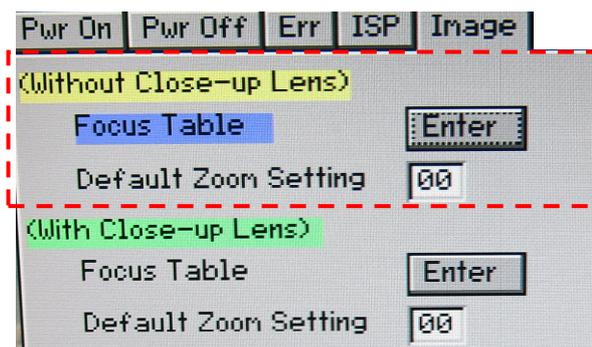

4.6.2 Set up the Default Zoom

1. Press [FREEZE] -> [DEL] -> [ENTER] on the **remote control** to enter the **Service Menu**.
2. Press [▶] or [◀] to select the [Image] menu.
3. Press [▼] to <Without Close-up Lens> -> [Default Zoom Setting].
<Note> If Close-up Lens (Optional) was installed, select <With Close-up Lens> for operation.
4. Press [▶] or [◀] to enter the type required. (The setting is subject to posterior changes made to AF Table)
5. Press [MENU] to exit the Service Menu.
6. Press [MENU] again to enter the [Advanced], and activate [Factory Reset].

Chapter 5 Troubleshooting

This chapter describes problems you may encounter while using CL510. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurred, please contact your distributor or the service center.

1. Why cannot I start the device even when I use the PoE?

ANS: Please confirm if your network communication device is supported for Power over Ethernet (PoE).

2. Does “Please set up the Focus table” appear on the screen when the device is started?

ANS: Please follow the steps of [4.6 AF Table Set for auto focus setting](#).

3. Why does out of focus still occur when **AUTO TUNE** is activated?

ANS: Please confirm if there is any fingerprint or stain on the lens. Try to refocus after cleaning the lens.

Attachment 1

World voltage & frequency

Region/Country		Frequency	Region/Country		Frequency	Region/Country		Frequency
Chinese	English		Chinese	English		Chinese	English	
阿富汗	Afghanistan	50	大陸	China	50	關島	Guam	60
阿爾及利亞	Algeria	50	哥倫比亞	Colombia	60	石榴島	Grenada	50
安哥拉	Angola	50	剛果	Congo	50	瓜地馬拉	Guatemala	60
安地瓜	Antigua	50	哥斯大黎加	Costa Rica	60	幾內亞	Guinea	50
阿根廷	Argentina	50	古巴	Cuba	60	蓋亞納	Gayana	50
澳洲	Australia	50	塞浦路斯	Cyprus	50	海地	Haiti	60
奧地利	Austria	50	捷克	Czechoslovakia	50	夏威夷	Hawaii	60
亞述爾	Azores	50	達荷美	Dahomey	50	宏都拉斯	Honduras	60
巴哈馬	Bahamas	60	丹麥	Den mark	50	香港	Hong Kong	50
巴林	Bahrain	60	多明尼加	Dominican	60	匈牙利	Hungary	50
孟加拉	Bangladesh	50	杜拜	Dubai	50	冰島	Ice land	50
巴貝多	Babados	50	厄瓜多爾	Ecuador	60	印度	India	50
比利時	Belgium	50	埃及	Egypt	50	印尼	Indonesin	50
百慕達	Bermuda	60	薩爾瓦多	El Salvador	60	伊朗	Iran	50
玻利維亞	Bolivia	50	赤道幾內亞	Equatorial Guinea	50	伊拉克	Iraq	50
波札那	Botswana	50	衣索匹亞	Ethiopia	50	愛爾蘭	Ireland	50
巴西	Brazil	50 60	法羅群島	Faeroe Island	50	曼島	Isle of Man	50
保加利亞	Bulgaria	50	斐濟	Fiji	50	以色列	Israel	50
緬甸	Burma	50	芬蘭	Finland	50	義大利	Italy	50
蒲隆地	Burundi	50	法國	France	50	象牙海岸	Ivory Coast	50
高棉	Cambodia	50	蓋亞那	French Guiana	50	牙買加	Jamaica	50
喀麥隆	Cameroon	50	加彭	Gabon	50	日本	Japan	50 60
加拿大	Canada	60	甘比亞	Gambia	50	約旦	Jordan	50
康那利群島	CanaryIsland	50	德國	Germany	50	肯亞	Kenya	50
中非共和國	Central Africa Rep.	50	迦納	Ghana	50	韓國	Korea	60
錫蘭	Ceylon	50	直布羅陀	Gibraltar	50	科威特	Kuwait	50
查德	Chad	50	大不列顛	Great Britain	50	黎巴嫩	Lebanon	50
海峽群島	Channel Island	50	希臘	Greece	50	賴索托	Lesotho	50

Region/Country		Frequency	Region/Country		Frequency	Region/Country		Frequency
Chinese	English		Chinese	English		Chinese	English	
智利	Chile	50	格陸蘭	Greenland	50	賴比瑞亞	Liberia	60
利比亞	Libya	50	阿曼	Oman	50	敘利亞	Syria	50
盧森堡	Luxembourg	50	巴基斯坦	Pakistan	50	大溪地	Tahiti	60
澳門	Macao	50	巴拿馬	Panama	60	中華民國	R.O.C. Taiwan	60
馬得拉群島	Madeiral	50	巴拉圭	Paraguay	50	坦尚尼亞	Tanzania	50
馬約卡島	Majokca Island	50	秘魯	Peru	60	泰國	Thailand	50
馬拉加西	Malagasy	50	菲律賓	Philippines	60	多哥共和國	Togo Rep.of	50
馬拉威	Malawi	50	波蘭	Poland	50	東加	Tonga	50
馬來西亞	Malaysia	50	葡萄牙	Portugal	"	千里達	Trinidad	60
馬利	Mali Rep.	50	波多黎各	Puerto Rico	60	他巴哥	Tobago	60
馬爾他	Malta	50	科托	Qatar	50	突尼西亞	Tunisia	50
馬丁尼克島	Martinique	50	羅德西亞	Rhodesia	50	土耳其	Turkey	50
茅里塔尼亞	Mauritania	50	羅馬尼亞	Romania	50	烏干達	Uganda	50
模里西斯	Mauritius	50	盧安達	Rwanda	50	美國	USA.	60
墨西哥	Mexico	60	沙烏地阿拉伯	Saudi Arabia	50 60	蘇聯	USSR	50
摩那哥	Monaco	50	蘇格蘭	Scotland	50	英國	United Kingdom	50
蒙特色納島	Montserrat	60	塞內加爾	Senegal	50	上伏塔	Upper Volta	50
摩洛哥	Morocco	50	獅子山	Sierra Leone	50	烏拉圭	Uruguay	50
莫桑鼻克	Mozambique	50	新加坡	Singapore	50	委內瑞拉	Venezuela	60
尼泊爾	Nepal	50	索馬利亞	Somalia	50	越南	Viet-Nam	50
荷蘭	Netherlands	50	南非共和國	South Africa Rep.	50	維爾京群島	Virgin Island	60
新蘇格蘭	New Caledonia	50	西班牙	Spain	50	西薩摩亞	Western Samoa	50
紐西蘭	New Zealand	50	斯里蘭卡	Sri Lanka	50	葉門亞丁	Yeman (Aden)	50
尼加拉瓜	Nicaragua	60	蘇丹	Sudan	50	葉門阿拉伯	Yemen (Arab)	50
尼日	Niger	50	蘇利南	Surinam	60	南斯拉夫	Yugoslavia	50
奈及利亞	Nigeria	50	史瓦濟蘭	Swaziland	50	薩伊共和國	Zaire Rep. of	50
挪威	Norway	50	瑞典	Sweden	50	尚比亞	Zambia	50
琉球	Okinawa	60	瑞士	Switzerland	50			