

CL511

Firmware(FW) Update Manual


1 Device and Tool Preparation

1.1 Please prepare following devices and tools before FW upgrade.


CL511	PC or Laptop	Monitor
	 or 	
Power adapter and power cord	Ethernet cable	HDMI Cable
		

2 Connections

2.1 Connecting via switch or router.

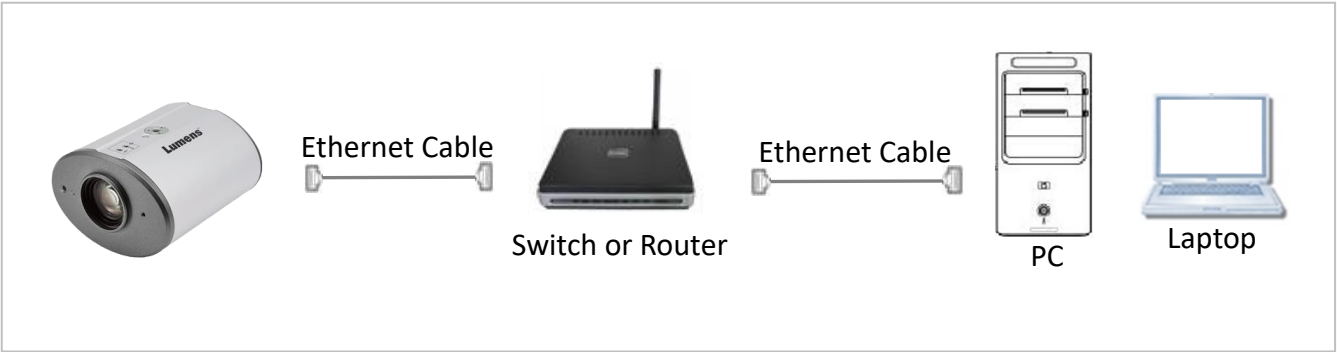


2.2 Connecting monitor.

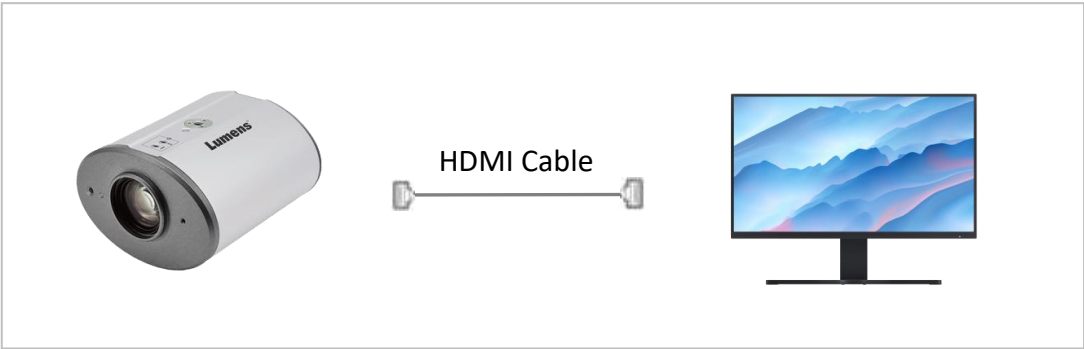

3 FW Download

3.1 Open browser and enter the IP address of the camera in the address bar.

You can check the IP address from [Menu]> [Settings]> [Control]> [IP Address].

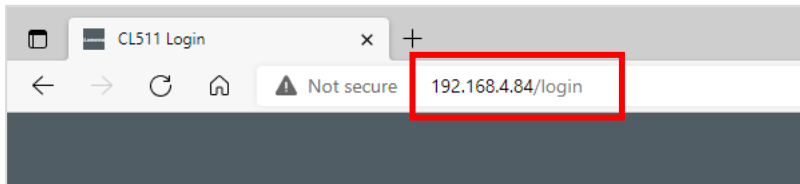


3.2 Enter the account and password to log in webpage.

Account: admin


Password: 9999(Default)



3.3 Select [Maintenance]> [File Select] to select firmware file and press [Upgrade].

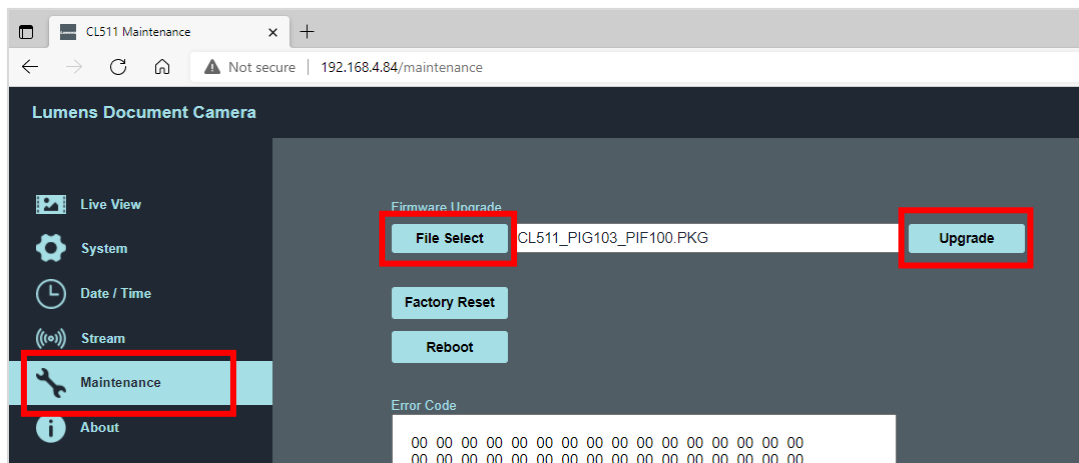


3.4 FW uploading starts, please don't close the page. (Around 1 minute taken)

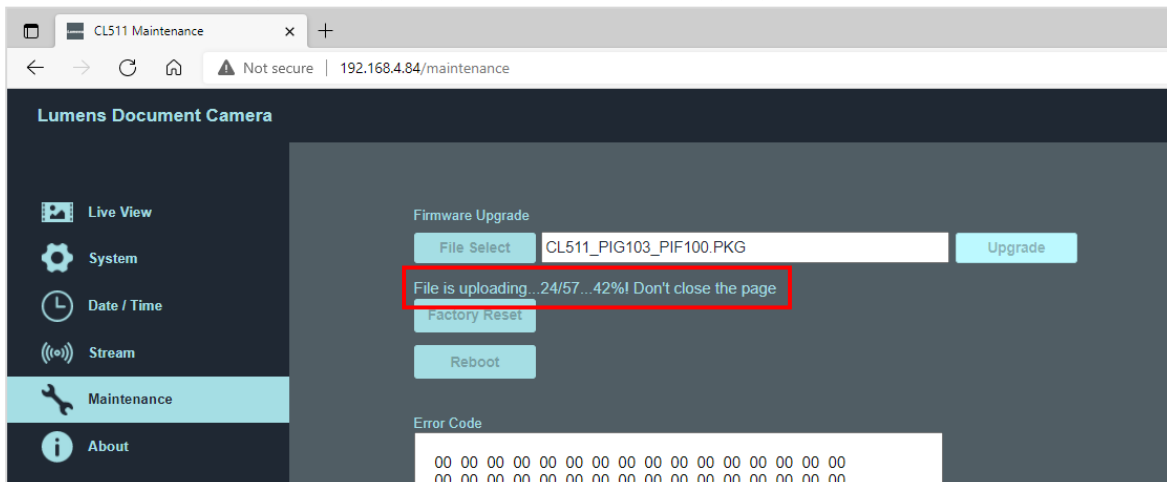

3.5 FW upgrade is progress and please follow HDMI OSD message.

When finished, the camera will reboot.

- Wait for around 30-60 seconds if without connecting HDMI cable.

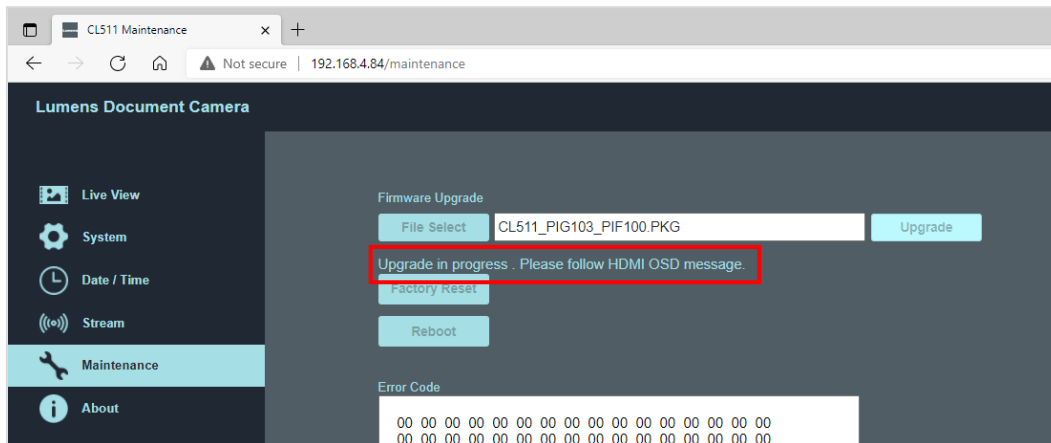

3.6 Login webpage again and check the FW version from [About]> [Firmware Version]

