

# VC-TR40\_VC-TR40N






## Firmware(FW) Update Manual

### READ ME FIRST – Firmware Update Notice

- If your VC-TR40 is running firmware VXA103 or earlier, please update to the transition version VXA103b first. Without this transition firmware, the device cannot be upgraded to the latest versions.
- VXA103b Download Link: [VXA103b](#)
- Upgrade Guide:
  - (X) VXA103 -> VYW105 or later version (Not compatible)
  - (O) VXA103 -> VXA103b -> VYW105 (Compatible)
  - (O) VXA105 -> VXA107 or later versions (Compatible)
  - (O) VXA105 -> VXA202 or later versions (Compatible)


### 1 Device and Tool Preparation

1.1 Please prepare following devices and tools before FW upgrade.

VC-TR40	PC or Laptop
	 or 
Power adapter and power cord	Ethernet cable
	


## 2 Connections

### 2.1 Connecting via switch or router.

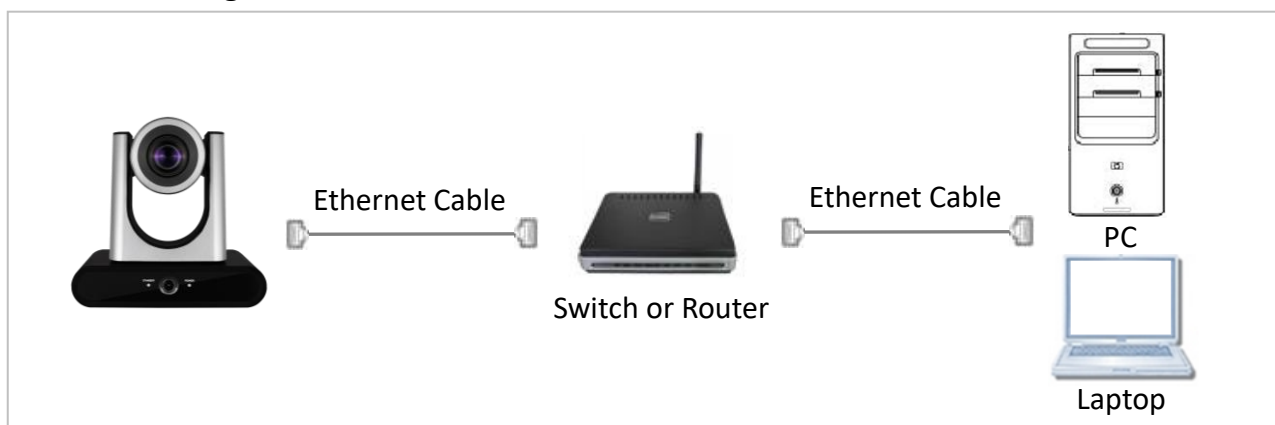


## 3 FW Download


- 3.1 Open browser and enter the IP address of the camera in the address bar.  
You can check the IP address from [Status]> [Ethernet] in the menu.

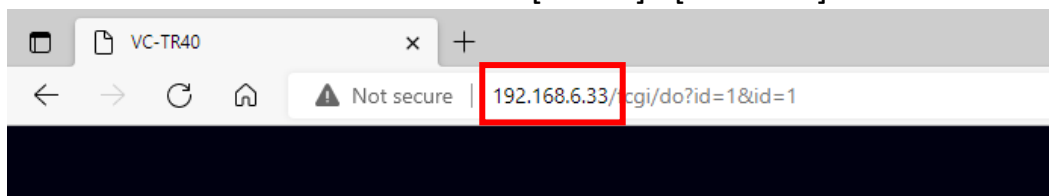


- 3.2 Enter the account and password to log in webpage.  
Account: admin  
Password: 9999(Default)

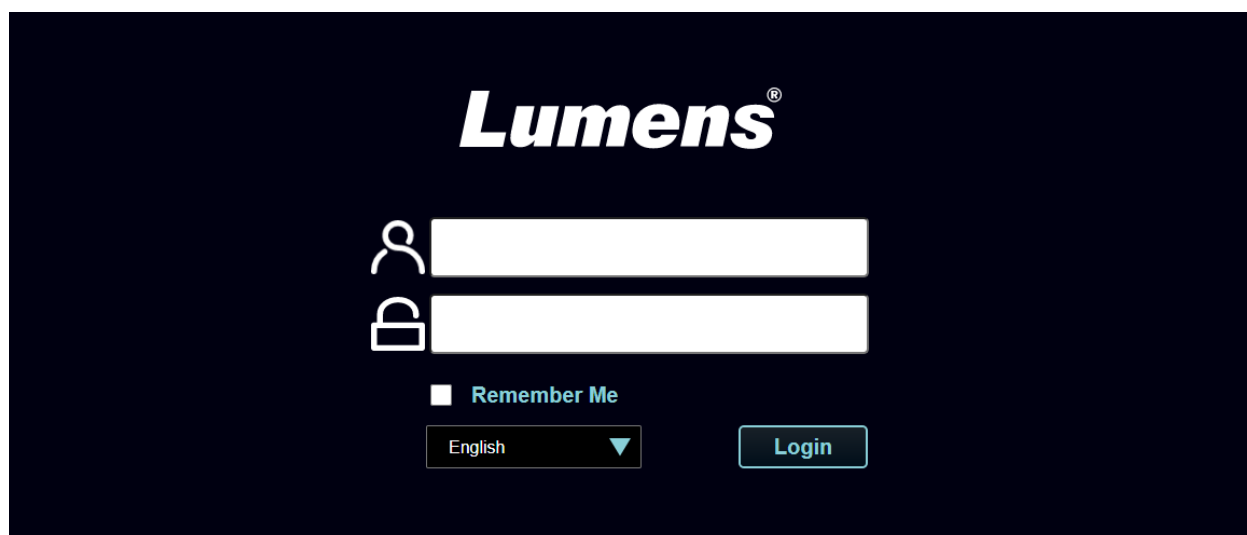

3.3 Select [Maintenance]> [...] to select firmware file and press [Upgrade].

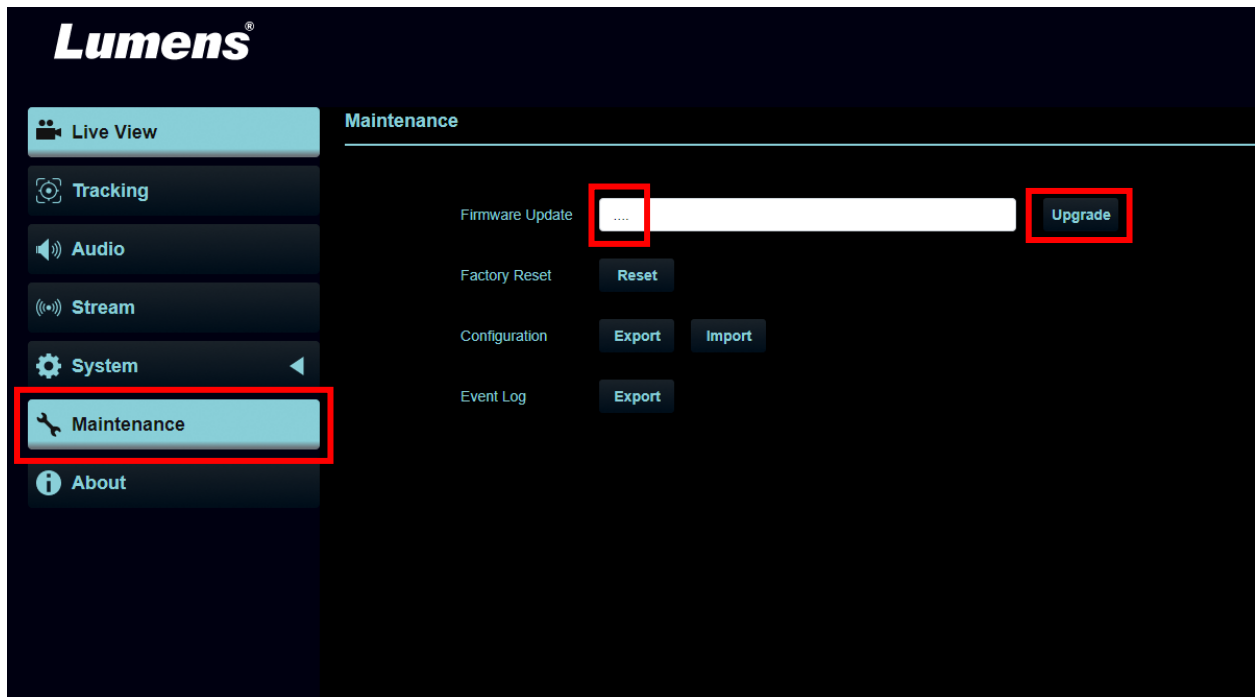

3.4 FW download starts, please don't close the page. (Around 2-3 minutes taken)

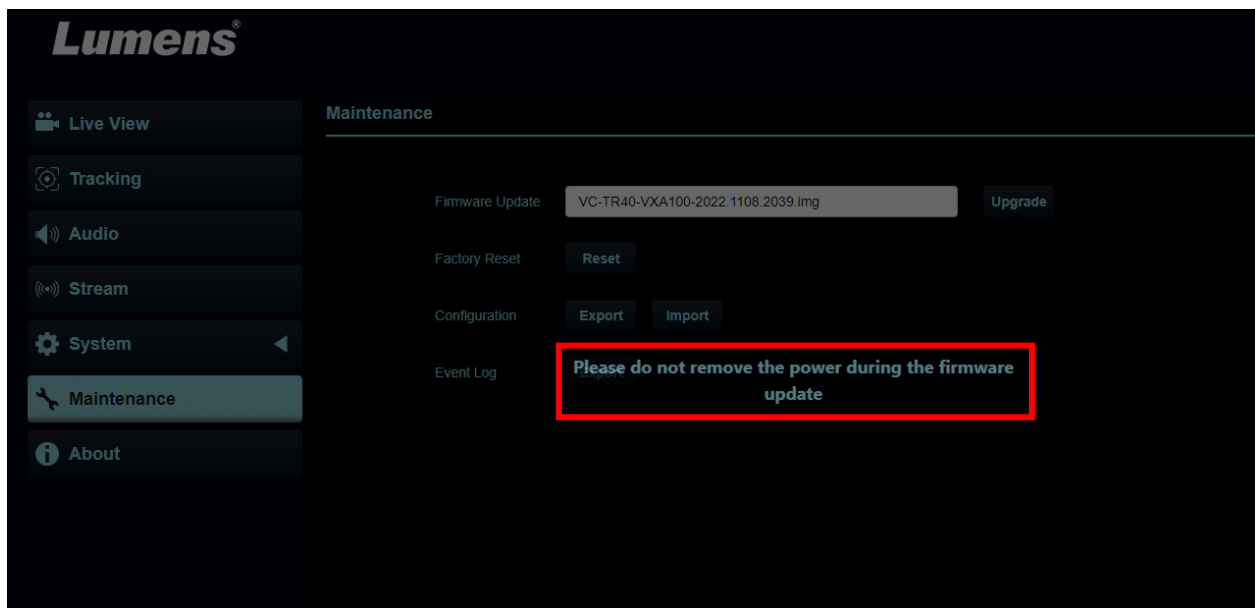

3.5 Login webpage again and check the FW version from [About]> [Firmware Version].

