


OIP-N40E_OIP-N60C_OIP-N60D_ OIP-N60D-ND_OIP-N60D Dante AV-H Firmware(FW) Upgrade Instruction

Read me first!!

After performing a Factory Reset, all previously configured parameters will be restored to their default settings.

Therefore, please make sure to export the Profile before performing the Factory Reset. After the factory reset is completed, import the Profile to restore the original settings.

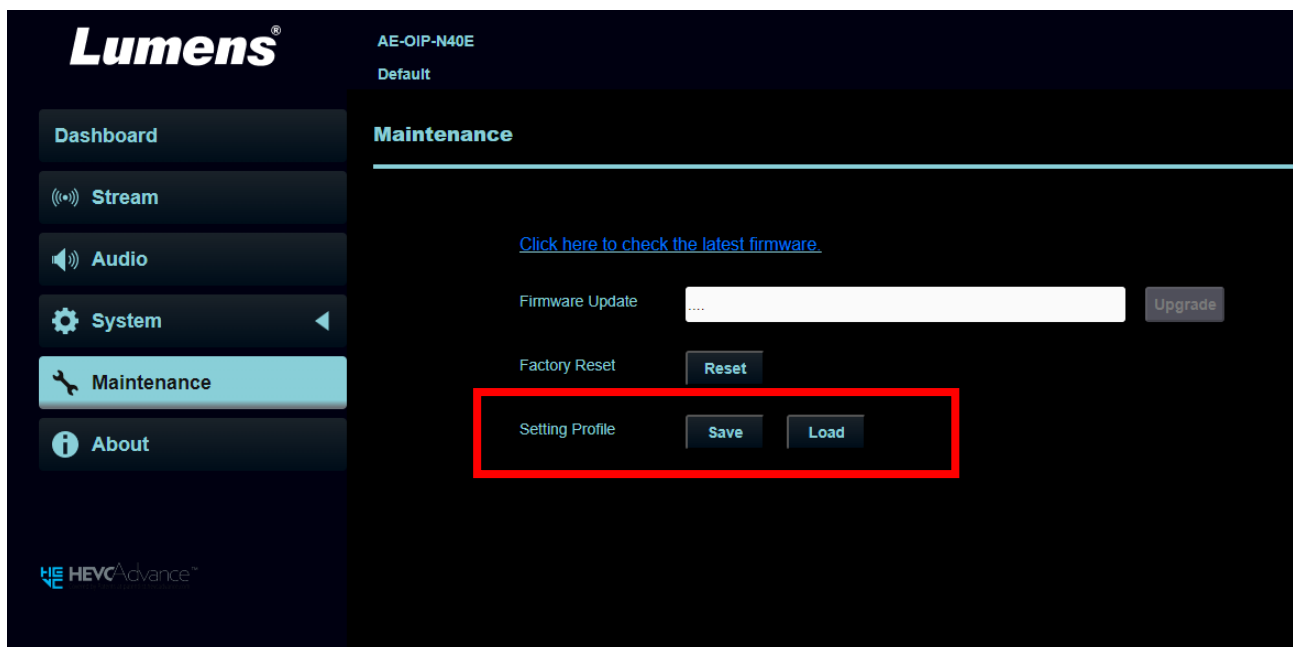


1 Tools

OIP Devices	Computer	Ethernet Cable	PoE Switch and Router
			


2 Connections for FW upgrade

2.1 Connecting OIP-N40E / OIP-N60D / OIP-N60D-ND / OIP-N60D Dante AV-H via switch or router.

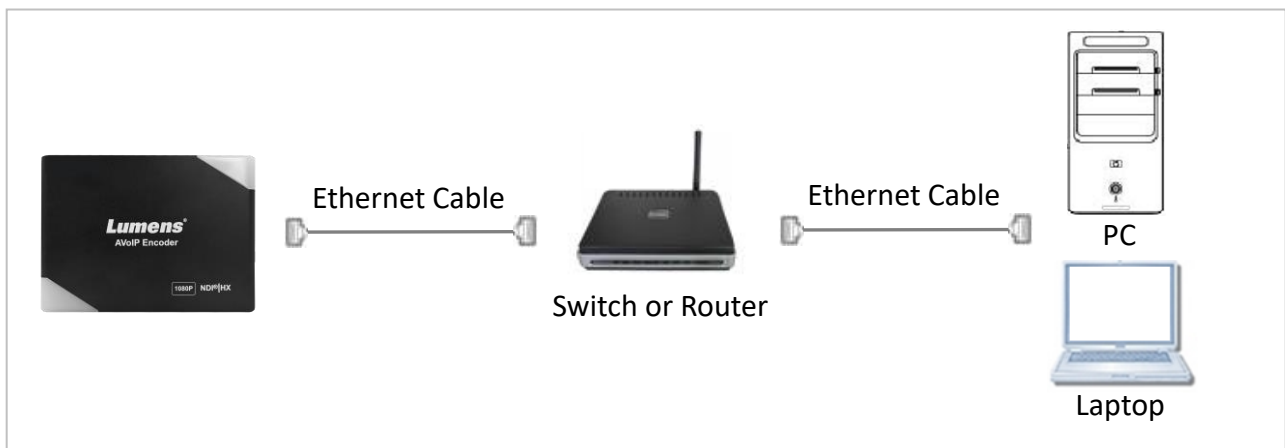

3 FW upgrade

3.1 Open browser and enter the IP address of the camera in the address bar. You can check the IP address from [Status]> [Ethernet] in the menu.

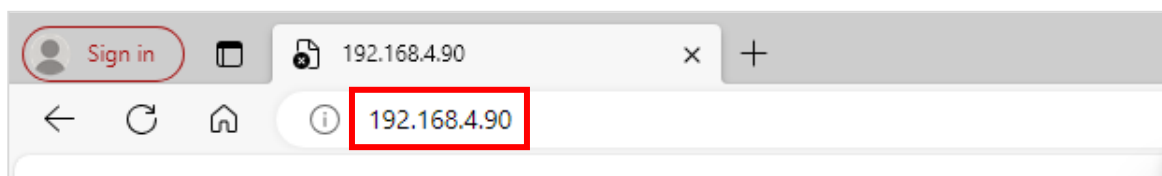

3.2 Enter the username and password to log in webpage.

Username: admin

Password: 9999(Default)

Sign in to access this site
Authorization required by <http://192.168.4.90>
Your connection to this site is not secure


Username

Password


Sign in

Cancel

3.3 Select [Maintenance]> [...] to select firmware file and press [Upgrade].

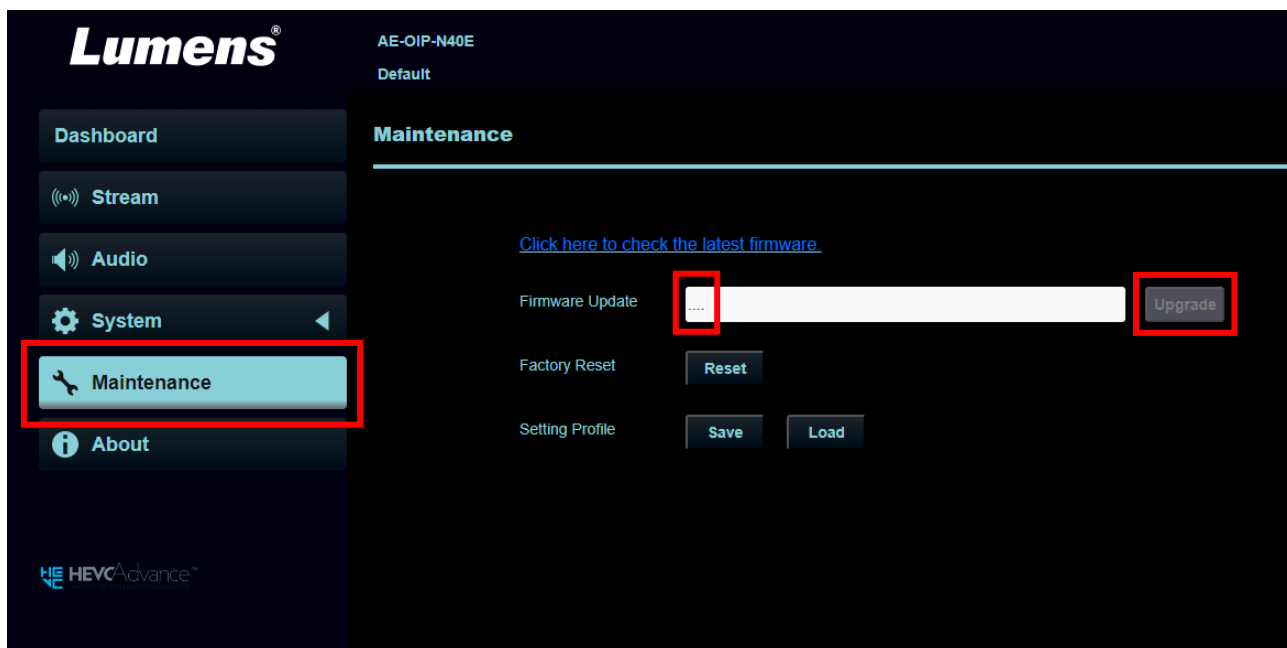

3.4 FW download starts, please don't close the page. (Around 2-3 minutes taken)

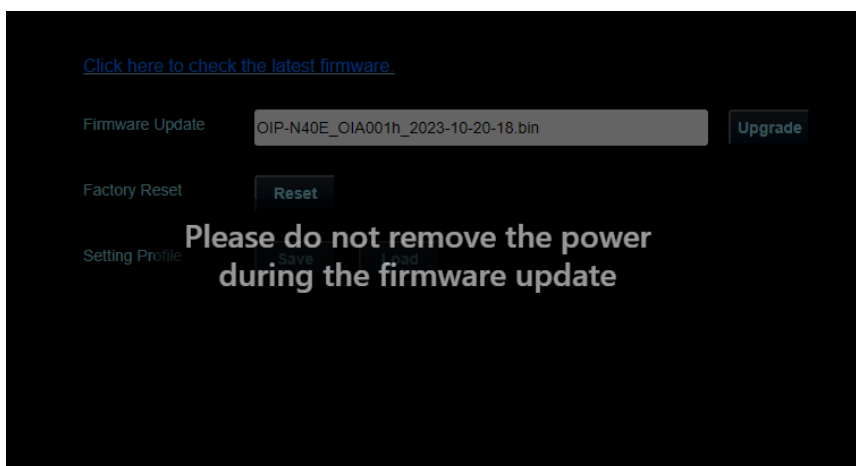

3.5 Login webpage again and check the FW version from [About]> [Firmware Version].

