


# OIP-N40E\_OIP-N60D\_OIP-N60D Dante AV-H Firmware(FW) Upgrade Instruction

## 1 Tools

OIP Devices	Computer	Ethernet Cable	PoE Switch and Router
			

## 2 Connections for FW upgrade

2.1 Connecting OIP-N40E / OIP-N60D / OIP-N60D Dante AV-H via switch or router.

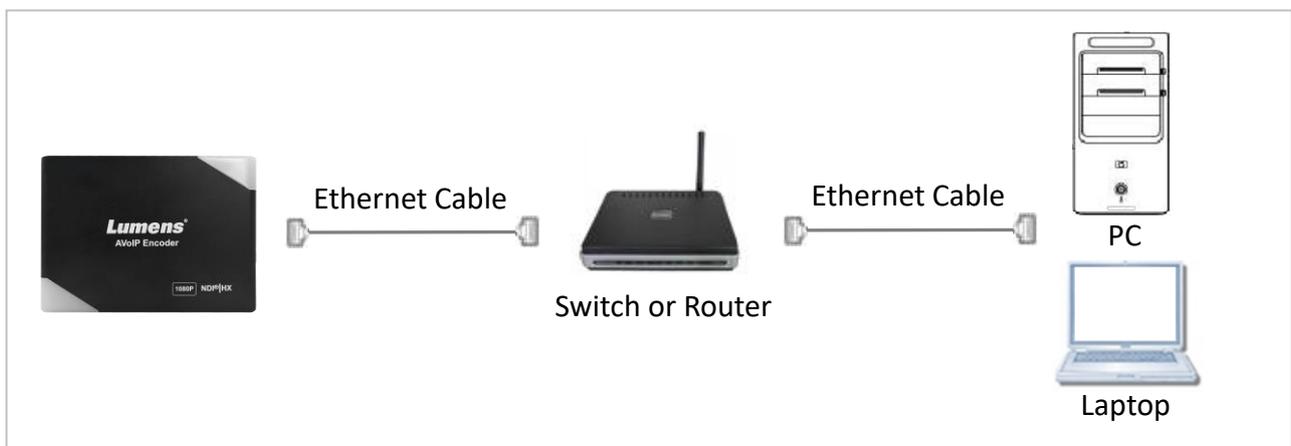

## 3 FW upgrade

3.1 Open browser and enter the IP address of the camera in the address bar. You can check the IP address from [Status]> [Ethernet] in the menu.



3.2 Enter the username and password to log in webpage.

Username: admin

Password: 9999(Default)


**Sign in to access this site**

Authorization required by http://192.168.4.90  
Your connection to this site is not secure


Username

Password

3.3 Select [Maintenance]> [...] to select firmware file and press [Upgrade].

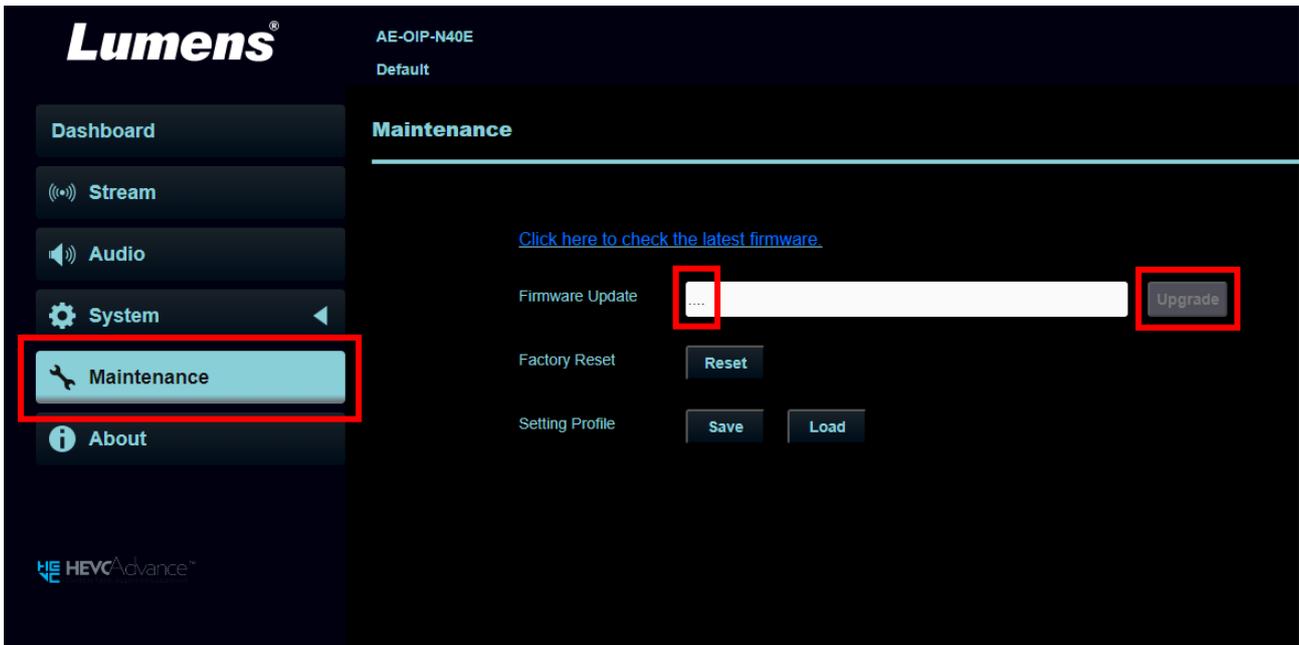

3.4 FW download starts, please don't close the page. (Around 2-3 minutes taken)

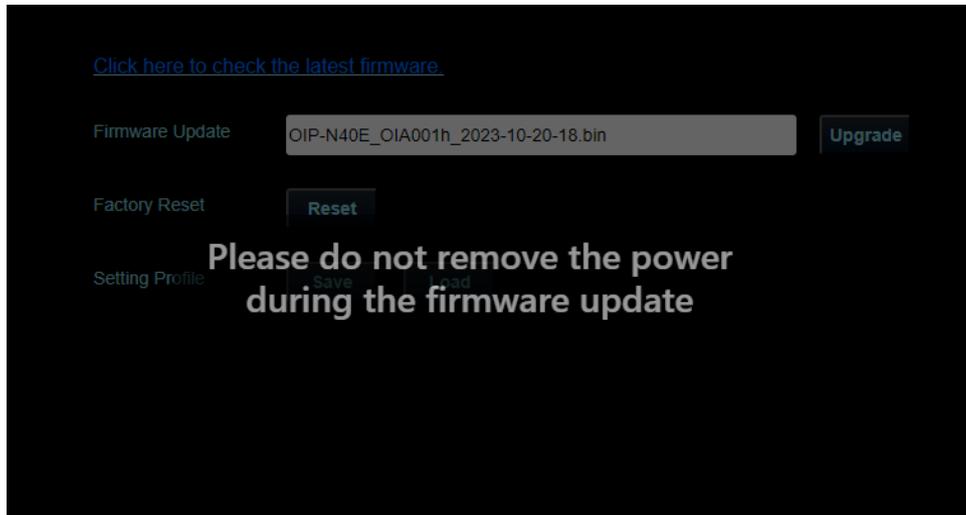

3.5 Login webpage again and check the FW version from [About]> [Firmware Version].

