

LC300_LC300S Firmware(FW) Upgrade Instruction

1 Device and Tool Preparation


1.1 Please prepare following devices and tools before FW upgrade.

LC300_LC300S	PC or Laptop
	 or
Power adapter and power cord	Ethernet cable
	

2 Connections


2.1 Connecting via switch or router to LC300_LC300S.

2.1.1 Please ensure the [Ethernet]> [DHCP] in the menu is ON.

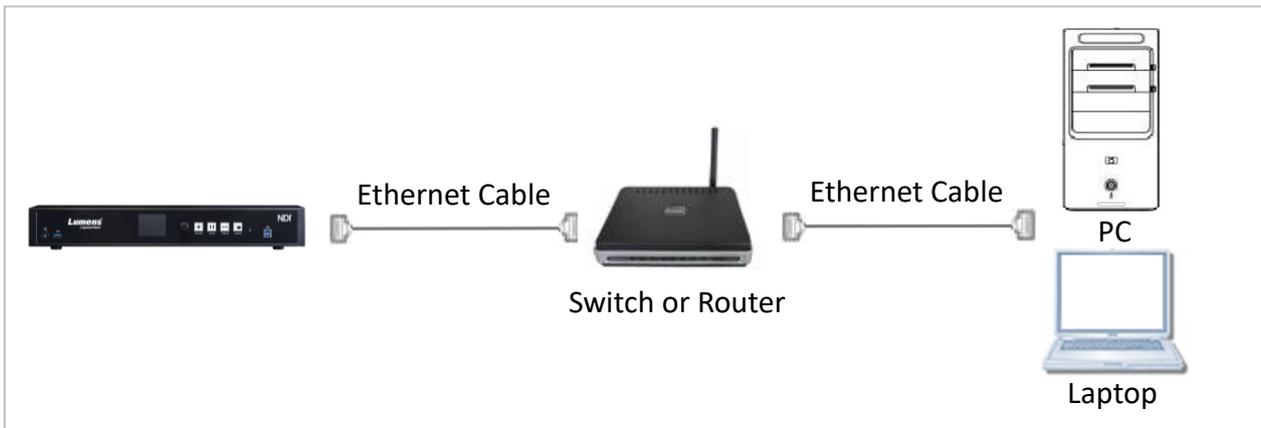

3 FW Download


- 3.1 Open browser and enter the IP address of the camera in the address bar.
You can check the IP address from [Status]> [Ethernet] in the menu.

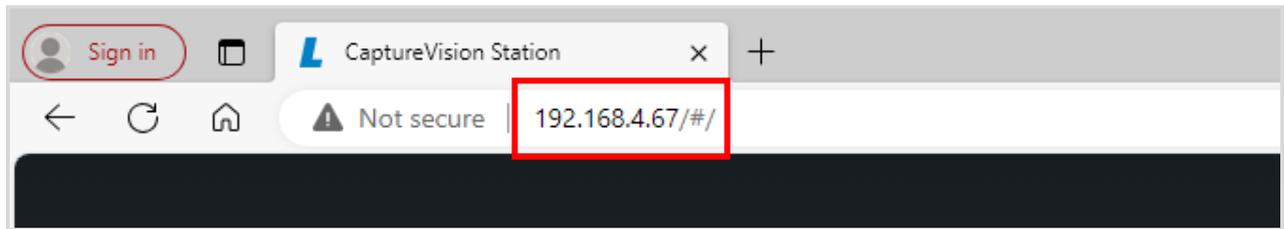

- 3.2 Enter the account and password to log in webpage.
Account: admin
Password: admin (Default)



- 3.3 Select [Service]> [Update] to select firmware file and press [Apply].

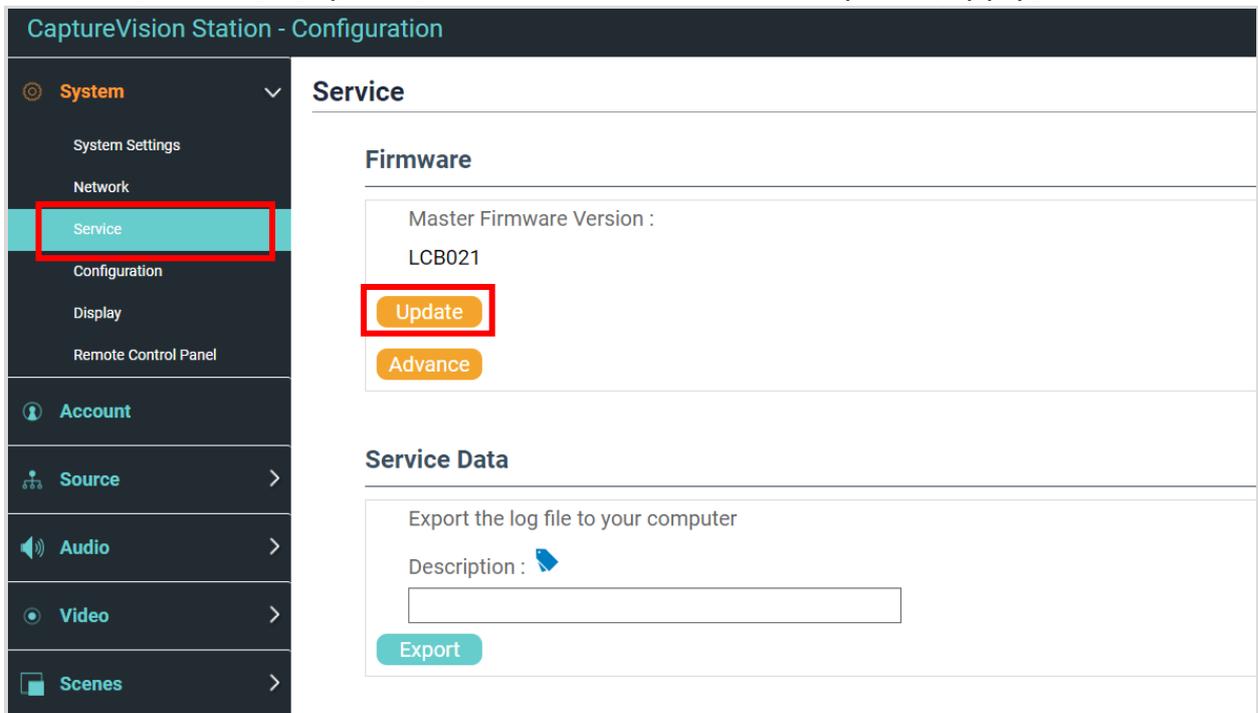

Firmware

Master Firmware Version :
LCB021

File Name :
LC300_Master_Web_LCB02... ✖ Cancel

Advance Apply

Change Settings ✖

 Do not close the webpage during update! System will reboot after updating, continue?

Confirm Cancel

3.4 FW download starts. (Around 3 minutes taken)

Firmware

Master Firmware Version :
LCB021

File Name :
LC300_Master_Web_LCB02... ✖ Cancel

Advance 


Service Data

Export the log file to your computer


Description : 

Export

3.5 Please Login and go [Service]> [Reset] and do the [Factory Reset] to ensure the procedure is completed.

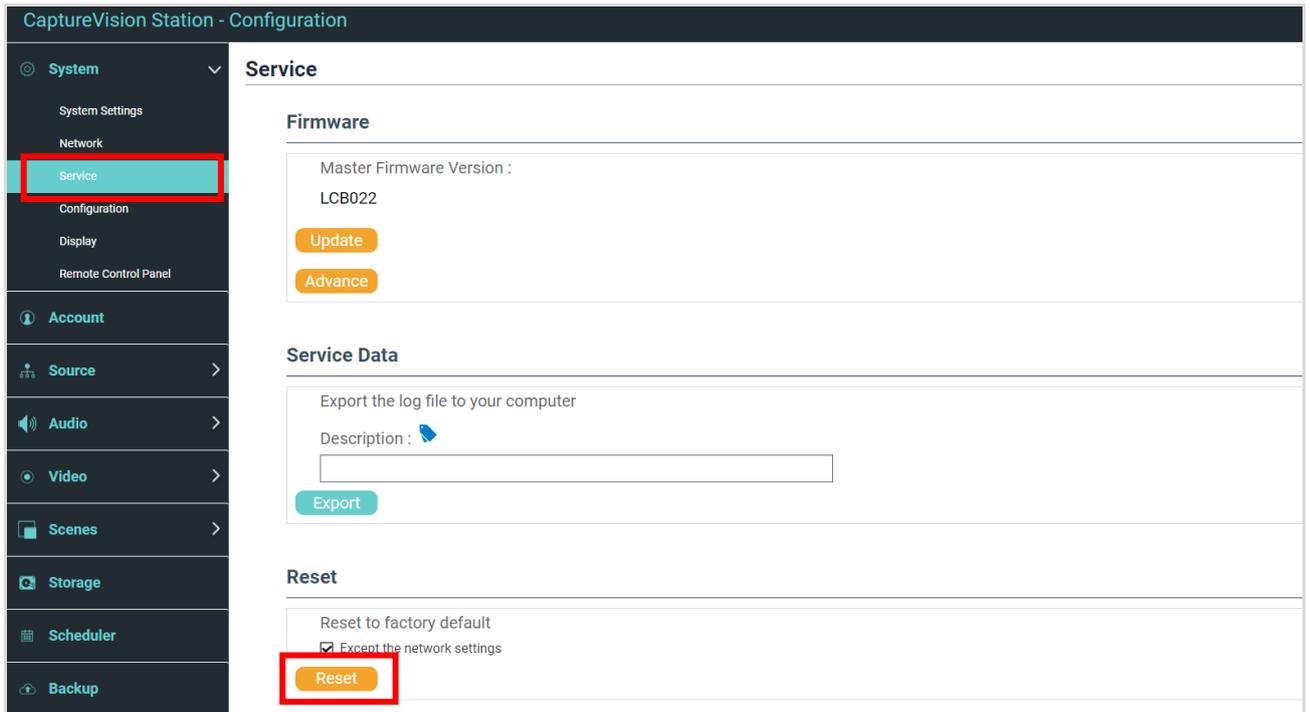

3.6 Click [Confirm] and the unit will do the factory reset.

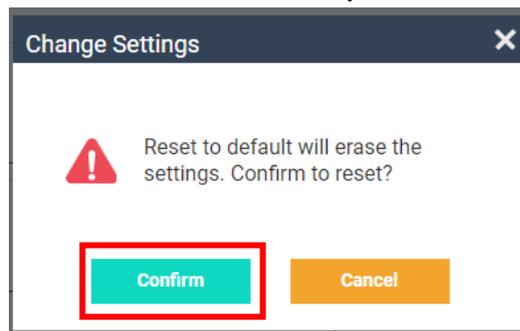

3.7 Login webpage again and check the FW version from [Service]> [Firmware]

