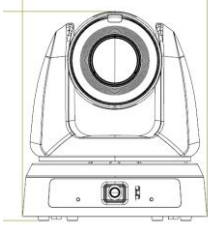 


VC-TR61_VC-TR61N

Firmware(FW) Update Manual


1 Device and Tool Preparation

1.1 Please prepare following devices and tools before FW upgrade.

VC-TR61_VC-TR61N	PC or Laptop
	 or
Power adapter and power cord	Ethernet cable
	

2 Connections

 2.1 Connecting via switch or router.

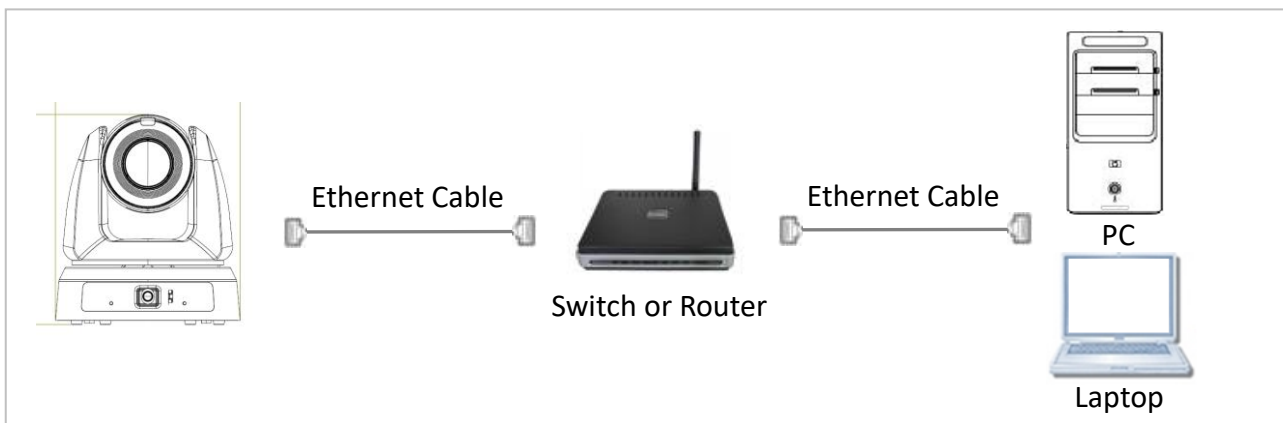

3 FW Update Instructions

3.1 Since VYW104 and the later versions include Dante's data structure, they **are not** compatible with the first version - VYW100.

Please upgrade to the transition version - **MED004** before upgrading from VYW100 / VYW101 to the latest version.

 
(X) VYW100 / VYW101 -> VYW104 (Not compatible)

(O) VYW100 -> **MED004** -> VYW104 or later versions (The correct upgrade path)


(O) VYW104 -> VYW105 (Direct upgrade possible)

4 FW Download


- 4.1 Open browser and enter the IP address of the camera in the address bar.
You can check the IP address from [Status]> [Ethernet] in the menu.

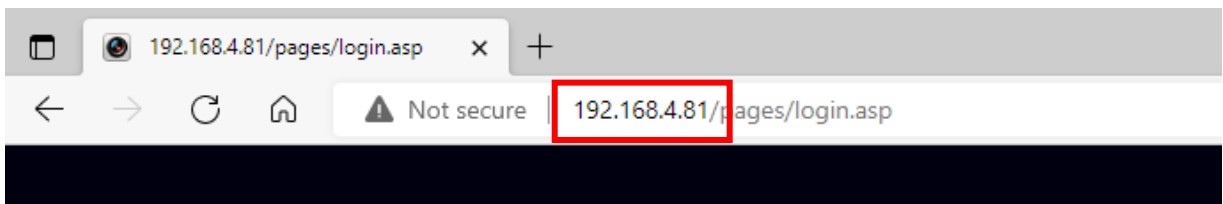


 
- 4.2 Enter the account and password to log in webpage.
Account: admin
Password: 9999(Default)

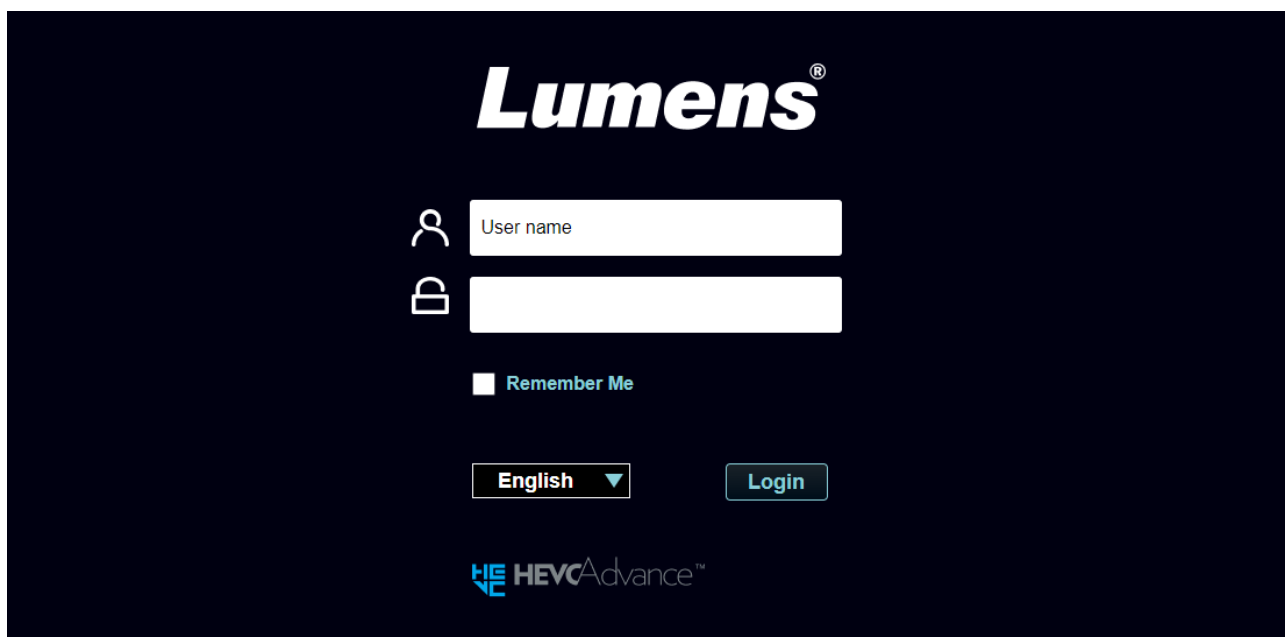


 - 4.3 Select [Maintenance]> [...] to select firmware file and press [Upgrade].

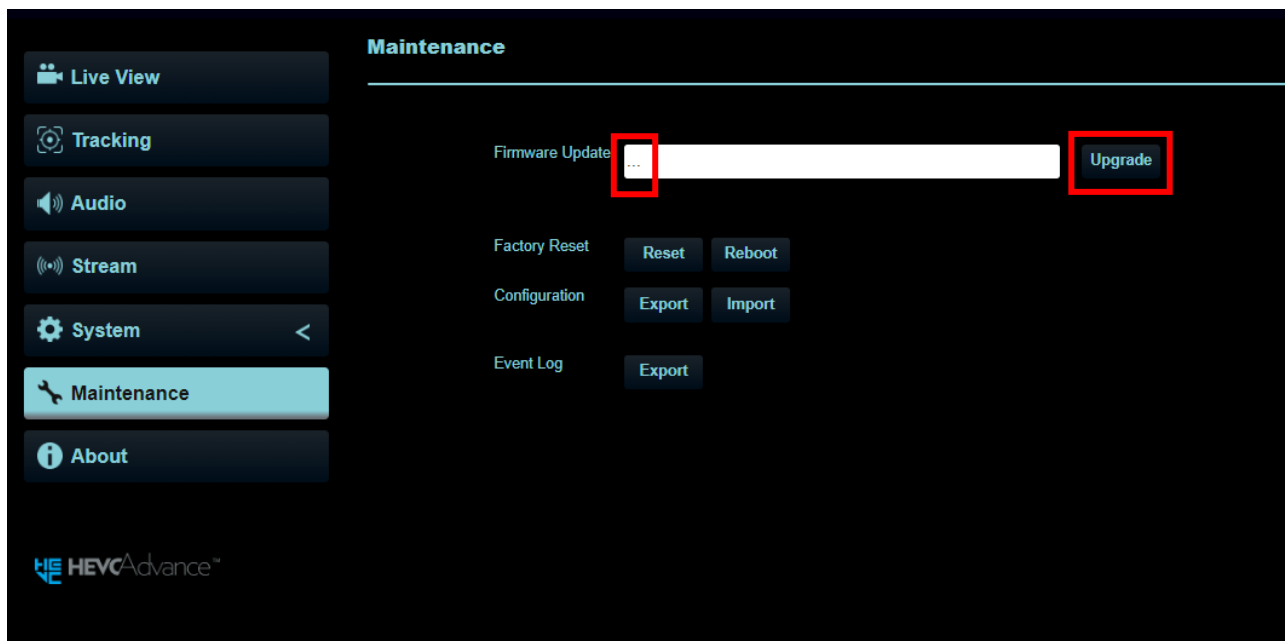

   4.4 FW download starts, please don't close the page. (Around 2-3 minutes taken)

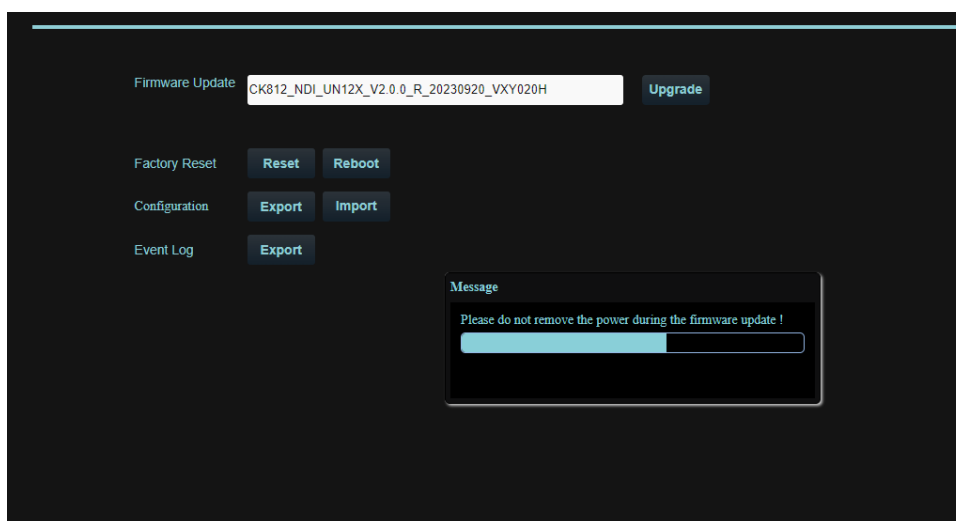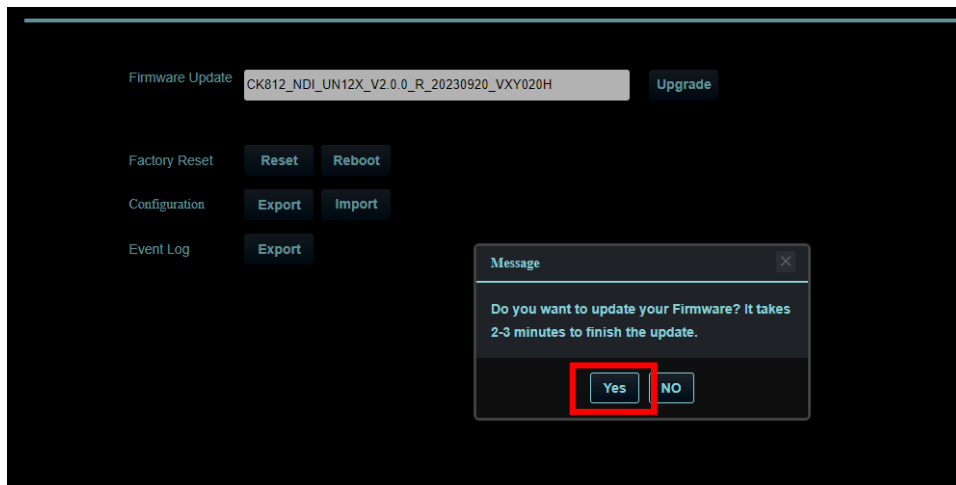

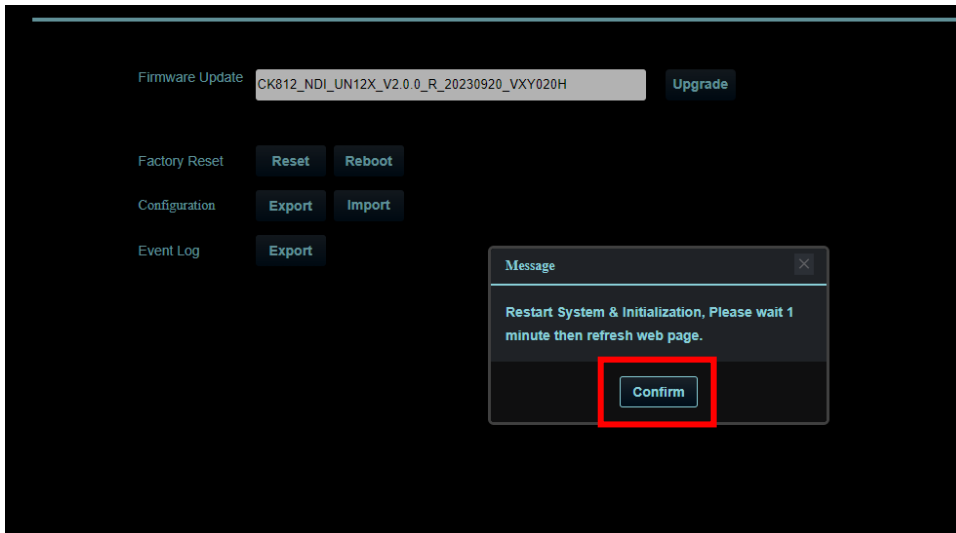

4.5 Login webpage again and check the FW version from [About]> [Firmware Version].

