






VC-TR41_TR41N Firmware(FW) Update Manual


1 Device and Tool Preparation

1.1 Please prepare following devices and tools before FW upgrade.

VC-TR41	PC or Laptop
	 or 
Power adapter and power cord	Ethernet cable
	

2 Connections

2.1 Connecting via switch or router.

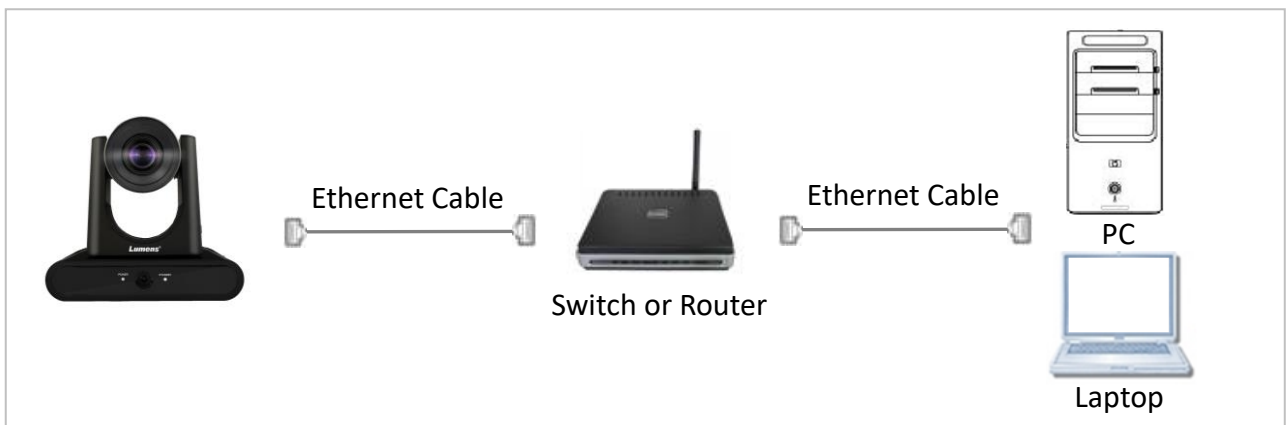


3 FW Download

3.1 Open browser and enter the IP address of the camera in the address bar. You can check the IP address from [Status]> [Ethernet] in the menu.



3.2 Enter the account and password to log in webpage.

Account: admin
Password: 9999(Default)

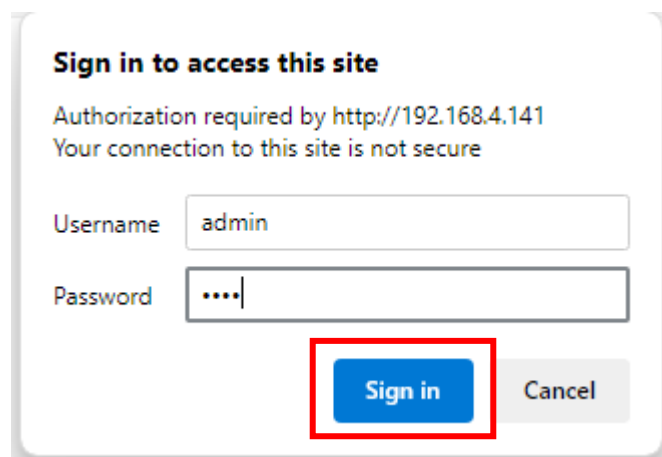


Sign in to access this site

Authorization required by http://192.168.4.141
Your connection to this site is not secure



Username

Password

3.3 Select [Maintenance]> [...] to select firmware file and press [Upgrade].

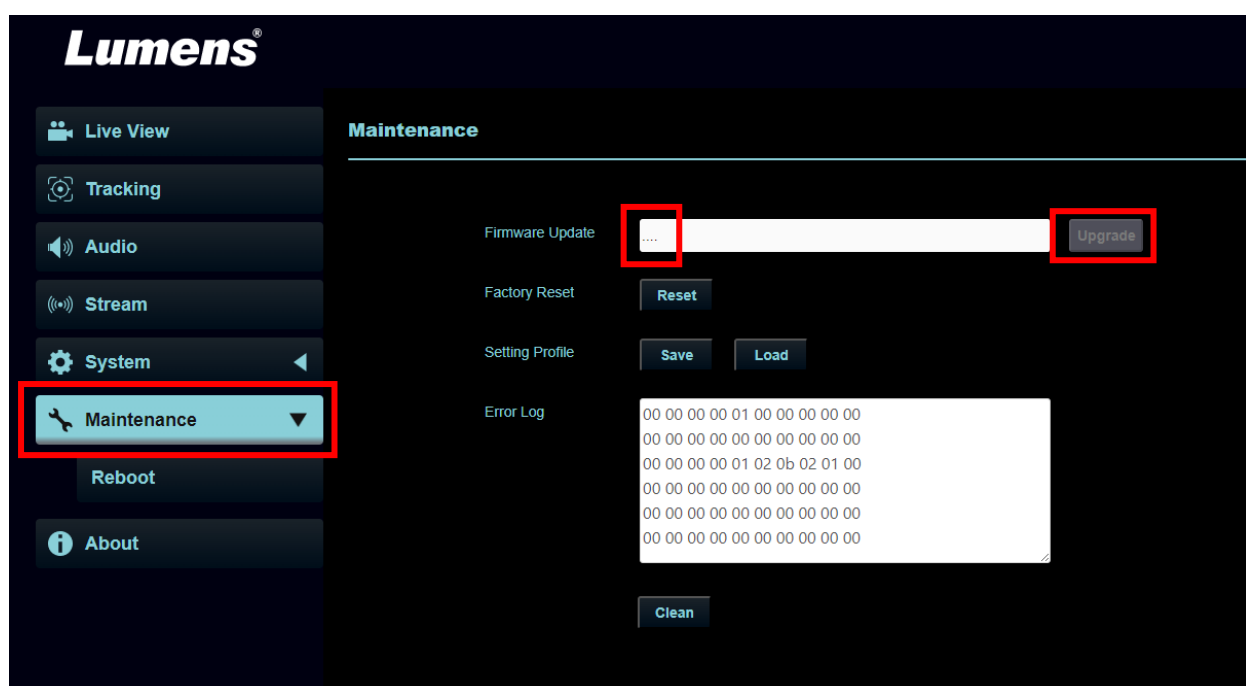

3.4 FW download starts, please don't close the page. (Around 2-3 minutes taken)

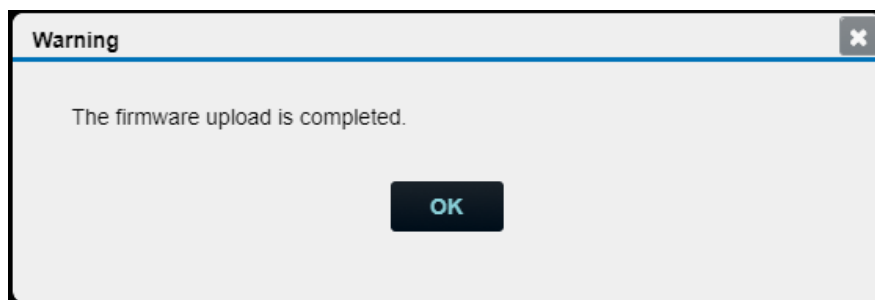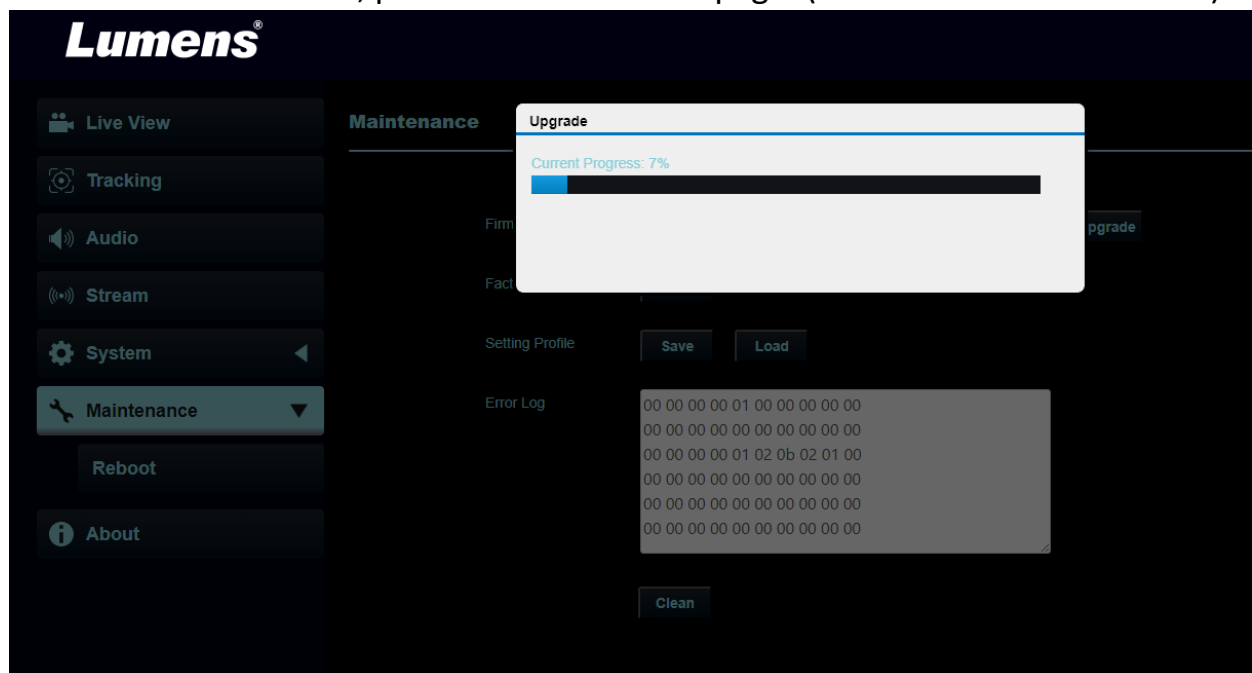

3.5 Login webpage again and check the FW version from [About]> [Firmware Version].

