






VC-R32 Firmware(FW) Upgrade Instruction

1 Device and Tool Preparation


1.1 Please prepare following devices and tools before FW upgrade.

Camera	PC or Laptop
	 or 
Power adapter and power cord	Ethernet cable
	

2 Connections


2.1 Connecting via switch or router

2.1.1 Please ensure the [Ethernet]> [DHCP] in the menu is ON.

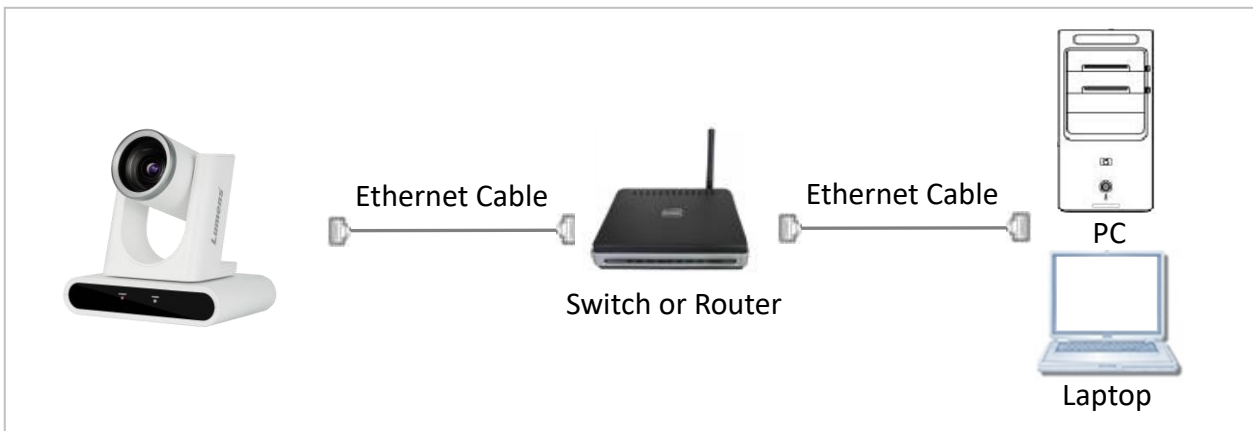

3 FW Download


3.1 Open browser and enter the IP address of the camera in the address bar. You can check the IP address from [Status]> [Ethernet] in the menu.

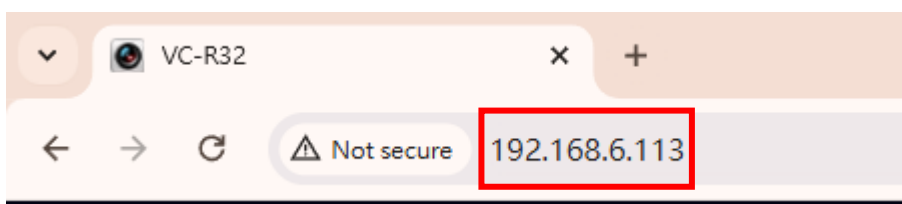


3.2 Enter the account and password to log in webpage.

Account: admin


Password: 9999(Default)

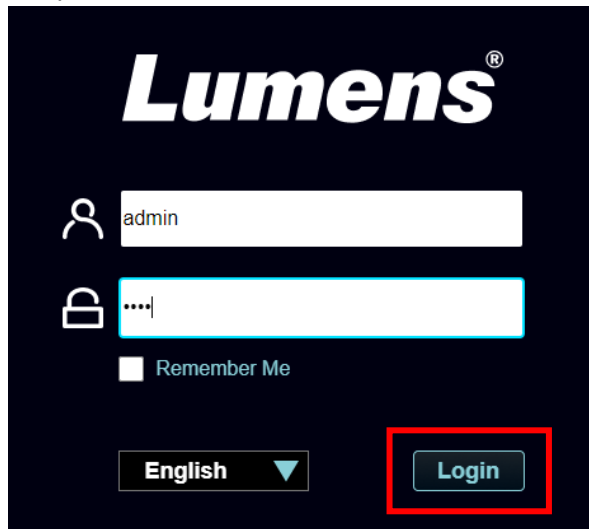

3.3 Select [Maintenance]> [...] to select bin. firmware file and press [Upgrade].

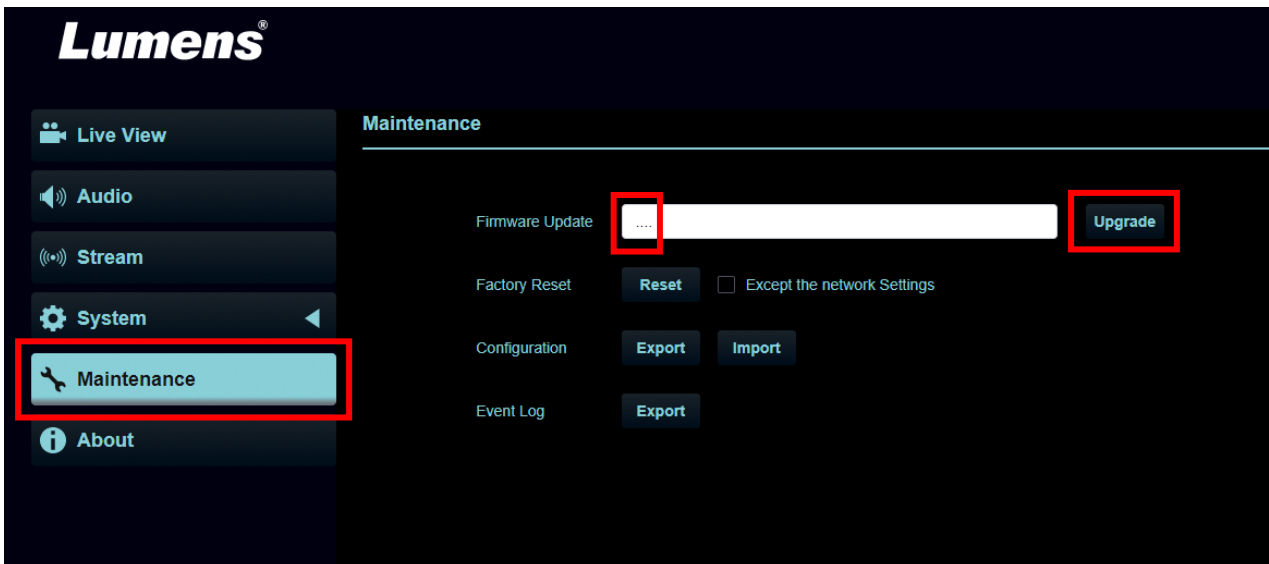

3.4 FW download starts. (Around 5 minutes taken)

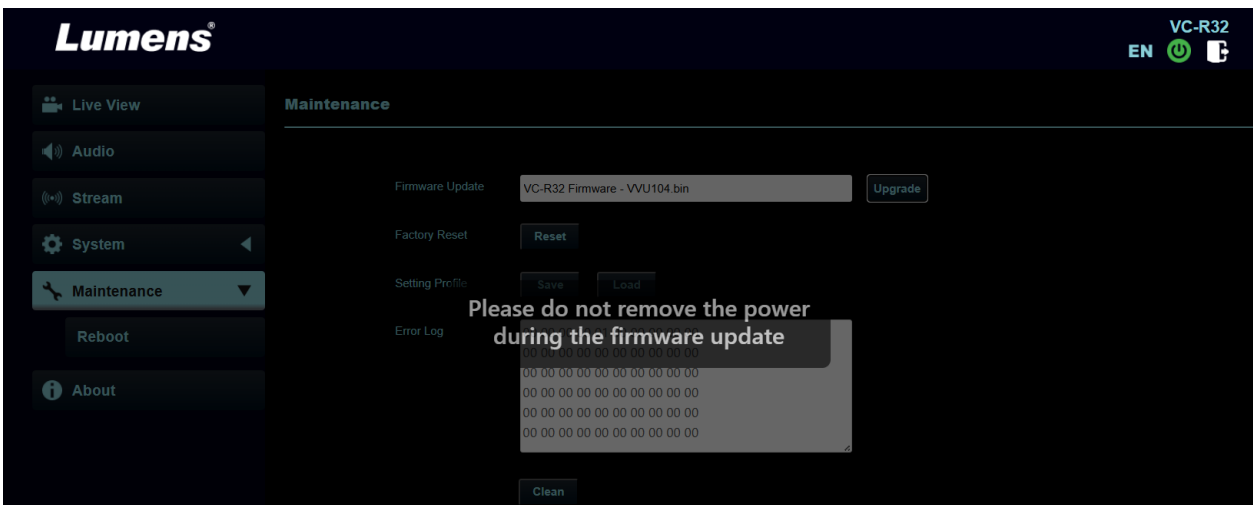

3.5 Login webpage again and check the FW version from [About]> [Firmware Version].

