# LC100/LC100N CaptureVision Station

**User Manual - English** 



### [Important]

To download the latest versions of the Quick Start Guide, multilingual user manual, software, driver, etc., please visit Lumens <u>https://www.MyLumens.com/support</u>



# **Table of Contents**

| Chapter 1          | Package Contents  | 3  |
|--------------------|---|----|
| Chapter 2          | Product Overview  | 4  |
| 2.1 RS             | -232/RS-485 I/O pin description                               | 5  |
| Chapter 3          | Instruction for installation                                  | 6  |
| 3.1 Pro            | duct connection diagram                                       | 6  |
| 3.2 Liv            | e Streaming Application Diagram                               | 6  |
| Chapter 4          | Function Description  | 7  |
| 4.1 LC             | M Screen  | 7  |
| 4.2 Rea            | al-time operation menu  | 8  |
| 4.3 Pai            | ameter setting  | 9  |
| 4.4 On             | line Director   | 23 |
| 4.5 File           | e management  | 27 |
| Chapter 5          | Troubleshooting   | 31 |
| Chapter 6          | Safety Instructions   | 32 |
| Addendum           | 1   | 33 |
| <b>Copyright I</b> | nformation  | 34 |
| Supplier's Dec     | laration of Conformity 47 CFR § 2.1077 Compliance Information | 35 |



## Chapter 1 Package Contents


| LC100/LC100N                | Power Adapter                   | Power Cord                                       | 3-PIN to 2-PIN connector                             |
|-----------------------------|---------------------------------|--|--|
| Louisey                     |                                 | Appearance may vary depending on country/ region | (For Japan only)                                     |
| Quick Installation<br>Guide | RS-232/RS-485<br>Connector (x2) | Mounting Metal Plate<br>(x2)                     | Mounting sheet metal screws (M3 x 6 x 4)             |
|                             | 0                               |  |  |
| Gulok Installation Gulde    |                                 |  | 00000000000000000000000000000000000000               |
| Cutok Installation Guide    | Cable holder-2                  | ta ta l  | Hard drive locking<br>screws<br>(2.5" x 4/ 3.5" x 4) |




## **Chapter 2 Product Overview**

The LC100/LC100N CaptureVision Station uses the Linux operating system and an ARM architecture processor to provide stable recording services. It supports video recording, mixing and switching from various input signal sources. It enables voice, image, and data in bidirectional transmission through the public network and support pre-scheduled recording and uploading. You can start recording automatically without being on site. LC100/LC100N is widely used in education, corporate meetings, government agencies, etc., for live or recorded environments.

• Front panel

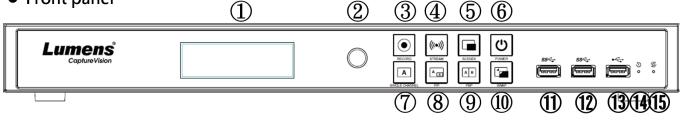

Rear panel

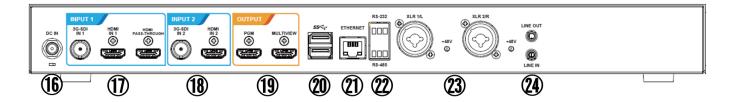

| NO | Name   | Function Descriptions   | NO | Name         | Function Descriptions   |
|----|--------|---|----|--------------|---|
| 1. | LCM    | Display Menu and<br>Information   | 16 | DC IN 12V    | DC 12 V power connector   |
| 2. | Knob   | LCM knob  |    |              |   |
|    |        | Start/Stop recording  |    |              | HDMI input 1  |
|    |        | Press and hold for 3 seconds: Pause Recording   | 17 | Input1       | <ul><li>3G-SDI input 1</li><li>HDMI Passthrough</li></ul>   |
| 3  | Record | <ul> <li>Blue LED light: Is<br/>connected to power source<br/>for recording</li> </ul>              |    |              |   |
|    |        | Red LED light: Recording<br>in progress   |    |              | HDMI input 2  |
|    |        | <ul> <li>Blue + Red LED light:<br/>Recording paused, press<br/>again to resume recording</li> </ul> | 18 | Input2       | ■3G-SDI input 2   |
| 4  | Stream | On/Off image streaming<br>Blue LED light: Is<br>connected to power source<br>for streaming          | 19 | Output       | <ul> <li>PGM: Main screen output, display the recording or streaming screen and layout</li> <li>Multiview: Operation interface output; display</li> </ul> |
|    |        | <ul> <li>Red LED light: Streaming<br/>in progress, press again to<br/>stop streaming</li> </ul>     |    |              | the settings menu and image management  |
| 5  | Scene  | Switch templates  |    |              | Supporting the following devices:   |
| 6  | Power  | On/Off the device power<br>Press and hold for 6<br>seconds: Force to reboot                         | 20 | USB 3.0 port | Supporting the following devices:<br>USB video/audio devices  |



| 7  | Single<br>Channel | Display a single channel screen                         |         |                        | External storage disk   |
|----|-------------------|---|---------|------------------------|---|
| 8  | PIP               | Switch to PIP (picture in picture)                      |         |                        | <ul><li>Keyboard/mouse device</li><li>LC-RC01 (optional) USB connection</li></ul> |
| 9  | PBP               | Switch to PBP (picture by picture)                      |         |                        |   |
| 10 | SWAP              | Switch CH1/CH2 signal<br>channels                       | ge disk |                        | Connect to Ethernet   |
| 11 | USB 3.0 port      | External storage disk                                   |         |                        |   |
| 12 | USB 3.0 port      | External storage disk                                   |         |                        |   |
| 13 | USB 2.0 port      | External storage disk                                   | 22      | RS-232/<br>RS-485 port | Connect to AV control equipment   |
| 14 | Factory Reset     | Reset all configurations to<br>factory default settings | 23      | XLR audio in           | Connect to a microphone or audio mixer  |
| 15 | Restart           | Reboot the machine                                      | 24      | Line In/Out            | Audio In/Out  |

## 2.1 RS-232/RS-485 I/O pin description


| (1) (2) (3)<br>RS-232<br>TX RX GND    |
|---------------------------------------|
| [BBB]                                 |
| BBB                                   |
| $\frac{1}{4} \frac{1}{5} \frac{1}{6}$ |

| RS-232   |               |  |
|----------|---------------|--|
| Pin NO.  | Function      |  |
| 1        | TX+           |  |
| 2        | RX-           |  |
| 3        | GND           |  |
| ■ RS-485 |               |  |
| Pin NO.  | Function      |  |
|          |               |  |
| 4        | T/R+          |  |
| 4 5      | T/R+<br>T/R - |  |


## <u>Lumens®</u>

## **Chapter 3** Instruction for installation

### 3.1 Product connection diagram

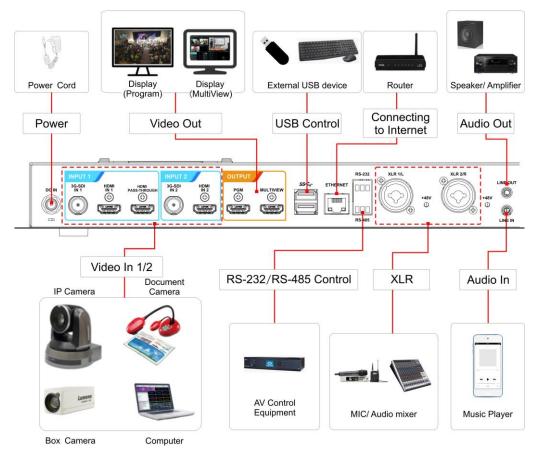

### 3.2 Live Streaming Application Diagram

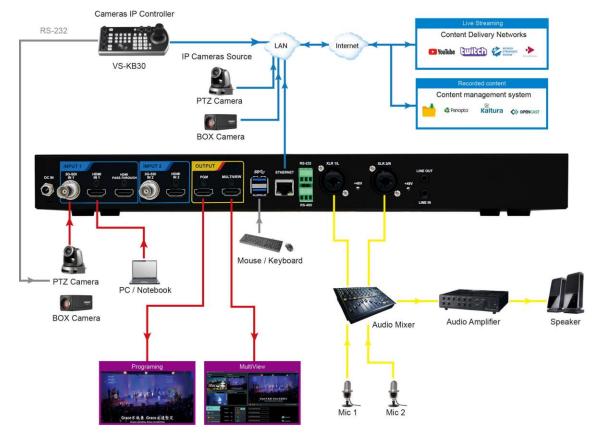



### 4.1 LCM Screen

### 4.1.1 Setting Menu

| 1st Level<br>Major Items | 2nd Level<br>Minor Items | 3rd Level<br>Adjustment Values | Function Descriptions                  |
|--------------------------|--------------------------|--------------------------------|--|
| Information              | IP/ FW/ Mode/<br>SN/ MAC |                                | Display the current system information |
|                          |                          | 1. HDMI1 or HDMI2              |  |
|                          |                          | 2. SDI1 or SDI2                |  |
| Video Source             | Ch 1/ CH2                | 3. USB Video                   | Select the video source of             |
| video Source             |                          | 4. Source Name 6               | CH1/CH2                                |
|                          |                          | 5. Source Name 7               |  |
|                          |                          | 6. Source Name 8               |  |
|                          | PGM Audio Level          |                                | Display PGM volume level               |
| Audio Level              | PGM Volume               | 0~125                          | Set PGM volume                         |
|                          | PGM Mute                 | Mute/ UnMute                   | Set PGM Mute on/off                    |
|                          |                          | Full HD 60/ 50FPS 6Mbps        |  |
|                          |                          | Full HD 30/ 25FPS 4Mbps        |  |
|                          |                          | Full HD 30/ 25FPS 3Mbps        |  |
|                          | PC(Papard)               | HD 30/ 25FPS 2Mbps             | Set up the recording encoded           |
|                          | RC(Record)               | HD 30/ 25FPS 1.5Mbps           | format                                 |
| Mode Settings            |                          | SD 30/ 25FPS 800Kbps           |  |
| Mode Settings            |                          | SD 30/ 25FPS 500Kbps           |  |
|                          |                          | User Defined                   |  |
|                          |                          | Full HD 4/ 3Mbps               |  |
|                          | ST(Stream)               | HD 2/ 1.5Mbps                  | Set the streaming encoded              |
|                          |                          | SD 800/ 500Kbps                | format                                 |
|                          |                          | User Defined                   |  |
|                          | IP Assignment            | DHCP/ Static IP                | Set dynamic/static host                |
|                          | IP                       | 192.168.100.150                | IP address                             |
|                          | SM                       | 255.255.255.0                  | Subnet Mask                            |
|                          | GW                       | 192.168.100.254                | Gateway                                |
| IP Configuration         | DNS1                     | 192.168.1.211                  | Domain name 1                          |
|                          | DNS2                     | 192.168.1.212                  | Domain name 2                          |
|                          |                          |                                | Click Edit to modify the relevant      |
|                          | Edit                     | Edit/ Save                     | IP settings, and then click Save       |
|                          |                          |                                | to save the settings                   |
| Storage                  | System Storess           |                                | Shows USB or SATA based on             |
| Storage                  | System Storage           |                                | the storage location                   |



| 1st Level<br>Major Items | 2nd Level<br>Minor Items | 3rd Level<br>Adjustment Values | Function Descriptions         |
|--------------------------|--------------------------|--------------------------------|-------------------------------|
| P                        | Remaining space          |                                | Shows the remaining space and |
|                          | Remaining space          |                                | total space                   |


#### 4.1.2 Message Description

| ltem | Message           | Description  |
|------|-------------------|--|
| 1.   | USB Disk Insert   | USB flash drive or USB HD is inserted into LC100/LC100N            |
| 2.   | USB Disk Remove   | USB flash drive or USB HD is removed from LC100/LC100N             |
| 3.   | No Storage        | There is no HDD or USB disk when recording                         |
| 4.   | No Enough Storage | There is no enough recording space when the recording is activated |
| 5.   | Record Error      | Recording failure or abnormality when the recording is activated   |
| 6.   | Update Firmware   | FW updating  |
| 7.   | Front panel lock  | Front panel lock is on   |

### 4.2 Real-time operation menu

Connect the HDMI1 MultiView output to the display panel to show the real-time operation menu

Connect the keyboard/mouse through the USB port and use the keyboard/mouse to select the menu settings

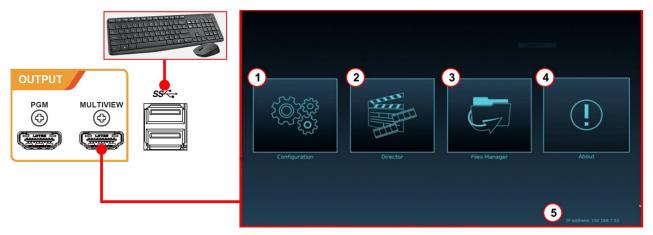

| No | lcon    | Name                  | Function Descriptions  |
|----|---------|-----------------------|--|
| 1  |         | Parameter setting     | Perform the system network setting, recording/streaming encoded setting  |
| 2  | E STATE | Casting<br>management | Input signal source selection, audio management, recording/streaming control, output version selection, and network video camera control |
| 3  | G       | File<br>management    | Conduct the video file content management, including the following functions: Upload, download, delete, replay video files               |
| 4  |         | About                 | Display the current firmware version and relevant production information of LC100/LC100N   |
| 5  | NA      | Device IP             | When connecting to the router, the current assigned device IP address will be displayed  |




### 4.3 Parameter setting

This Section provides descriptions of the web-based interface to control the display items. HDMI MultiView only provides items of [System Settings] and [Video Settings]. **4.3.1 System Settings** 

#### 4.3.1.1System Settings

You may set up the device's basic information, initial date and time, and others here.

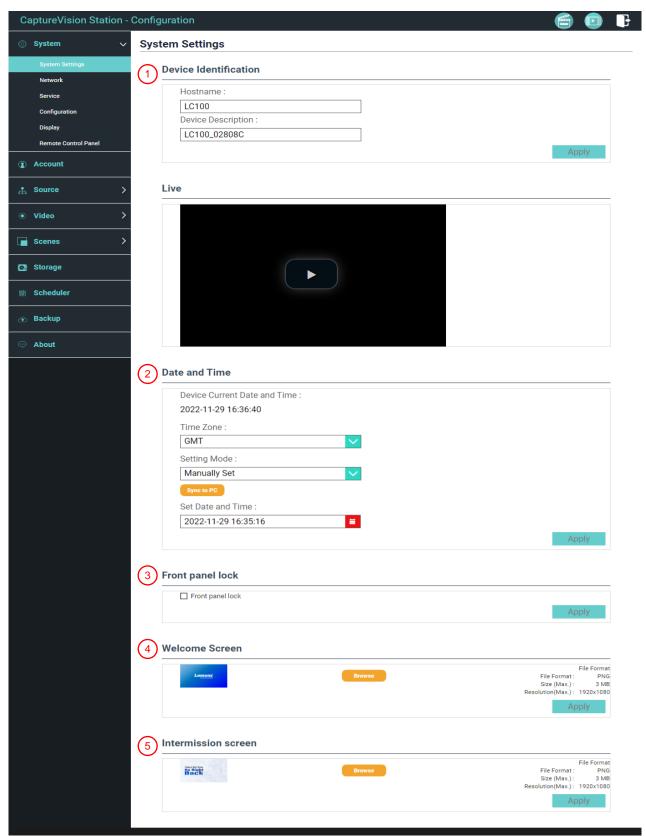

## Lumens®

| No | ltem                     | Function Descriptions  |  |  |
|----|--------------------------|--|--|--|
| 1  | Device<br>Identification | Defines the device name and device description for LC100/LC100N  |  |  |
| 2  | Date & Time              | <ul> <li><remark> Display name only accepts English characters and numbers</remark></li> <li>LC100/LC100N supports different time zone setting. It can synchronize time with NTP service (default) and manual setup</li> <li>Time Zone: Select the correct time zone according to current location</li> <li>Configuration Mode:         <ul> <li>NTP service: Synchronizes time with a network server</li> <li>Manual Setup: Sets time manually</li> </ul> </li> </ul> |  |  |
| 3  | Front Panel Lock         | After checking the box, no action will be triggered when any front panel<br>button is pressed  |  |  |
| 4  | Welcome Image            | <ul> <li>You can customize a welcome image for LC100/LC100N</li> <li>1 Click [Browse] and select a file to upload. Once done, a thumbnail will be generated</li> <li>File format:</li> <li>File format: PNG</li> <li>File Size (Max.): 3 MB</li> <li>Resolution Size (Max.): 1920 x 1080</li> <li>2 Click [Apply] to save this change. If you need to select another file, click [Cancel] and reselect a file</li> </ul>   |  |  |
| 5  | Intermission<br>Image    | <ul> <li>You can customize an intermission image for LC100/LC100N</li> <li>1 Click [Browse] and select a file to upload. Once done, a thumbnail will be generated</li> <li>File format:</li> <li>File format: PNG</li> <li>File Size (Max.): 3 MB</li> <li>Resolution Size (Max.): 1920 x 1080</li> <li>2 Click [Apply] to save this change. If you need to select another file, click [Cancel] and reselect a file</li> </ul>   |  |  |

#### 4.3.1.2Network

The factory setting of LC100/LC100N is DHCP. The IP address is assigned by the router. If you want to use a static IP address, please configure the connection here.

| CaptureVision Station - Configuration |   |  |
|---------------------------------------|---|--|
| ⊚ System                              | Network   |  |
| System Settings<br>Network            | Network Settings  |  |
| Service<br>Configuration              | The system will reboot after changing the network settings. Please re-login.<br>IP Assignment : |  |
| Display                               | DHCP  |  |
| Remote Control Panel                  | IP Address :  |  |
| Account                               | 192.168.4.115<br>Subnet Mask :  |  |
| Source >                              | 255.255.255.0<br>Default Gateway :  |  |
| Video                                 | 192.168.4.254<br>Primary DNS Server :   |  |
| Scenes >                              | 192.168.1.211   |  |
| 🖸 Storage                             | Secondary DNS Server :<br>192.168.1.212   |  |
| 🛱 Scheduler                           |   |  |



| No | Item             | Function Descriptions  |  |  |
|----|------------------|--|--|--|
| 1  | Ethernet Setting | <ul> <li>DHCP: Dynamic IP address as default</li> <li>Static IP: Configure static IP address according to the network and manually enter network information</li> <li>Select and fill in required network setting information and click [Apply] to save the settings</li> <li><caution>The system will restart after changing network setting.</caution></li> <li>Please connect and log in again</li> </ul> |  |  |

#### 4.3.1.3Services

| CaptureVision Station - Configuration |   |  |  |  |
|---------------------------------------|---|--|--|--|
| ⊚ System ∨                            | Service   |  |  |  |
| System Settings                       | 1<br>Firmware   |  |  |  |
| Network                               |   |  |  |  |
| Service                               | Master Firmware Version :   |  |  |  |
| Configuration                         | v1.0.0.12   |  |  |  |
| Display                               | Update  |  |  |  |
| Remote Control Panel                  | Before updating, please make sure you have mounted SATA HDD or USB Storage. |  |  |  |
| Account                               | Advance   |  |  |  |
| • Source >                            | 2 Service Data  |  |  |  |
| Video                                 | Export the log file to your computer  |  |  |  |
| Scenes >                              | Description : 🔊   |  |  |  |
| 🖸 Storage                             | Export  |  |  |  |
| Scheduler                             | 3<br>Reset  |  |  |  |
| 🕤 Backup                              | Reset   |  |  |  |
|                                       | Reset to factory default  |  |  |  |
| 😁 About                               | Except the network settings   |  |  |  |
|                                       | Reset   |  |  |  |
|                                       |   |  |  |  |
|                                       | 4 Restart Device  |  |  |  |
|                                       | Restart   |  |  |  |
|                                       |   |  |  |  |
|                                       |   |  |  |  |

| No | Item  | Function Descriptions  |  |  |
|----|---|--|--|--|
|    |   | Main firmware information and update   |  |  |
| 1  | Main Firmware   | Update Select the master firmware file you want to update, and then click    |  |  |
|    | Main Filliwale  | [Apply] to update it   |  |  |
|    |   | Advance Engineering mode, for Lumens engineers only                          |  |  |
|    |   | Saves system log files to user's computer                                    |  |  |
| 2  | Service History       1       Enter file name         2       Click [Export] to export system log files | 1 Enter file name  |  |  |
| 2  |   | 2 Click [Export] to export system log files                                  |  |  |
|    |   | <remark> The length of file name must be between 0 ~ 16 characters.</remark> |  |  |
|    | _   |  |  |  |



|   |                    | {}()'&@~^\$%" ,`:?<>*\/#; symbols, and space are forbidden  |  |  |
|---|--------------------|---|--|--|
| 3 | Reset              | Restores LC100/LC100N to factory reset<br><b><remark></remark></b> Check [Keep Network Settings] and the network settings will be<br>remained |  |  |
| 4 | Restart the device | Restart the LC100/LC100N  |  |  |

### 4.3.1.4Setting File

You can export the configuration files of the device to a computer, and import the configuration files to another device to apply the same configuration.

| Captur  | CaptureVision Station - Configuration |  |  |
|---------|---------------------------------------|--|--|
| ⊘ Syste | System ~ Configuration                |  |  |
|         | em Settings                           | 1 Export   |  |
| Netv    |                                       | <ul> <li>✓ All Configuration</li> <li>✓ Display</li> </ul> |  |
| Conf    | figuration                            | <ul> <li>Record, Stream, Storage, and Backup</li> </ul>    |  |
| Disp    | lay                                   | ☑ Scenes   |  |
| Rem     | ote Control Panel                     | ☑ Layout   |  |
| Acco    | unt                                   | Export   |  |
| 🚓 Sourc | ce >                                  | 2 Import   |  |
| • Video | »                                     | Load a configuration.                                      |  |
| 📄 Scen  | es >                                  | Import   |  |
| No      | ltem                                  | Function Descriptions                                      |  |

| No | ltem   | Function Descriptions  |  |  |
|----|--|--|--|--|
| 1  | Export Exports the current configuration of LC100/LC100N as a configuration file |  |  |  |
| 2  | Import   | Imports the exported configuration files from a LC100/LC100N to another LC100/LC100N |  |  |

### 4.3.1.5Display Settings

| CaptureVision Station - Configuration |                      |                |  |  |
|---------------------------------------|----------------------|----------------|--|--|
| ⊘ Syster                              | System ✓ Display     |                |  |  |
| System Settings Output Resolution     |                      | put Resolution |  |  |
|                                       | Network              |                | IDMI 1 and HDMI 2 :                        |  |
| Config                                | Configuration        |                | 1920x1080, 60Hz                            |  |
| Displa                                | Display              |                |  |  |
| Pomo                                  | Romata Control Rapol |                |  |  |
| No                                    | ltem                 |                | Function Descriptions                      |  |
| 1                                     | Output Resc          | lution         | Select LC100/LC100N HDMI output: 50Hz/60Hz |  |



### 4.3.1.6Extension control panel

| CaptureVi                                    | CaptureVision Station - Configuration |              |   |            |           |
|--|---------------------------------------|--------------|---|------------|-----------|
| System<br>System Set                         | ~                                     | Remote Contr |   |            |           |
| System Si<br>Network<br>Service<br>Configura |                                       |              | Model Name  | FW Version | Connected |
| No   | l                                     | tem          | Function Descriptions   |            | ons       |
| 1  | Extensi<br>panel                      | on control   | Display the connection information of LC-RC01 extension control panel (optional). When there is no connection, the blank appears on the |            |           |

information field

#### 4.3.2 Account

You can manage accounts for 3 kinds of user mode here: modify the user name and password to [System Management], [Director], and [Content Management].

| CaptureVision Station - Configuration |                      |  |  |  |
|---------------------------------------|----------------------|--|--|--|
| ⊚ System >                            | Account management   |  |  |  |
| Account                               | Administrator s      |  |  |  |
| 🚓 Source >                            | Username :           |  |  |  |
| ● Video >                             | admin New Password : |  |  |  |
| • video /                             |                      |  |  |  |
| Scenes >                              | Confirm Password :   |  |  |  |
| 🖸 Storage                             |                      |  |  |  |
|                                       |                      |  |  |  |
| Scheduler                             |                      |  |  |  |
| <ol> <li>Backup</li> </ol>            | 2 Online Director    |  |  |  |
| © About                               | Username :           |  |  |  |
|                                       | director             |  |  |  |
|                                       | New Password :       |  |  |  |
|                                       | Confirm Password :   |  |  |  |
|                                       |                      |  |  |  |
|                                       |                      |  |  |  |
|                                       |                      |  |  |  |
|                                       | 3Video Manager 🔈     |  |  |  |
|                                       | Username :           |  |  |  |
|                                       | video                |  |  |  |
|                                       | New Password :       |  |  |  |
|                                       |                      |  |  |  |
|                                       | Confirm Password :   |  |  |  |
|                                       |                      |  |  |  |
|                                       |                      |  |  |  |

| No      | ltem                  | Username/Password   | Function Descriptions   |  |  |  |
|---------|-----------------------|---------------------|---|--|--|--|
| 1       | System<br>Management  | admin / admin       | Sets up the permission of main system management  |  |  |  |
| 2       | Online<br>Director    | director / director | Manages playback and changes simple basic image settings and the permission of Director |  |  |  |
| 3       | Content<br>Management | video / video       | Views the permission of file storage and playback                                       |  |  |  |
| [Cautio | nl                    |                     |   |  |  |  |

[Caution]

• The length of user name must be between 4 ~ 16 characters. {}()'&@~^\$%"|,`:?<>\*\/#; symbols, and



space are forbidden

- The length of password must be between 8 ~ 16 characters. {}()'~^"|,`:?<>\*∀; symbols, and space are forbidden
- Duplicate username is forbidden

### 4.3.3 Video Source

4.3.3.1Network Device Management

| CaptureVision Station - Con | figuration                      |              |                   |              |        |           | 6        |
|-----------------------------|---------------------------------|--------------|-------------------|--------------|--------|-----------|----------|
| ⊚ System > No               | system > Network Device Manager |              |                   |              |        |           |          |
| Account                     | Network Cameras                 |              |                   |              |        |           |          |
| 🖞 Source 🗸                  | 💍 Refresh                       |              |                   |              |        |           |          |
| Network Device Manager      | Host Name                       | IP Address   | MAC               | Manufacturer | Status | Connected | Delete   |
| Video Source Manager        | VC-BC701P                       | 192.168.4.96 | DC:E2:AC:01:D4:7E |              | Login  | ок        | <b>İ</b> |
| • Video >                   | VC-A61P                         | 192.168.4.46 | DC:E2:AC:02:47:27 | Lumens       | ОК     | ок        | <b>D</b> |
| Scenes >                    |                                 |              |                   |              |        |           |          |
| 🖸 Storage                   | Network Stream                  |              |                   |              |        |           |          |
| 🛱 Scheduler                 | + Add                           |              |                   |              |        |           |          |
| ① Backup                    |                                 | evice Name   |                   | URL          |        | Delete    |          |
|                             |                                 |              |                   | No data(s).  |        |           |          |
| 💬 About                     |                                 |              |                   |              |        |           |          |

| No | Item              | Function Descriptions   |
|----|-------------------|---|
|    |                   | <ol> <li>Click [Refresh] and automatically scan the network cameras in the<br/>same LAN</li> <li>Click [Login Verification] and enter login information to connect the<br/>camera</li> </ol>  |
| 1  | Network Camera    | Login Verification × Username: admin Password: Verific Verific Verific Verific Verific  |
|    |                   | <ul> <li>Once the status display "OK", indicating that the image can be set<br/>under the signal source input selection</li> </ul>  |
|    |                   | 1 Click [Add]   |
| 2  | Network Streaming | <ul> <li>2 Enter the network streaming name and URL, and then click [Apply]</li> <li>Network stream</li> <li>Name:</li> <li>VC-A50P</li> <li>URL:</li> <li>Ttsp://192.168.4.50.8557/h264</li> <li>3 The newly added network streaming name will be displayed in the list</li> </ul> |



### 4.3.3.2Video communication source management

| CaptureVision Sta           | ation - | Config | juration         |          |              |             |      | 6 (    |
|-----------------------------|---------|--------|------------------|----------|--------------|-------------|------|--------|
| ⊘ System                    | >       | Vide   | eo Source Manage | r        |              |             |      |        |
| <ol> <li>Account</li> </ol> |         |        | + Add            |          |              |             |      |        |
| Source                      | ~       |        | ID               | Source   | Information  | Source Name | Edit | Delete |
| Network Device Mana         | yer     |        | 1                | HDMI1    | N/A          | HDMI1       | ß    |        |
| Video Source Manage         |         |        | 2                | HDMI2    | N/A          | HDMI2       | ß    |        |
|                             |         |        | 3                | SDI1     | N/A          | SDI1        | ß    |        |
| Video                       |         |        | 4                | SDI2     | N/A          | SDI2        | ß    |        |
| Scenes                      | >       |        | 5                | VIDEOUSB | N/A          | VIDEOUSB    | ß    |        |
| Cocheo                      |         |        | 6                | VC-A61P  | 192.168.4.46 | VC-A61P     | ß    | Ē      |
| Storage                     |         |        |                  |          |              |             |      |        |

| No | ltem   | Function Descriptions   |
|----|--|---|
| 1  | Video<br>communication<br>source<br>management | Display the video communication source information for users to edit the<br>source name and order<br><caution>ID1-4 are fixed as HDMI 1 / HDMI 2 / SDI 1 / SDI 2 (not<br/>removable)<br/><remark> Source name supports 2 ~ 16 characters, and can have the<br/>English letter/number/blank/underline/- entered</remark></caution> |

### 4.3.4 Video Settings

| 4.3.4.1 Record Settings               |  |
|---------------------------------------|--|
| CaptureVision Station - Configuration |  |

| CaptureVision Station - | Configuration       |                           |                     |          | 6   | ) 🖸                                  |
|-------------------------|---------------------|---------------------------|---------------------|----------|---|--------------------------------------|
| ⊙ System >              | Record              |                           |                     |          |   |                                      |
| ① Account               | 1 Encoder Settings  |                           |                     |          |   |                                      |
| 🚓 Source >              | Recording Mode      |                           |                     |          | Resolution :<br>Average Bitrate :                         | Full HD 60FPS<br>1920×1080<br>6 Mbps |
| ● Video 🗸 🗸             | Video Compress      |                           |                     |          | FPS :<br>GOP :  | 60<br>30                             |
| Record                  | Full HD 60FPS       |                           | ✓                   |          | H.264 Profile :<br>Audio Bitrate :<br>Audio Sample Rate : | 256 Kbps                             |
| Stream                  | Preferentially Re   | cord to USB Flash Drive : |                     |          | Hours semple new.   | 10.0 1012                            |
| Scenes >                | off                 |                           |                     |          |   |                                      |
|                         | Loop Recording      |                           |                     |          |   |                                      |
| 🖸 Storage               | on                  |                           |                     |          | _   |                                      |
| iii Scheduler           |                     |                           |                     |          |   | Apply                                |
| ④ Backup                | 2<br>Audio settings |                           |                     |          |   |                                      |
|                         | Audio Delay Adju    |                           |                     |          |   |                                      |
| About                   | Audio Delay Adju    | 0 ms                      |                     |          |   |                                      |
|                         |                     |                           |                     |          |   |                                      |
|                         |                     | Record File               | Audio Source        |          |   |                                      |
|                         |                     | PGM<br>Channel 1          | PGM Audio PGM Audio | <u> </u> |   |                                      |
|                         |                     | Channel 1<br>Channel 2    | PGM Audio           |          |   |                                      |
|                         |                     |                           | ·                   |          |   |                                      |
|                         |                     |                           |                     |          |   | Apply                                |
|                         | (3)                 |                           |                     |          |   |                                      |
|                         | Recording File Na   | ime Setting 💊             |                     |          |   |                                      |
|                         | Prefix Setting :    |                           |                     |          |   |                                      |
|                         |                     |                           |                     |          |   |                                      |
|                         |                     |                           |                     |          |   | Apply                                |

| <ul> <li>Mode (MP4)</li> <li>Movie Mode: Only record the single PGM 2-channel composite screen</li> <li>Movie /Resource Mode: Can record the single PGM 2-channel composite screen and 2 signal source screens</li> <li>Encode Profile: Default recording encoded formats are available to be selected by resolutions and average bitrates (Please refer to the Instruction on Encode Profile). You can also set user-defined image quality.</li> <li>Preferentially record to front USB hard drive: Videos or pictures will be</li> </ul> | No | Item             | Function Descriptions   |
|--|----|------------------|---|
| preferentially recorded to the USB flash drive which has already been  | 1  | Encoder Settings | <ul> <li>Movie Mode: Only record the single PGM 2-channel composite screen</li> <li>Movie /Resource Mode: Can record the single PGM 2-channel composite screen and 2 signal source screens</li> <li>Encode Profile: Default recording encoded formats are available to be selected by resolutions and average bitrates (Please refer to the Instruction on Encode Profile). You can also set user-defined image quality.</li> </ul> |

|   |                            | <ul> <li>connected to the front and rear USB port</li> <li>Cycling Record: Enabling the cycle record function can prevent recording error when storage device is full</li> </ul>  |
|---|----------------------------|---|
| 2 | Audio Settings             | <ul> <li>Audio Delay Adjustment: 0 ~ 600 ms</li> <li>Audio source: Set the audio source for Channel recording files</li> <li><remark> The selection of non PGM Audio may increase CPU loading.</remark></li> <li>Users may check out CPU information on the Director page of real-time operation menu under MultiView.</li> </ul> |
| 3 | Video File Name<br>Setting | Customizes the prefix name of video file  |

### ■ Instruction on Encode Profile

| Name              | Video Resolution/ABR    | Description   |
|-------------------|-------------------------|---|
| Full HD           | 1080p / 4 - 6 Mbps      | Dynamic scene; Large film site; Local drive recording                 |
| Internet Full HD  | 1080p / 3 Mbps          | General scene, Medium film site, Local drive recording                |
| HD                | 720p / 2 Mbps           | Static scene, Small film site, Local drive recording                  |
| Internet HD       | 720p / 1.5 Mbps         | Suitable for online live-stream                                       |
| SD                | 480p / 800 kbps         | Static scene, suitable for online live-stream                         |
| Mobile network SD | 480p / 500 kbps         | You can watch the LC100/LC100N live-stream screen on a mobile device. |
| User-Defined      | Click 🔜 to open User-De | efined. Once done, click "Save".                                      |

#### 4.3.4.2Streaming Settings

You may change the streaming settings here. Related settings must follow the streaming protocol and the settings recommended by server system support.

| CaptureVision Station - Co | Configuration                         |   |
|----------------------------|---------------------------------------|---|
| ⊚ System >                 | Stream                                |   |
| Account                    | Encoder Settings                      |   |
| source >                   | Video Compression :                   | User Defined<br>Resolution : 1920x1080<br>Average Bitrate : 4 Mbps            |
| • Video 🗸                  | User Defined                          | Average Bitrate : 4 Mbps<br>GOP : 30<br>H.264 Profile : high profile<br>Apply |
| Record                     |                                       | Арріу   |
| Stream                     | 2) Streaming Settings                 |   |
| Scenes >                   | 2 Streaming Settings                  |   |
| Storage                    | Stream 1   Stream 2   Stream 3   RTSP |   |
|                            | Enable Stream                         |   |
| 🛗 Scheduler                | Stream Type : RTMP                    |   |
|                            | Server : rtmp://0.0.0.0               |   |
| 📼 About                    | Stream Key :                          |   |
|                            | Authentication                        |   |
|                            | Public URL : rtmp://0.0.0.0/          |   |
|                            | Start Stream with Record Function     |   |
|                            |                                       | Apply   |

| No  | Item                | Function Descriptions  |  |
|-----|---------------------|--|--|
| 1   | Encoder Settings    | Encode Profile: Default recording encoded formats are available to be selected by resolutions and average bitrates (Please refer to <u>4.2.4.1</u><br><u>Record Settings_the Instruction on Encode Profile</u> ). You can also set user-defined image quality. |  |
| 2   | Streaming Settings  | <ul> <li>Streaming 1 / Streaming 2 / Streaming 3: You can customize 3<br/>push addresses of network streaming Supported streaming type:<br/>RTMP / RTMPS / RTP / YouTube / YouTube_Gaming / Facebook<br/>Live / Twitch / SRT</li> </ul>                        |  |
| Lum | Lumens <sup>®</sup> |  |  |

|  | Real Time Streaming Protocol (RTSP): 可自訂 LC100 即時串流的                                   | J |
|--|--|---|
|  | 路徑   |   |
|  | ■ RTSP(適用 LC100)   |   |
|  | 預設   |   |
|  | Streaming Settings   |   |
|  | Streaming 1   Streaming 2   Streaming 3   RTSP   |   |
|  | Session : pgm  |   |
|  | Port: 554  |   |
|  |  |   |
|  | RTSP URL: rtsp://192.168.4.39:554/pgm  |   |
|  | Factory Reset  |   |
|  | Streaming 1       Streaming 2       Streaming 3       RTSP         Session :       pgm |   |

### 4.3.5 Scene

### 4.3.5.1Scene

LC100/LC100N provides 5 overlay styles, 5 background images, and 5 scenes. You can also add your own styles.

| CaptureVision Station - Co | Configuration   |            |
|----------------------------|---|------------|
| ⊙ System >                 | Scenes  |            |
| Account                    | 1<br>Overlay  |            |
| • Source >                 |   |            |
| • Video >                  |   | IJ.        |
| Scenes 🗸                   | Delete Support PNG file with 1920x136, 1080x240, 800x320, 640x400 resolution. |            |
| Scenes                     |   |            |
| Macro                      | 2 Background  |            |
| Time Stamp                 |   |            |
| C Storage                  |   | <b>•</b> ) |
| Scheduler                  | Delete Support PNG file with 1920x1080 resolution.                            |            |
|                            |   |            |
|                            | 3 Scenes  |            |
|                            | Scene001 Scene002 Scene003 Scene004 Scene005                                  |            |
|                            |   | Ð          |
|                            | Delete Edit   |            |
|                            |   |            |

| No | Item             | Function Descriptions   |
|----|------------------|---|
| 1  | Overlay          | <ul> <li>For overlay style setting, you can adjust the order by dragging the mouse left and right. Users can upload their own files for application.</li> <li>Click [ • ] and select a desired file from the window. Check the preview image and file name, and click [Apply] to start uploading and applying this overlay style. Click [Delete] to cancel the upload.</li> <li>Supports 30 groups of overlay styles</li> <li>File format:</li> <li>&gt; PNG format</li> <li>&gt; Supported size: 1920 x 136 /1080 x 240 / 800 x 320 / 640 x 400</li> </ul> |
| 2  | Background Image | For background image setting, you can adjust the order by dragging  |




|   |       | the mouse left and right. Users can upload their own files for application.  |
|---|-------|--|
|   |       | Click [ ( ) and select a desired file from the window. Check the   |
|   |       | preview image and file name, and click [Apply] to start uploading and applying this background image. Click [Delete] to cancel the upload. |
|   |       | <ul> <li>Supports 9 groups of background images</li> </ul>   |
|   |       | ■ File format:   |
|   |       | PNG format   |
|   |       | Supported size: 1920 x 1080  |
|   |       | Scene is the integration of "Overlay," "Background Image," and   |
|   | Scene | "Production Layout," which provides the scene made of different  |
|   |       | background images, layout, and overlay style. You can customize the  |
| 3 |       | layout content in 30 scenes.   |
|   |       | Click [ 📀 ] to open scene settings. Enter the scene name and   |
|   |       | select the required overlay, layout, and background image. Once  |
|   |       | done, click "Apply".   |

#### 4.3.5.2Macro

Use together with LC-RC01 extended control panel (optional) to set scene/preset position setting, camera start and stop tracking.

Macro [1 ~ 3] settings correspond to [1 ~ 3] keys on the extension control panel

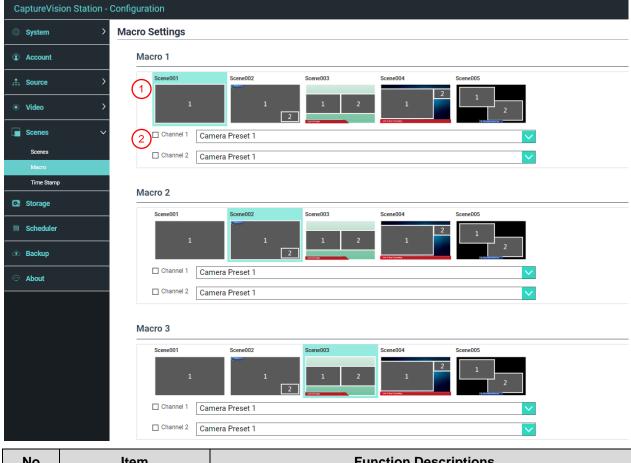

| No  | Item                | Function Descriptions  |  |  |
|-----|---------------------|--|--|--|
| 1   | Scene Selection     | <ul> <li>Select a scene to be set. Each supports up to 30 sets of scene</li> <li>If the overlay style of the scene needs to be change, please refer to</li> <li>4.3.5 Scene</li> </ul> |  |  |
| 2   | Camera Preset       | Supports 9 groups of preset position setting, camera start and stop  |  |  |
| Lum | Lumens <sup>®</sup> |  |  |  |

| Position Setting | tracking   |
|------------------|--|
|                  | <remark> After checking the box, the Marco will proceed the setting</remark> |
|                  | of the network camera on Channel 1 ~ 2.                                      |

### 4.3.5.3Time Stamp

| CaptureVision Station - | Configuration   | 6 🖸   |
|-------------------------|---|-------|
| ⊚ System >              | Time Stamp  |       |
| Account                 | Time Stamp  |       |
| ♦ Source >              | Enable Time Stamp :   |       |
| Video                   | 2 Format :  |       |
| Scenes V                | YYYY-MM-DD hh:mm:ss         V           3         Color :                         |       |
| Scenes                  | Yellow  |       |
| Macro                   | A Size :  |       |
| Time Stamp              |   |       |
| 🖸 Storage               | 5 X Position (0~100) :  |       |
| 🛗 Scheduler             | Y Position (0~100) :  |       |
| ④ Backup                |   |       |
| . About                 | Remarks:When the Time Stamp function is enabled, other overlays cannot be applied | Apply |

| No | ltem                     | Function Descriptions   |  |  |
|----|--------------------------|---|--|--|
| 1  | Enable Time Stamp        | Turn on/off Time Stamp<br><b><remark></remark></b> When the Time Stamp function is enabled, other overlays<br>cannot be applied   |  |  |
| 2  | Format                   | Time display format   |  |  |
| 3  | Color                    | Color setting   |  |  |
| 4  | Size                     | Font size setting   |  |  |
| 5  | X / Y Position (0 ~ 100) | <ul> <li>X: Time Stamp display position (left and right) in the PGM screen</li> <li>0: The leftmost / 100: The rightmost</li> <li>Y: Time Stamp display position (up and down) in the PGM screen</li> <li>0: Top / 100: Bottom</li> </ul> |  |  |



### 4.3.6 Storage Settings

You can set up recording storage, cycle recording, and display hard drive information and NAS setting here.

| rstem > | Storage                           |                     |                    |           |            |        |
|---------|-----------------------------------|---------------------|--------------------|-----------|------------|--------|
| count   | 1 Record Disk                     | Settings            |                    |           |            |        |
| ource > | Local Stora                       |                     |                    |           |            |        |
| deo >   | Internal (S                       | SATA HDD)           |                    |           |            | Apply  |
| enes >  |                                   |                     |                    |           |            |        |
|         | 2 Disk Informa                    | tion                |                    |           |            |        |
| orage   |                                   |                     |                    |           |            |        |
| heduler | Interface                         | Disk Name           | Manufacturer       | Capacity  | Free Space | Format |
|         | SATA                              | Internal (SATA HDD) | ATA WDC WD10SPZX-2 | 931.48 GB | 566.27 GB  | Format |
| ckup    |                                   |                     |                    |           |            |        |
| out     |                                   |                     |                    |           |            |        |
|         | 3 NAS settings                    | ;                   |                    |           |            |        |
|         | Mount :                           |                     |                    |           |            |        |
|         | off                               |                     |                    |           |            |        |
|         | Protocol :                        |                     |                    |           |            |        |
|         | CIFS / SM                         | В                   | ~                  |           |            |        |
|         | Address :                         |                     |                    |           |            |        |
|         | 0.0.0.0                           |                     |                    |           |            |        |
|         | Port :                            |                     |                    |           |            |        |
|         | 445                               |                     |                    |           |            |        |
|         | Folder :                          |                     |                    |           |            |        |
|         | SAMBA                             |                     |                    |           |            |        |
|         | Domain na                         |                     |                    |           |            |        |
|         |                                   | me :                |                    |           |            |        |
|         |                                   | me :                |                    |           |            |        |
|         | Username                          |                     |                    |           |            |        |
|         |                                   | :                   |                    |           |            |        |
|         | Username                          | :                   |                    |           |            |        |
|         | Password                          | :                   |                    |           |            |        |
|         | Password<br>Options :             | :                   |                    |           |            |        |
|         | Password<br>Options :<br>defaults | :                   |                    |           |            |        |
|         | Password<br>Options :             | :                   |                    |           |            |        |

| No | ltem                            | Function Descriptions  |  |  |
|----|---------------------------------|--|--|--|
| 1  | Recording Hard<br>Drive Setting | Local storage: Click the drop-down menu  ▲ and select SATA HDD or<br>USB HD for the local storage hard drive<br>Please refer to <u>2. Hard Drive Information</u> below for formatting the hard<br>drive.<br>< <b>Remark&gt;</b> Formats supported: exFAT/ EXT4<br>< <b>Caution&gt;</b> To ensure proper storage and playing of recorded files, please<br>remove the USB flash drive 30 seconds after the recording is finished |  |  |
| 2  | Hard Drive<br>Information       | Display hard drive information, free space, and capacity. Click "Format" to clear the internal storage devices. Confirm if you want to format the hard drive in the pop-up dialog and click "Confirm" to delete all video files.   |  |  |
| 3  | NAS setting                     | Enable NAS mounting and related settings.<br>It is required to go to <b>Backup Setting&gt; Upload Setting&gt; Mode</b> to select   |  |  |



| <ul> <li>NAS. After recording, the video can be uploaded to NAS.</li> <li><remark> The SMB settings for NAS mounting:</remark></li> <li>Please check the SMB encryption specification for NAS first.</li> <li>Enter the encryption specification in [Options].</li> </ul> |
|---|
| Please enter vers = $1.0$ for SMB1.0.<br>Please enter vers = $2.0$ for SMB2.0.<br>Please enter vers = $3.0$ for SMB3.0.   |

### 4.3.7 Schedule Setting

| CaptureVision Station - | Configuration                               | 6     |
|-------------------------|---|-------|
| ⊙ System >              | Scheduler                                   |       |
| Account                 | C1<br>Schedule Settings                     |       |
| Source >                | eff   |       |
| ● Video >               | Schedule Source :<br>Manual Calendar Import |       |
| Scenes >                | Load a configuration. 🔊                     |       |
| C Storage               | Import                                      |       |
| Scheduler               |   | Apply |
| ① Backup                | 2 Recording Interruption                    |       |
| ) About                 | Cancel ongoing recording task :             | Stop  |
|                         | 3 standby and wake up                       |       |
|                         | Schedule standby :                          |       |
|                         | OFF 🔽                                       |       |
|                         | Schedule wake up :                          |       |
|                         | OFF   |       |
|                         |   | Apply |

| No  | Item                    | Function Descriptions  |  |  |
|-----|-------------------------|--|--|--|
| 1   | Schedule Setting        | <ul> <li>Click [On/Off] (Click [Calendar] : Check the current schedule function</li> <li>Click [Calendar] : Check the current schedule status:</li> <li><remark> Reset schedule source and replace the current schedule</remark></li> <li>Schedule source:</li> <li>Scheduling via the Panopto server:<br/>Enter the login information of the Panopto server to synchronize schedules</li> <li>網路廣播演講: 可選擇推播至 Panopto 服務器的串流</li> <li>Scheduling via the Opencast server:<br/>Enter the login information of the Opencast server to synchronize schedules</li> <li>Scheduling via the Opencast server:<br/>Enter the login information of the Opencast server to synchronize schedules</li> <li>Importing calendar manually:<br/>You can import iCalendar files (e.g. Outlook or Google<br/>Calendar) Click [Import] and select custom scheduled video file</li> <li>Remark&gt; Only files in .ics format can be imported</li> <li>Importing calendar periodically<br/>You can synchronize schedules from network servers (e.g.<br/>Google Calendar)</li> <li>Remark&gt; Please refer to the videos of How to series on<br/>Lumens<sup>™</sup> YouTube channel for related application settings</li> </ul> |  |  |
| 2   | Cancel Recording        | Click [Stop] to stop the current scheduled recording   |  |  |
| 3   | Stand by and Wake<br>up | Enable/disable the scheduled standby and wake-up functions. Set the scheduled time after the functions are enabled   |  |  |
| Lum | <b>ens</b> °            |  |  |  |

### 4.3.8 Backup Setting

LC100/LC100N provides auto backup service which can upload videos to a designated space automatically. You can set up upload destination and test the connection here.

| CaptureVision Station - C | Configuration           | 5 🖸   |
|---------------------------|-------------------------|-------|
| ⊚ System >                | Backup                  |       |
| Account                   | Backup Settings         |       |
| 👌 Source >                | Backup Type : OFF       |       |
| Video                     | Mode :                  |       |
| Scenes >                  | IP Address :            |       |
| Storage                   | Port:                   |       |
| M Scheduler               |                         |       |
| Backup                    | Connection Test         |       |
| 💬 About                   | Authentication : Normal |       |
|                           | Username :              |       |
|                           | Password :              |       |
|                           |                         | Apply |

| No | ltem           | Function Descriptions  |  |  |
|----|----------------|--|--|--|
| 1  | Upload Setting | <ul> <li>Auto upload: Disable / Upload right after recording completes / Upload periodically</li> <li>Mode: FTP / NAS / SFTP / Kaltura / Panopto / Opencast HTTP / Opencast HTTPS</li> <li><remark> Select NAS. Please go to Storage Settings &gt; NAS Setting to enable mounting and related settings.</remark></li> <li>Connection Test: Click [Connection Test] to test if a connection can be created with the current setting</li> <li><remark> Please refer to the videos of How to series on Lumens™ YouTube channel for related application settings</remark></li> </ul> |  |  |

#### 4.3.9 About

LC100/LC100N Device-related Information: Firmware version, device serial number, and technical support link

| CaptureVision Station -    | Configuration  | 6 ( | ŀ    |
|----------------------------|--|-----|------|
| ⊙ System >                 | System Information                                     |     | <br> |
| ① Account                  | Information  |     |      |
| 🚓 Source >                 | Manufacturer :<br>Lumens Digital Optics Inc.           |     |      |
| • Video >                  | Model :  |     |      |
| Scenes >                   | LC100<br>Master Firmware Version :                     |     |      |
| C Storage                  | v1.0.0.12  |     |      |
| i Scheduler                | Serial Number :<br>VC5A00034                           |     |      |
| <ol> <li>Backup</li> </ol> | MAC :<br>DC:E2:AC:02:80:39                             |     |      |
|                            | Webpage :  |     |      |
|                            | www.MyLumens.com<br>Support :<br>service.lumens.com.tw |     |      |



### 4.4 Online Director

LC100/LC100N is built in Director, which allows you to monitor recording and preview the output video from streaming director.

Three login methods below are available:


Select online Director from the HDMI1 MultiView real-time operation menu



When login the web page, select the online Director icon at the upper right corner on the parameter setting page

| CaptureVision Station - | Configuration                          |      |   | ŀ |
|-------------------------|--|------|---|---|
| ⊚ System 🗸 🗸            | System Settings                        |      |   |   |
| System Settings         | Device Identification                  |      |   |   |
| Network                 |  |      |   |   |
| Service                 | Hostname :                             |      |   |   |
| Configuration           | LC100                                  |      |   |   |
| Display                 | Device Description : Invalid hostname. |      |   |   |
| Remote Control Panel    | LC100_028039                           |      |   |   |
|                         | Invalid description.                   | Appl | y |   |
| <li>Account</li>        |  |      |   |   |

• When login the web page, use the online Director authority account.

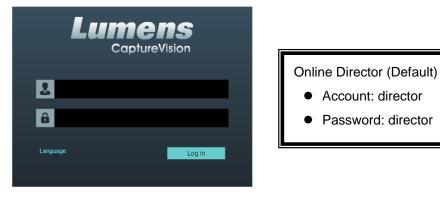



Online Director related feature description as below:

| 1 | USB Video<br>Nothing selecte<br>USB Audio<br>Nothing selecte |                        | Channel 2   | ▼         ●       ((11))       ((22))       ((31))       ●       7       REC Time: 00:00:4   | <b>6</b> |  |
|---|--|------------------------|-------------|--|----------|--|
| 2 | • Rec  |                        | Record      | Sync MP4, 1920x1080, 60fps, 6MB  |          |  |
| 3 | 📢 ))) Audi   | 0                      | Stream 1    | ((*)) RTMP, 1920x1080, 30fps, 4MB  |          |  |
| 4 | Scer   | es                     | Stream 2    | (((*))) RTMP, 1920x1080, 30fps, 4MB  |          |  |
| 5 | <÷> Cam  | era Control            | Stream 3    | ((*)) RTMP, 1920x1080, 30fps, 4MB O Snapshot   |          |  |
|   | No   | lte                    | em          | Function Descriptions  |          |  |
|   | 1  | Channel S<br>Source Se |             | Drop down to select the image signal source  |          |  |
|   | 2  | REC Reco               | ord Setting | Start or stop recording; also select whether to synchronously stream or not  |          |  |
|   | 3  | Audio Sou<br>Manageme  |             | Manage the input and output audio sources; adjust the audio recording volume   |          |  |
|   | 4 Scenes Layout<br>Setting                                   |                        |             | Fast select the required production layout, or customize the background and scene style  |          |  |
|   | 5  | Camera C               | ontrol      | Provide IP video camera/ PTZ control   |          |  |
|   | 6  | 6 Main Screen Output   |             | Displays the program out video   |          |  |
|   | 7  | Recording<br>Bar       | Progress    | Displays current streaming /recording status and hard disk capacity<br><b><remark></remark></b> Please refer to <u>4.4.1 Status Icon Description</u> for details |          |  |

### 4.4.1 Icon Description of Status Display Bar

|                       | Off     | On    | Error            |                 |
|-----------------------|---------|-------|------------------|-----------------|
| Network               |         |       |                  |                 |
| Record                |         |       |                  |                 |
| Streaming 1 / 2 / 3   | (((1))) | ((1)) | ((1))            |                 |
|                       | Off     | On    | Fail to write in | Storage is full |
| Hard Drive (SATA HDD) | ()))    | SATA  | SATA             |                 |



| Hard Drive (USB) |                      | USB              | USB              | 0  |
|------------------|----------------------|------------------|------------------|----|
| USB Device       | ψ                    | ψ                | Ψ <mark>ο</mark> | to |
|                  | Operation<br>Invalid | Snapshot<br>Fail |                  |    |
| Others           | 0                    | . <mark>O</mark> |                  |    |

### 4.4.2 REC Record Setting

| Rec       | Record Sync | 2<br>MP4, 1920x1080, 60fps, 6MB     | 4 🔳 🕨 Live 5   |
|-----------|-------------|-------------------------------------|----------------|
| ))) Audio | Stream 1    | ((+)) 3 RTMP, 1920x1080, 30fps, 4MB | Intermission 6 |
| Scenes    | Stream 2    | (((+))) RTMP, 1920x1080, 30fps, 4MB |                |
| <         | Stream 3    | (((*))) RTMP, 1920x1080, 30fps, 4MB | Snapshot 7     |

| No | Item                           | Function Descriptions  |  |  |
|----|--------------------------------|--|--|--|
| 1  | Recording while Push           | After checking the box, press recording button <b>to</b> start push and recording function |  |  |
| 2  | Enable/Stop/Pause<br>Recording | <ul> <li>Enable/Stop Recording</li> <li>Pause/Keep Recording</li> </ul>                    |  |  |
| 3  | Single-channel Push<br>Button  | Push right away without starting recording function  |  |  |
| 4  | Index                          | Timestamp can be added after the recording starts  |  |  |
| 5  | Live image                     | Switch to live image   |  |  |
| 6  | Intermission screen            | Switch to intermission screen  |  |  |
| 7  | Photo Capture                  | Capture a photo  |  |  |

### 4.4.3 Audio Source Management

| Rec                 |                | Input 2    |                           | Line in & USB | PGM Level  | Line & HDMI out<br>Level |
|---------------------|----------------|------------|---------------------------|---------------|------------|--------------------------|
| 📢 ))) Audio         | 2 100          | 100        | 100 Phantom<br>power +48V | 100           | 100        | 100                      |
| Scenes              | 3              |            |                           |               | <b>(</b> ) | <b>■</b> ≫               |
| <+>> Camera Control | 4 HDMI / SDI 🔹 | HDMI/SDI 🗸 | Line Level                | Line-in 🔹     |            | All 🗸                    |

| No | Item                 | Function Descriptions              |  |
|----|----------------------|------------------------------------|--|
| 1  | Volume Control       | Adjust the volume of audio input   |  |
| 2  | Audio Volume scale   | Display current audio volume scale |  |
| 3  | Mute button          | Mute audio output                  |  |
| 4  | Audio Source Setting | Select an audio source             |  |
| 5  | XLR 48V 幻象電源         | 開啟/ 關閉 48V 幻象電源                    |  |



### 4.4.4 Scenes

| • Rec 1             | Scenes     |                      | Charles |     |
|---------------------|------------|----------------------|---------|-----|
| ∎())) Audio 2       | Layout     | 1                    | 1       | 1 2 |
| Scenes 3            | Overlay    | 2                    | 1       |     |
| < +> Camera Control | Background | Libe Video Streaming | 2       |     |

| No | ltem       | Function Descriptions  |  |  |
|----|------------|--|--|--|
| 1  | Scenes     | Scenes page is the integration of "Overlay," "Background Image," and "Recording Layout," which can perform a series of scene change according to your needs. |  |  |
| 2  | Layout     | Apply a different layout to highlight the screen focus of different channels. Click the layout style to apply.   |  |  |
| 3  | Overlay    | Select a desired style to apply  |  |  |
| 4  | Background | Display the background images supported by "Director" system. Click the thumbnail to apply   |  |  |

 $\sim$ 

### 4.4.5 Camera Setting


| ● Rec       1       Camera       -         (1)       Camera       -       -         (2)       Preset       1       2       3         (2)       Scenes       4       5       6         (2)       7       8       9         (1)       Camera Control       Store | 3<br>4<br>5<br>6<br>7<br>AF / MF Focus+ Focus+<br>Com speed 6<br>Pan speed 6<br>Tilt speed 6<br>Tilt speed 6 |
|--|--|
|--|--|

| No | ltem                    | Function Descriptions  |  |
|----|-------------------------|--|--|
| 1  | Camera                  | Select a desired camera to control   |  |
| 2  | Preset Setting and Call | Click number buttons to perform preset setting and calls   |  |
| 3  | Direction Control Panel | Move the center point to control the shooting direction<br><b><remark></remark></b> Web pages do not support trackball controls. Please use<br>arrow buttons to adjust the screen direction. |  |
| 4  | Zoom In/Zoom Out        | Zooms in/out the lens  |  |
| 5  | Focus Setting           | Set up auto or manual focus  |  |
| 6  | Tracking Setting        | Set the tracking function on/off   |  |
|    |                         | <remark> Only tracking camera is supported.</remark>   |  |
| 7  | PTZ Speed Setting       | Set up the moving speed of Pan Tilt Zoom   |  |



### 4.5 File management

LC100/LC100N provides file management feature which can perform the following functions via the file management interface: Upload, download, delete, replay video files and editing recording information.

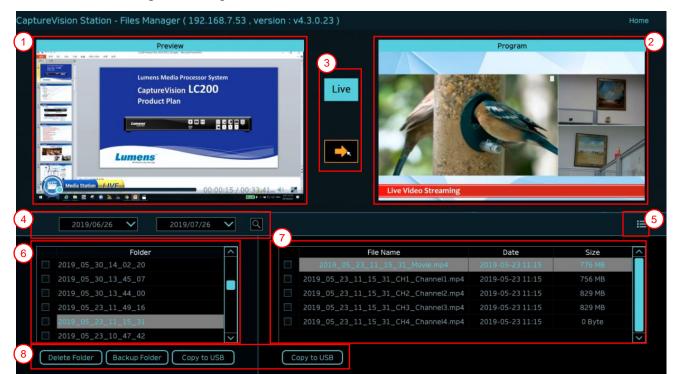


| No | ltem                    | Function Descriptions   |
|----|-------------------------|---|
| 1  | Preview screen          | Click desired video files to play and control on the Preview screen           |
| 2  | Program screen          | Display the Director screen or switch to synchronize with the Preview screen  |
| 3  | Screen Switch<br>Button | Switch the Program screen to the LIVE Director screen or the Preview screen   |
| 4  | Discovery               | You can search recording video files by selecting date period on the calendar |
| 5  | Display Mode<br>Switch  | Video view mode. You can switch to thumbnail mode or list mode                |
| 6  | Folder Display          | Display the recording video folders   |
| 7  | Video File Display      | Display the files in the video folder   |
| 8  | File management         | Delete, backup or copy recording video to an external USB flash drive         |

## **Lumens**®

#### 4.5.1 Web Page Interface

The default page after accessing LC100/LC100N web page is system setting page. Click the video management icon on the top-right corner to access video management page.

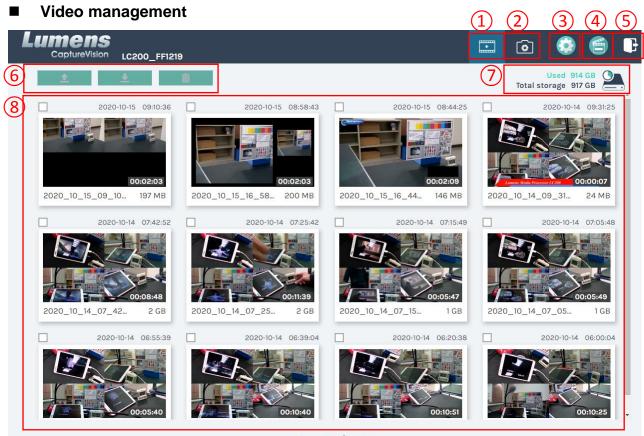

#### 1 • 2 > 27

| No | Item                         | Function Descriptions  |  |
|----|------------------------------|--|--|
| 1  | Video<br>management          | Click to access the video management page  |  |
| 2  | Photo<br>Management          | Click to access the picture management page  |  |
| 3  | System settings              | Click to access the system setting page<br><b>Note&gt;</b><br>Log in the web page with admin/admin to display system setting subpage<br>If you log in the web page with video/video, you will not find the system setting<br>subpage and you can only manage videos and photos |  |
| 4  | Online Director              | Click to enter the Online Director page  |  |
| 5  | Logout                       | Click this icon to log out the web page interface  |  |
| 6  | File management              | Upload, download and delete the checked video files  |  |
| 7  | Hard Drive Status<br>Display | Display the used space and the capacity of the current hard drive  |  |
| 8  | Video File Display           | List information, including the file names of recording videos, thumbnails, capacity, and date   |  |



### File Management Description

### Uploading

Check the thumbnails of the videos to upload. Click [1] and the videos will be uploaded to the location set in Upload Settings. Please refer to [System Management/Upload Settings] for related settings.

Upload Status Description:

| Icon | Upload Status                    | lcon | Upload Status                |
|------|----------------------------------|------|------------------------------|
|      | Videos are uploaded successfully |      | Videos are queued for upload |
| 12   | Fail to upload videos            |      | Videos are uploading         |

#### Downloading

Check the thumbnails of the videos to download. Click [ ] and the videos will be saved as MP4 video files and datasets.

If only video files are needed, you can click the video thumbnails and access video playback page to download the video files only.

### > Delete

Check the thumbnails of the videos to delete. Click [11] and the video files will be deleted permanently.

### Video Playback

Right-click video to preview the video, edit the related content data, and download the video file and dataset

| 1   | Movie 2019-08-22 13:39:32  | (2) | Content  |
|-----|--|-----|--|
|     |  |     | Title :     2019_08_22_13_39_32       Organization : |
|     | Auftil Landballer Eater Totalite Exten<br>Auftil Landballer Eater Totalite Exten<br>Best / Dell<br>Ext / Del |     | Camera Color Test Semester : Topic : Level :         |
| (3) | Movie 25 MB  |     | Audience : Room :                                    |
| (4) | 👤 Download   | (5) | Арріу  |

| No | Item                   | Function Descriptions                          |
|----|------------------------|--|
| 1  | Video Control Window   | Play back and control recording videos         |
| 2  | Video Content          | Edit and modify video content                  |
| 3  | Video File and Dataset | Select the video files or datasets to download |




| 4 | Download Button | Click this button to download the checked video files or datasets         |
|---|-----------------|---|
| 5 | Apply Button    | After editing and modifying the video content, click this button to apply |

#### Photo Management

You can manage the photo files captured by pressing SNAPSHOT. Folders will be named with the shooting date automatically; all photos shot in the same date will be stored in the same folder.

Just like Video Management, you can also upload, download, and delete photos in Photo Management subpage.

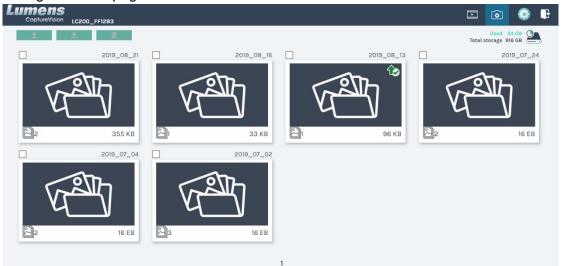



## Chapter 5 Troubleshooting

This chapter describes problems you may encounter while using LC100/LC100N. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurred, please contact your distributor or the service center.

| No. | Problems  | Solutions   |  |  |
|-----|---|---|--|--|
| 1.  | Boot without power signal   | Make sure you have plugged in the power cord  |  |  |
| 2.  | No image output   | <ol> <li>Check the power</li> <li>Check if the input/output device cables are loose</li> <li>Replace the cables and make sure they are not faulty</li> <li>Make sure if the signal source connects to the device<br/>correctly</li> <li>Confirm whether the machine is in standby mode. Tap<br/>LC100/LC100N Power button to wake the machine</li> <li>LC100/LC100N cannot record video from a video output<br/>including HDCP format</li> </ol>  |  |  |
| 3.  | The panel buttons are not responding  | Panel Lock function setting on the web page and turn off  |  |  |
| 4.  | LC100/LC100N cannot<br>perform camera control after<br>connecting to a camera                               | Please make sure the dial setting of Camera<br>Address Selector is 0. LC100/LC100N cannot<br>identify camera correctly if it is not 0   |  |  |
| 5.  | You cannot log in the web<br>page administration<br>interface if you forget the<br>password                 | If you forget the default password, please press the Reset button on the panel to restore the factory setting   |  |  |
| 6.  | Webpage login failed  | <ol> <li>Confirm whether the machine is in standby mode. Tap<br/>LC100/LC100N Power button to wake the machine</li> <li>Please confirm whether the password is correct. If you<br/>forget your password, please refer to Troubleshooting #5</li> </ol>  |  |  |
| 7.  | LC100/LC100N cannot find the camera   | <ol> <li>Please link to the web page of the camera to make sure<br/>that [Setting]&gt; [Video]&gt; [Camera ID]/[Camera Location] in<br/>the web page uses only English letters or numbers.<br/>LC100/LC100N cannot find the machine if you use special<br/>characters and space.</li> <li>When the LC100/LC100N is connected to a switch and the<br/>switch IGMP function is on, it will not be able to search for<br/>cameras in the local area network. Please disable the IGMP<br/>function first and then search for cameras again</li> </ol> |  |  |
| 8.  | Recording to a USB storage<br>device. The video file of the<br>USB flash drive cannot be<br>played normally | <ol> <li>Confirm USB flash drive format. The supported formats are:<br/>exFAT/ EXT4</li> <li>Please use LC100/LC100N for formatting, please refer to</li> <li><u>4.3.6 Storage Settings - Hard Drive Information</u></li> <li>To ensure proper storage and playing of recorded files,<br/>please remove the USB flash drive 30 seconds after the<br/>recording is finished</li> </ol>   |  |  |



## **Chapter 6 Safety Instructions**

Always follow these safety instructions when setting up and using the LC 100 CaptureVision Station:

#### 1 Operation

- 1.1 Please use the product in the recommended operating environment, away from water or source of heat
- 1.2 Do not place the product on a tilted or unstable trolley, stand or table.
- 1.3 Please clean the dust on the power plug prior to usage. Do not insert the product's power plug into a multiplug to prevent sparks or a fire.
- 1.4 Do not block the slots and openings in the case of the product. They provide ventilation and prevent the product from overheating.
- 1.5 Do not open or remove covers, otherwise it may expose you to dangerous voltages and other hazards. Refer all servicing to licensed service personnel.
- 1.6 Unplug the product from the wall outlet and refer servicing to licensed service personnel when the following situations happen:
  - If the power cords are damaged or frayed.
  - If liquid is spilled into the product or the product has been exposed to rain or water.

#### 2 Storage

- 2.1 Do not place the product where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
- 2.2 Unplug this product during thunderstorms or if it is not going to be used for an extended period.
- 2.3 Do not place this product or accessories on top of vibrating equipment or heated objects.

#### 3 Cleaning

3.1 Disconnect all the cables prior to cleaning and wipe the surface with a dry cloth. Do not use alcohol or volatile solvents for cleaning.

#### 4 Batteries (for products or accessories with batteries)

- 4.1 When replacing batteries, please only use similar or the same type of batteries
- 4.2 When disposing of batteries or products, please adhere to the relevant instructions in your country or region for disposing of batteries or products

#### FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

Notice :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

#### IC Warning

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada. Cet appareil numerique respecte les limites de bruits radioelectriques applicables aux appareils numeriques de Classe A prescrites dans la norme sur le material brouilleur: "Appareils Numeriques," NMB-003 edictee par l'Industrie.

#### EN55032 CE Warning

Operation of this equipment in a residential environment could cause radio interference. Warning: Operation of this equipment in a residential environment may cause radio interference

#### BSMI Warning

Warning to users:

This is a Class A information technology product which may cause radio frequency interference when used in a residential environment, in which case the user will be required to take certain appropriate measures.



## Addendum 1

### ■ Frequently used port No.

| Port No.        | Description   |  |
|-----------------|---|--|
| 1935/TCP        | Applicable for RTMP push to most platforms, such as YouTube, Vimeo, and       |  |
| 1930/10P        | Twitch  |  |
| 80/TCP          | Applicable for RTMP push to Periscope   |  |
| 443/TCP         | Applicable for RTMPS push to Facebook   |  |
| 1935/TCP        | Applicable for DTMD such to Linkedle  |  |
| 1936/TCP        | Applicable for RTMP push to LinkedIn  |  |
| 2935/TCP        | Applicable for DTMDC much to Linkedly   |  |
| 2396/TCP        | Applicable for RTMPS push to LinkedIn   |  |
| 443/TCP (HTTPS) | Applicable for platforms with built-in HTTPS security authentication, such as |  |
| 443/10F (111P3) | YouTube, Facebook, Ustream, Livestream, and Twitch                            |  |
| 53/UDP (DNS)    | Applicable to services of changing DNS IP address                             |  |



## **Copyright Information**

Copyrights © Lumens Digital Optics Inc. All rights reserved.

Lumens is a trademark that is currently being registered by Lumens Digital Optics Inc.

Copying, reproducing or transmitting this file is not allowed if a license is not provided by Lumens Digital Optics Inc. unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, the information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies without any intention of infringement.

Disclaimer of warranties: Lumens Digital Optics Inc. is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.



### Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Manufacturer : Lumens Digital Optics Inc. Product Name : LC100/LC100N Model Number : CaptureVision Station

### **Responsible Party – U.S. Contact Information**

Supplier : Lumens Integration, Inc. 4116 Clipper Court, Fremont, CA 94538, United States e-mail : support@mylumens.com

#### **FCC Compliance Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

