

PS760 Quick Start Guide

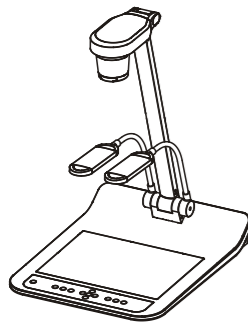
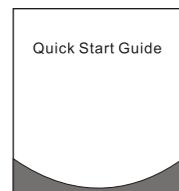
Lumens™

⚠ Important

* Please activate your warranty at www.lumens.com.tw/reg

* Please visit our website www.lumens.com.tw/goto.htm to download latest version of Software, Multilingual User Manual and Quick Start Guide.

1. Package Contents






PS760

Quick Start Guide


* To download this manual in other languages, visit Lumens website




Download & Safety Instruction

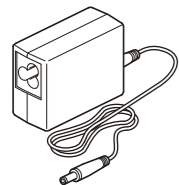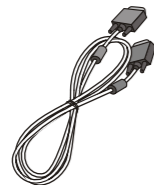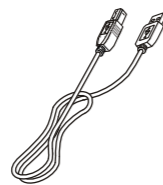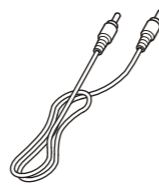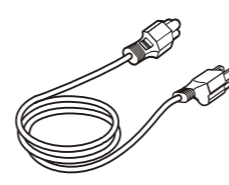4-Step Card

Mini DIN Adapter



AC Adapter

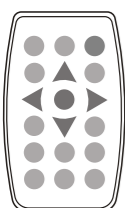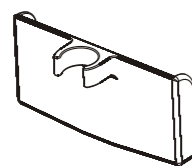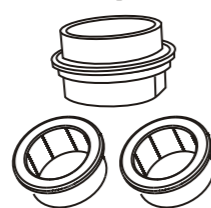VGA Cable

USB Cable

Audio Cable

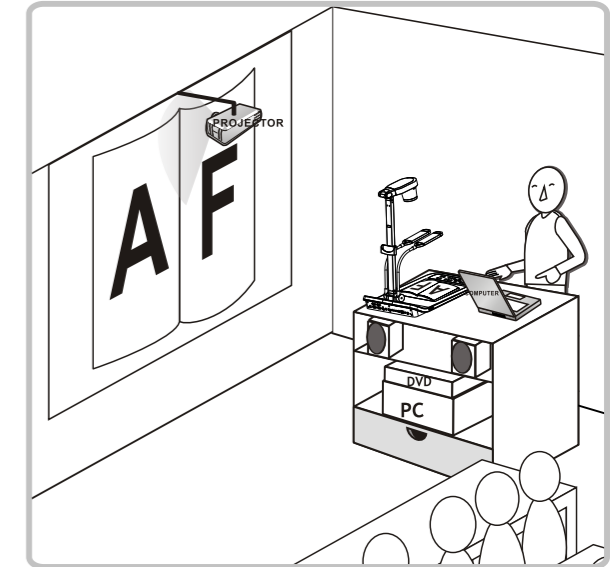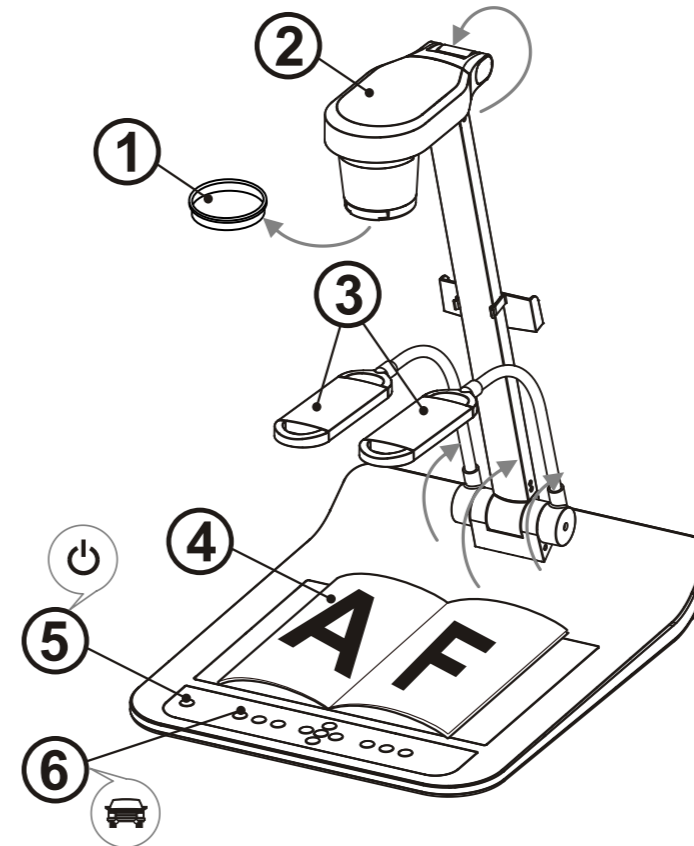Power Cord



* Appearance may vary in different countries



Remote Control

Remote Control Holder

Microscope Adapter


⚠ The package contents are subject to change without notice.

2. Getting Started



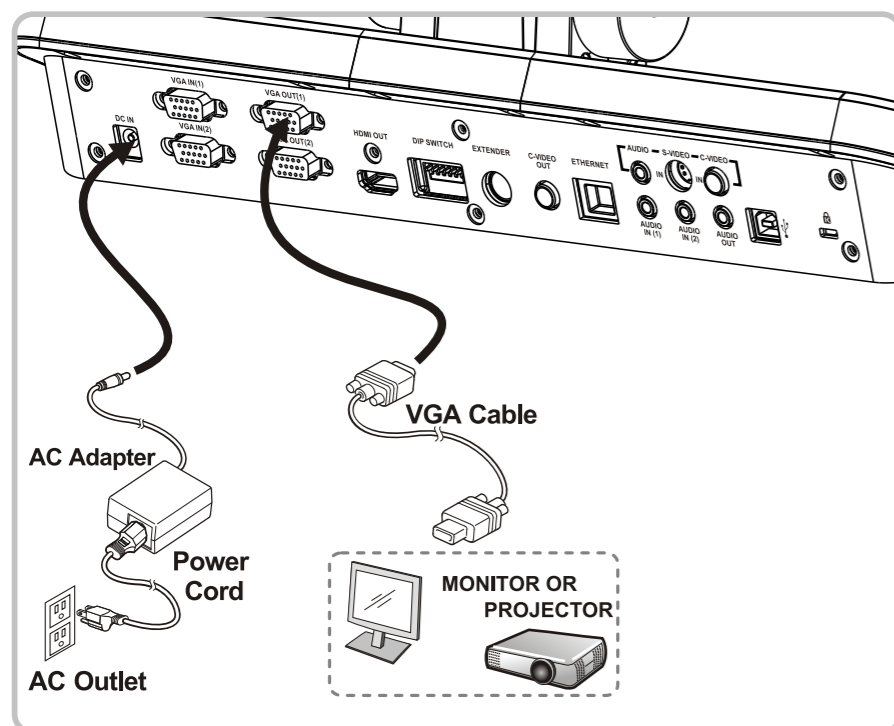
* Please confirm the local voltage and frequency, for example the default 60Hz applicable in the US, Taiwan, Japan, etc., and 50Hz in Europe and other areas. Please set up the DIP SWITCH as in figure on the right ; please see [PS760 User's Manual Attachment 1](#) for the frequency actually used.

- ① Remove the lens cap.
- ② Pull up the camera and the camera arm. The camera should aim at the center of the presenter.
- ③ Pull up the lamp arm and adjust it to appropriate position.
- ④ Place an object to be displayed under the camera.
- ⑤ Turn the power on. 
- ⑥ Press the [AUTO TUNE]  button to optimize the image. You are ready to teach / present.


* According to your request, you can adjust the camera head slightly to aim at the center of the documents when the anchor of lens was reached.

3. Installation & Connection


▼ Connect to a Projector or Monitor



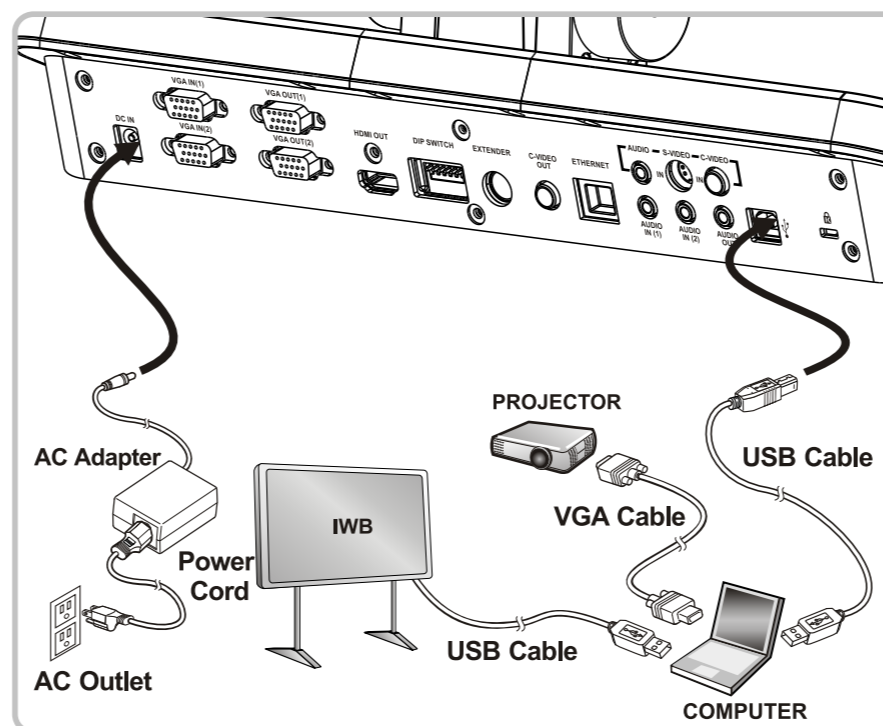▼ Connect to a Computer and Use Lumens' Software or Connect to an Interactive Whiteboard (IWB).




▼ Connect to the Network

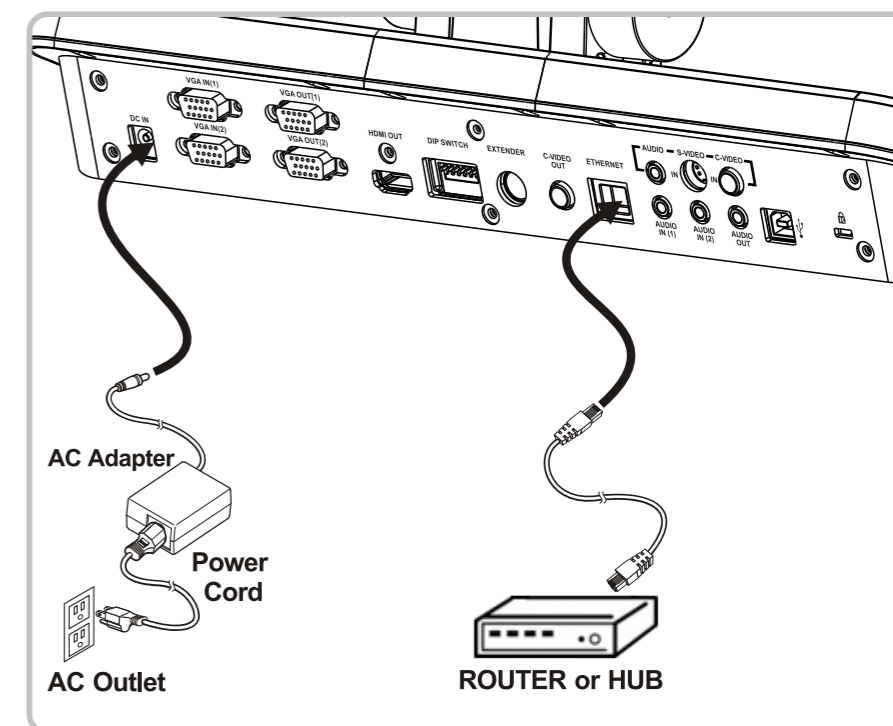


* Driver and software can be downloaded from Lumens website.

* For detailed menu and functions of PS760, please refer to [PS760 user manual](#).

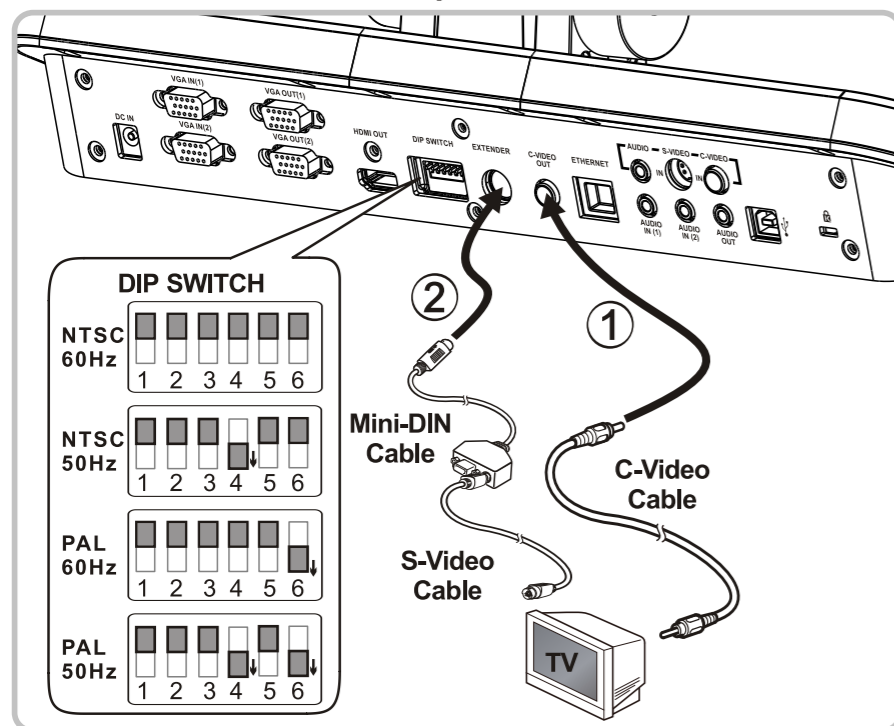
▼ Connect to a TV (via C-Video or S-Video)



▼ Connect to an HDTV

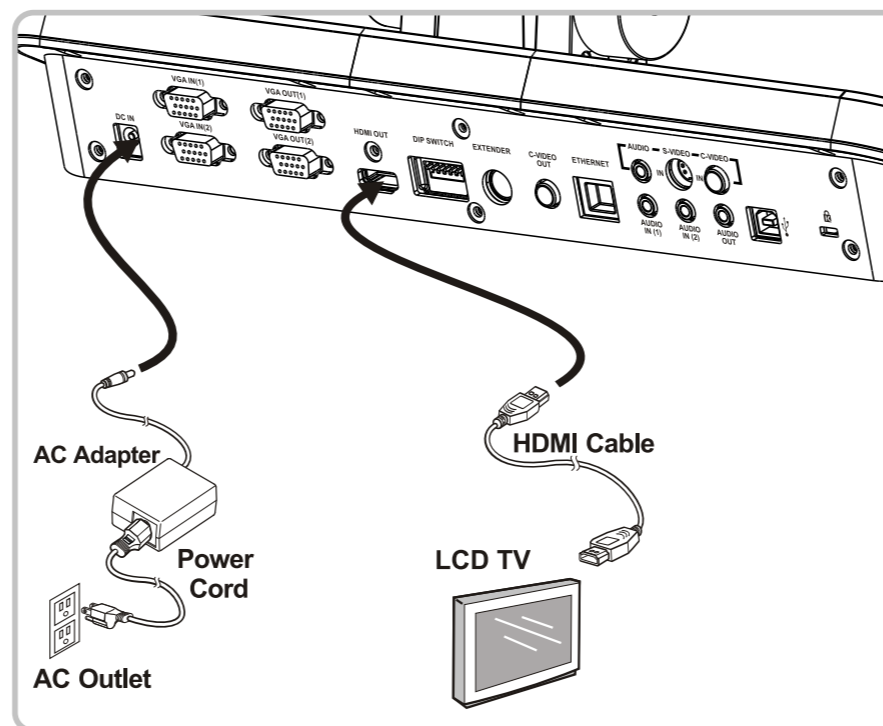

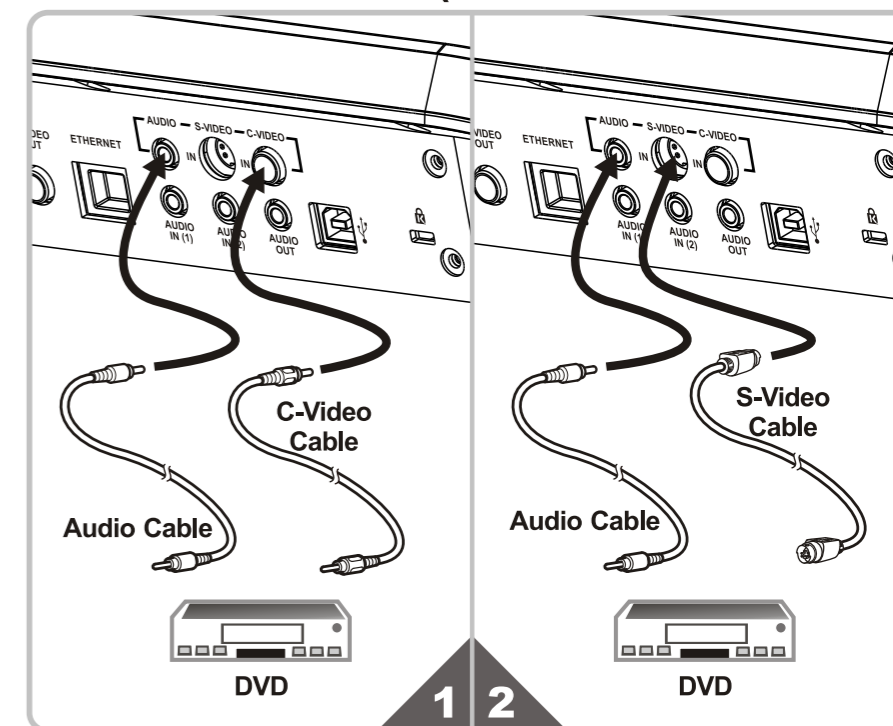▼ Connect to DVD (via C-Video or S-Video)



* NTSC: USA, CANADA, MEXICO, PANAMA, CHILE, JAPAN, TAIWAN, KOREA AND PHILIPPINES.

* PAL: Country / region not listed above.

* Please confirm the local voltage and frequency, for example the default 60Hz applicable in the US, Taiwan, Japan, etc., and 50Hz in Europe and other areas. Please see [PS760 User's Manual Attachment 1](#) for details.

* To make DIP switch set up effectiveness, please re-plug the power cord and reboot the machine.