



# VC-B50U Quick Installation Guide

## 1. Product connection

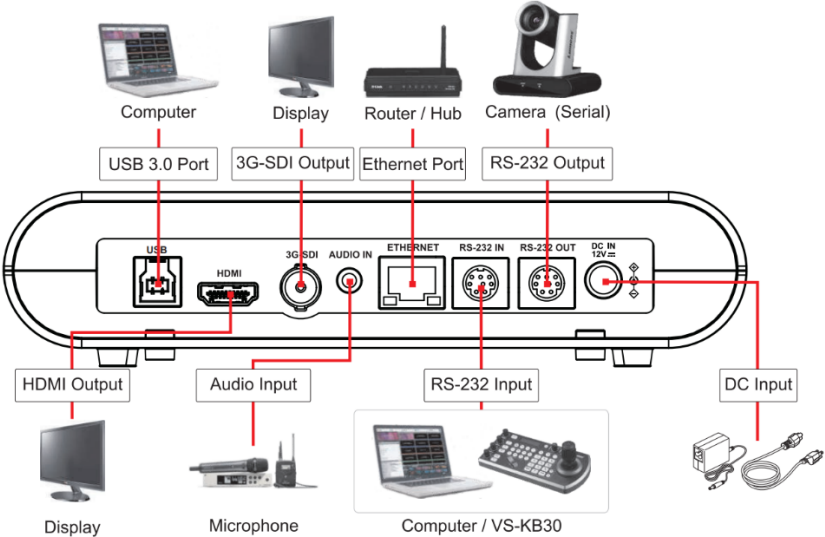

## 2. I/O Functions

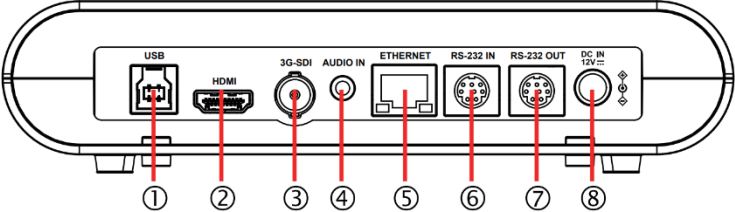

No.	Item	Description
1	USB 3.0 Port	Connect to PC and output video via USB
2	HDMI	HDMI output
3	3G-SDI	3G-SDI output
4	Audio IN	3.5mm Line In
5	Ethernet Port	Network port supporting PoE (IEEE802.3af) via Ethernet switch
6	RS-232 Input	RS-232 input (connect up to 7 cameras)

7	RS-232 Output	RS-232 output (connect up to 7 cameras)
8	DC IN	DC 12V power input port

## 3. Camera Live View

- HDMI / 3G-SDI Output**  
Connect an HDMI or SDI cable to output camera video.
- USB Output**  
Connect to computer with a USB cable to view live image. Camera can be used as a webcam with video conferencing applications.
- Network Output**  
Connect camera to network router using Cat5e to view live video and control the camera via a web browser.

### 1. Check Camera IP Address

DHCP default is enabled. Check IP

Address from [Menu] > [Ethernet]

\*Default camera IP: 192.168.100.100

(connecting the camera directly to PC).

Ethernet	ON
DHCP	ON
IP Address	192.168.4.68
Subnet Mask	255.255.255.0
Gateway	192.168.4.254

2. Open a web browser, and enter the IP address in the address bar.

192.168.4.68



3. Login with the account and password to access the live view and control interface.

- **Account: admin**
- **Password: 9999**

※For questions about installation, please scan the following QR Code; a support person will be assigned to assist you



Get Help ?