

OIP-N60D/ OIP-N60D, Dante AV-H/ OIP-N60D-ND Bridge

User Manual - English



[Important]

To download the latest version of Quick Start Guide, multilingual user manual, software, or driver, etc., please visit Lumens
<https://www.MyLumens.com/support>

Table of Contents


Chapter 1	Package Contents	2
Chapter 2	Product Installation	3
2.1	I/O Interface.....	3
2.2	Product Installation	3
2.3	Description of Indicator Display	4
Chapter 3	Product Operation	5
3.1	Operating using the rocker switch.....	5
3.2	Operate via webpages	5
Chapter 4	Product Application and Connection	6
4.1	Signal Source Transmission	6
4.2	▪ USB Camera Extension over network (OIP-N40E/OIP-N60D required)6	
Chapter 5	Setting Menu	8
5.1	OIP-N60D	8
Chapter 6	Webpage Interface.....	9
6.1	Connecting to Internet	9
6.2	Log into the webpage	9
6.3	Webpage Menu Description.....	10
Chapter 7	Troubleshooting	28
Chapter 8	Safety Instructions	29
	Copyright Information.....	30

Chapter 1 Package Contents

OIP –N60D Bridge



USB 2.0 cable (1.8 M)
(Type A Type C)

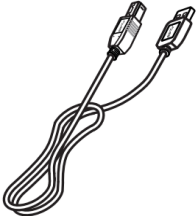

Locking metal plate (x2)




M3 metal plate screw (4x4)



Chapter 2 Product Installation

2.1 I/O Interface


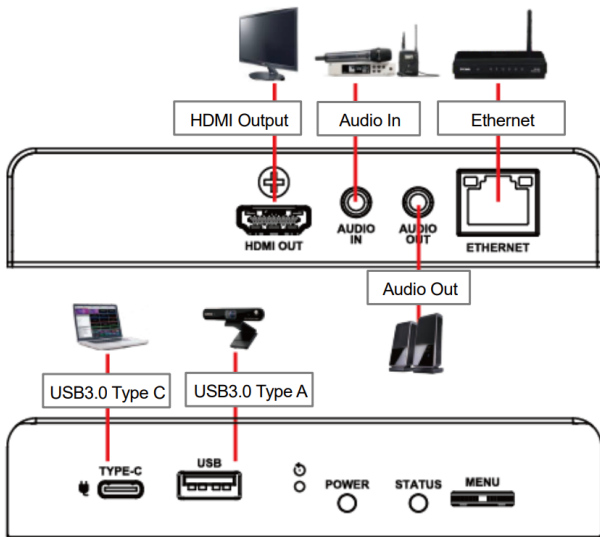


Note We recommended using high-performance USB-C cables (10Gbps or higher)

2.2 Product Installation


■ Using the accessory metal plates

1. Lock the accessory metal plate with screws (M3 x 4) to the lock holes on both sides of the OIP Bridge
2. Screw the metal plate to the desk or other surface as required.

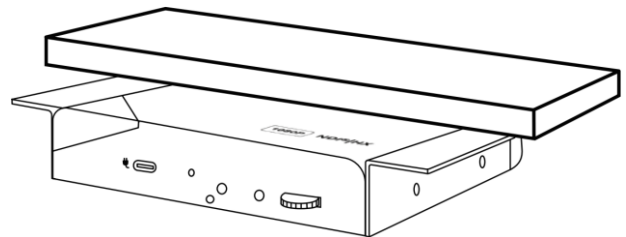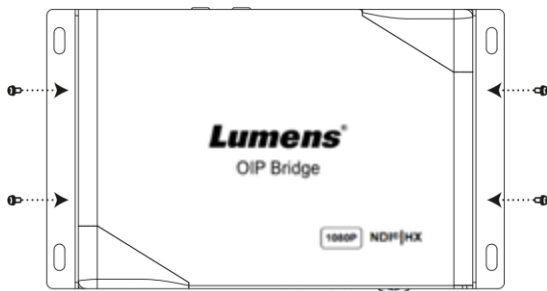

■ Tripod mounting

The camera can be mounted on a 1/4"-20 UNC PTZ tripod deck by using the lock holes on the side for the tripod of OIP Bridge.

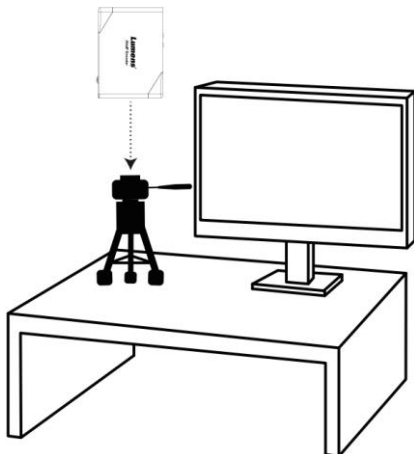


2.3 Description of Indicator Display

Power Status	Tally Status	Power	Standby	Tally
Startup in progress (initialization)	-	Red light	-	Flickering Red/Green light
In use	Signal	Red light	Green light	-
	No Signal			-
	Preview			Green light
	Program			Red light

Chapter 3 Product Operation

3.1 Operating using the rocker switch

Connect the HDMI OUT to the display, press the Menu dial to enter the OSD menu. Move the rocker switch to navigate the menu and adjust the parameters

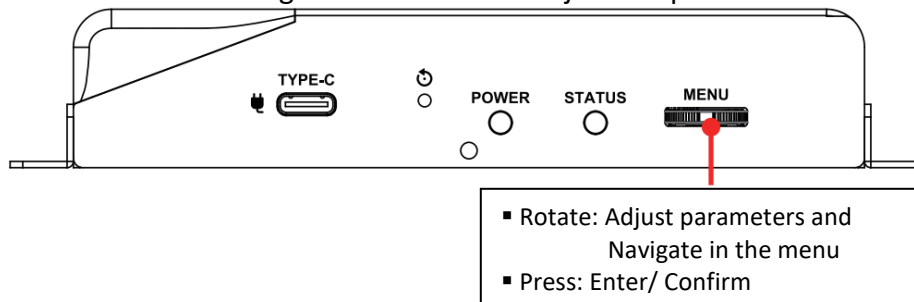

3.2 Operate via webpages

(1) Confirm the IP address

Refer to [3.1 Using the rocker switch](#), confirm the IP address in Status (If the OIP-N40E is directly connected to the computer, the default IP is 192.168.100.100. You need to manually set the computer's IP address in the same network segment.)

Encode	Input	Network	Status
IP Address :	192.168.4.147		
Netmask :	255.255.255.0		
Gateway :	192.168.4.254		
MAC ID :	dc:e2:ac:03:50:3		
HDMI Output :			
FW Version :	0IA0.00k		
			Exit

(2) Open the browser and input the IP address, e.g. 192.168.4.147, to access the login interface.



(3) Please enter the account/password to log in

- Account : admin
- Password : 9999

Chapter 4 Product Application and Connection

4.1 Signal Source Transmission

The OIP-N60D can convert in IP signal source to USB or HDMI.

Note: When using a USB connection to the OIP, a USB 3.1 Gen2 (10Gbps) cable is required.

(1) Connection Method

Connect the OIP-N60E and the computer to the network switch using network cables, so that you can access the OIP-N60D webpage for configuration.



(2) USB Output (IP to USB)

Connect a camera on the network then enable the Virtual USB Output to display the UVC image from an IP camera on a computer.


*[Source] list > Connect camera > Press [Source 1] or [Source 2] to display image
[System] > [Output] > Enable [Virtual USB Output]*



(3) HDMI Output (IP to HDMI)

Connect a camera on the network then display it on the HDMI display.

[Source] list > Connect camera > Press [Source 1] or [Source 2] do display image

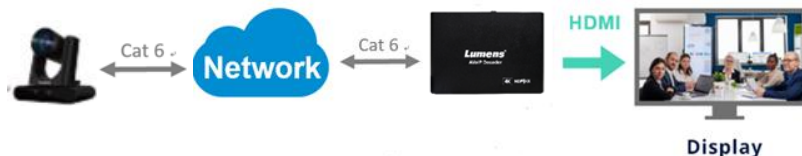

4.2 ■ USB Camera Extension over network (OIP-N40E/OIP-N60D required)

OIP supports network bridging. Use the OIP-N40E with the OIP-N60D to extend the range of USB cameras over the local area network.

Note: When using a USB connection to the OIP, a USB 3.1 Gen2 (10Gbps) cable is required.


(1) USB Webcam extension

- Connect the OIP-N40E with the OIP-N60D in the Source list.
- Connect the USB camera to the OIP-N60D using a USB-A cable
- Connect a computer to the OIP-N40E using a USB-C cable.

OIP-N60D: [System] > [Output] > Enable [USB Extender] and [Virtual USB]

OIP-N40E: [System] > [Output] > Connect the OIP-N60D in the [Extender Source List]

The USB camera image will be output to the computer though the OIP-N40E's USB output.

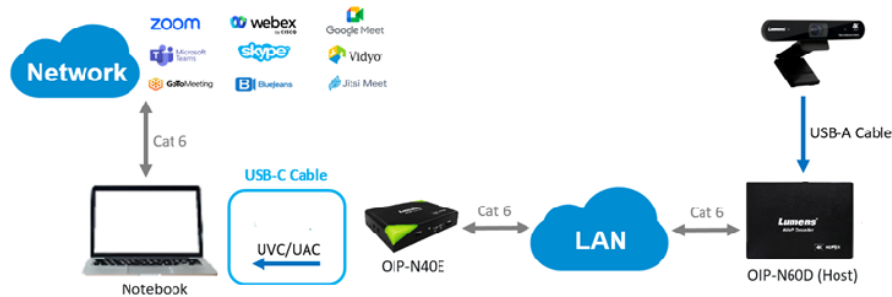

(2) USB Webcam extension + DP output


- Connect the OIP-N40E with the OIP-N60D in the Source list.
- Connect the USB camera to the OIP-N60D using a USB-A cable
- Connect a computer to the OIP-N40E using a USB-C cable

OIP-N60D: [System] > [Output] > Enable [USB Extender] and [Virtual USB]

OIP-N40E: [System] > [Output] > Connect the OIP-N60D in the [Extender Source List]

OIP-N40E: [Stream] > [Source] > [Select DP]

The computer can use the USB camera as the webcam and project the meeting live view to the HDMI display.

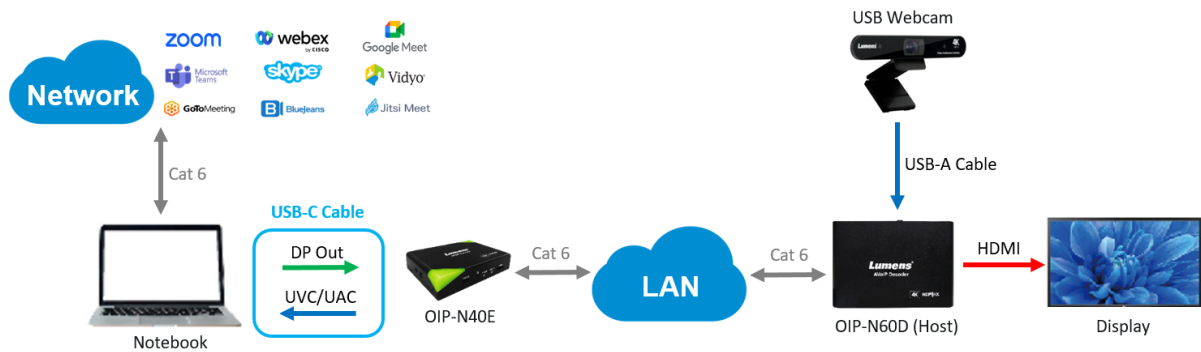

Chapter 5 Setting Menu

Using the rocker switch **[Menu]** enter the setting menu; the **bold underlined** values in the following table are defaults.

5.1 OIP-N60D

1st Level Major Items	2nd Level Minor Items	3rd Level Adjustment Values	Function Descriptions
Source	Source List	-	Display the signal source list
	Blank Screen	-	Display black screen
	Scan	-	Update the signal source list
Output	HDMI Audio From	Off / Follow Stream/Follow Routing/ Follow Dante	Select the HDMI audio source
	Audio Out From	Off / Follow Stream/Follow Routing/ Follow Dante	Select where audio outputs to
	HDMI Output	By Pass Native EDID 4K@60/ 59.94/ 50/ 30/ 29.97/ 25 1080p@60/ 59.94/ 50/ 30/ 29.97/ 25 720p@60/ 59.94/ 50/ 30/ 29.97/ 25	Select the HDMI output resolution
Network	IP Mode	Static/ DHCP / Auto	Dynamic Host Configuration
	IP Address	<u>192.168.100.200</u>	Configurable when set to Static
	Subnet mask (Netmask)	<u>255.255.255.0</u>	
	Gateway	<u>192.168.100.254</u>	
Status			Display the current machine status

Chapter 6 Webpage Interface


6.1 Connecting to Internet

Two common connection methods are shown below

1. Connecting via switch or router



2. To connect directly using a network cable, the IP address of the keyboard/computer should be changed and set as the same network segment.

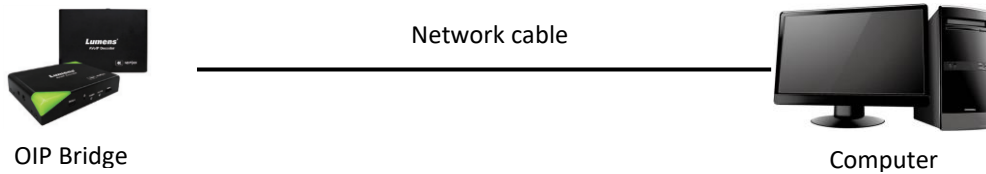


6.2 Log into the webpage

1. Open the browser, and enter the URL of OIP-N in the IP address bar

E.g.: <http://192.168.4.147>

2. Enter the administrator's account and password

Note For a first-time login, please refer to [6.1.10 System- User](#) to change the default password

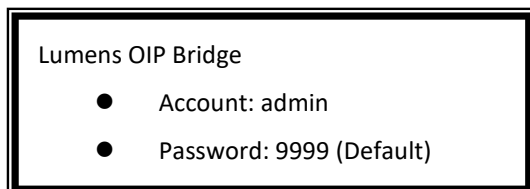

6.3 Webpage Menu Description

6.3.1 Dashboard

OIP-N60D

Default

EN

OIP-N60D

Dashboard

Source

Audio

Layout

System

Maintenance

About

HELLO ☐

Output Info:

Resolution: 1920x1080p 59.94

Color Format: RGB

Audio Delay: HDMI Out OFF

Audio Out OFF

Source 1 Info: No Data

Device ID: ---

Location: ---

IP Add.: ---

Stream Format: ---

Codec: ---

Resolution: ---

Audio Sample Rate: ---

Source 2 Info: No Data

Device ID: VC-TR40N

Location: Default,192.168.6.112

IP Add.: 192.168.6.112

Stream Format: unknown

Codec: H264

Resolution: ---

System Info:

Device ID: OIP-N60D

Location: Default

Firmware Ver.: OIB1.25

CEC Mode: Disable

IP Add.: 192.168.6.39

MAC Add.: dc:e2:ac:03:52:9e

Function Descriptions

Display output, source, and system related information



HELLO: Enable this button to make the indicator light on the unit blink for one minute. It will then automatically turn off.

6.3.2 Stream

The screenshot displays the Lumens OIP-N60D web interface. On the left is a sidebar with navigation links: Dashboard, Source, Audio, Layout, System, Maintenance, and About. The main area shows the 'Source List' with a table of discovered sources. Below the table are buttons for 'Edit', 'Delete', 'Source 1', 'Source 2', and 'Standard'. At the bottom, there are tabs for 'NDI Options', 'RTSP Options', 'Picture Mode', and 'Last-In Switch'. The 'NDI Options' tab is active, showing fields for 'Group Name' (set to 'Public'), 'Discovery Service' (unchecked), and 'Server IP'.

No.	Name	Location	IP Add.	Type	Status	Remark
1	VC-TR40	Default	192.168.6.87	RTSP	Source 1	8557/h264
2	OIP-N40E	Default, 192.168.6.118	192.168.6.118	NDI	Standard	
3	1234-TR41N	Default, 192.168.6.69	192.168.6.69	NDI	Add	
4	A0-VC-TR61N	Default, 192.168.6.104	192.168.6.104	NDI	Add	
5	A0-VC-TR61N Panoramic	192.168.6.104	192.168.6.104	NDI	Add	

No	Item	Description
1	Search New Source	Click to search for devices in the same network segment and display them in a list
2	Search Mode (Only exists in non-Dante version)	Search from NDI&ONVIF / Only NDI / Only ONVIF
3	+Add	Manually add a device
4	Edit	Edit a connected device in the list.
5	Delete	Delete selected device in the list
6	Source1 &2	After connecting the source, click the Source button to output the image. A maximum of two sources can be output at the same time. <i>Note: The "Source 2" option will only be visible when the PBP or PIP function has been enabled in the Layout section.(Please refer to the section 6.3.4 Layout)</i>
7	Standard	After enabling Last-In Switch, click Standard Source to specify a standard source. When other source signals are lost, the system automatically switches to the specified source.

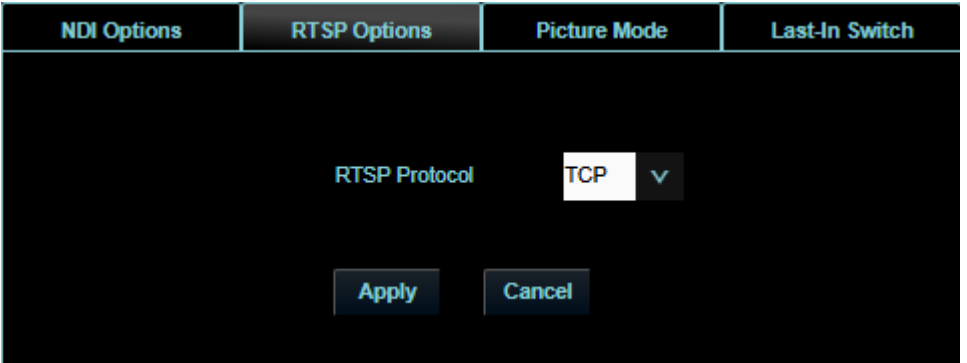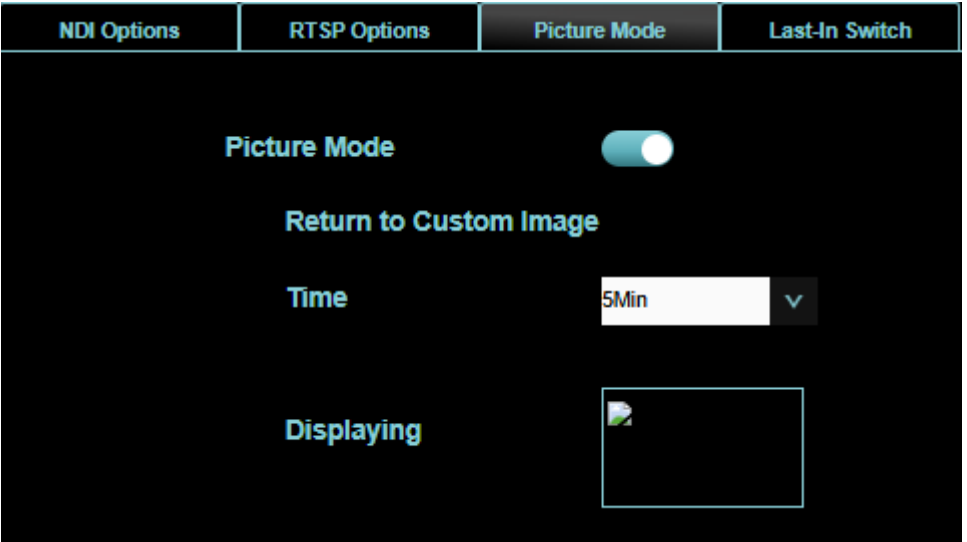8	NDI Options	 Group Name: Specify the group name. This setting corresponds to the configuration in NDI Tools > Access Manager > Receive. Server IP: Enable the Discovery Server and enter the server IP address.
9	RTSP Options	 RTSP Protocol: Select the RTSP transport protocol (TCP or UDP).
10	Picture Mode	 Picture Mode: Enable or disable continuous still image output. Time: Set the time before automatically switching back to the Custom Image. Displaying: Display the currently configured Custom Image.

11	Last-In Switch	NDI Options RTSP Options Picture Mode Last-In Switch Last-In Switch Last-In Switch: When enabled, the system automatically switches to the specified Standard Source when other source signals are lost.
----	----------------	--

Dante controller

Dashboard

Source

Audio

Layout

System

Maintenance

About

Voice Connect

Source List:

☒

No.	Name	Location	IP Add.	Type	Status	Remark
1				Dante AV-H	OK	For Dante
2	OIP-VC-R31	Default	192.168.6.90	RTSP	Source 1	8557/h264
3	OIP-VC-R31	Default	192.168.6.90	RTSP	OK	8556/h264
4	CV625-TB-TW	Default	192.168.6.104	ONVIF	Login	
5	VC-TR61N	Default	192.168.6.56	ONVIF	Login	
6	CV620-BI2-AA	Default-A	192.168.6.62	ONVIF	Login	
7	CamConnect_Processor	Default_C615	192.168.6.73	ONVIF	Login	
8	VC-TR60-125	Default	192.168.6.89	ONVIF	Login	
9	CamConnect_Processor	Default_eb0c	192.168.6.30	ONVIF	Login	
10	CV625-TB-TW	Default	192.168.6.72	ONVIF	Login	
11	VC-TR60ABC-602VC-TR61VC-TR60A	D	192.168.6.40	ONVIF	Login	
12	SC-CAM30LR	Default	192.168.6.64	ONVIF	Login	
13	VC-TR41N	Default	192.168.6.14	ONVIF	Login	
14	CV730	Default	192.168.6.96	ONVIF	Login	
15	OIP-N40E	Default	192.168.6.78	ONVIF	Login	
16	BC-200	Default	192.168.6.19	ONVIF	Login	
17	VC-TR60A-Dante-AV-H	MyCamera	192.168.6.86	ONVIF	Login	
18	VC-TR40N-NDI	MyCamera	192.168.6.61	ONVIF	Login	

▲

▼

Edit

Delete

Source 1


Source 2





To ensure the unit OIP-N60D can be recognized by the Dante Controller after enabling the Dante function, please follow the steps below:

1. Access the OIP-N60D web page
2. Navigate to the [Source] section
3. Select [Dante AV-H] as the source
4. Click [Source] to activate the stream

Remark: If the Source button is not activated, the device will not be detected properly by the Dante Controller.

6.3.3 Audio

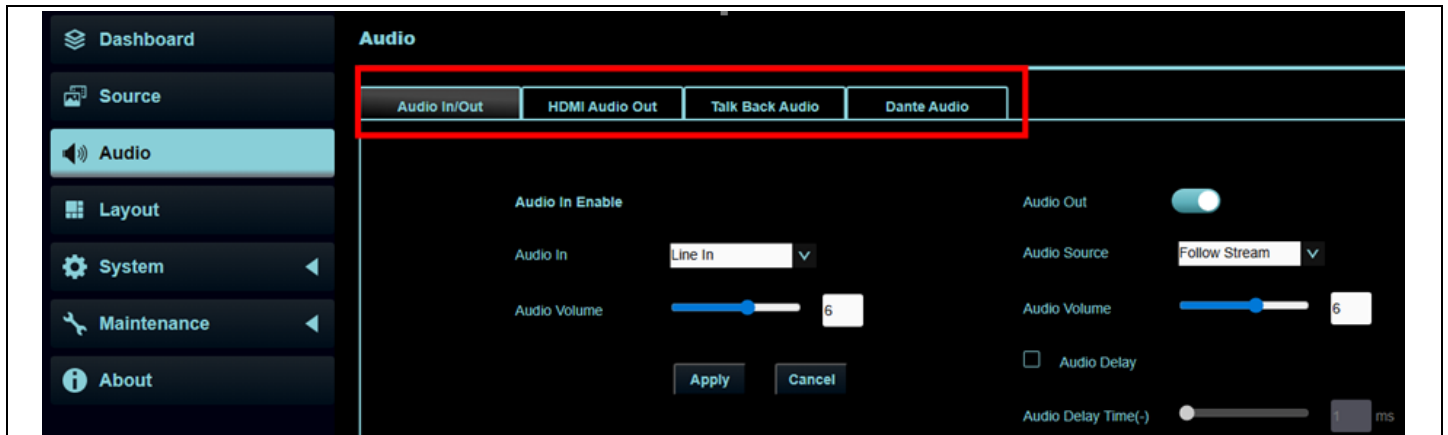

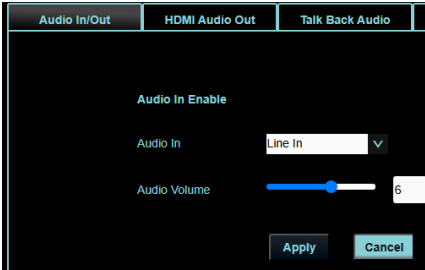No	Item	Description
1	Audio In / Out	▪ Audio In: Select Line in or Mic in for the Audio Input port  ▪ Audio Out: Enable or disable the Audio Output port.  The 3.5 mm output port can be connected to devices such as earphones or speakers  ▪ Source of the Audio Output port: - Follow Stream: Output the sound of the camera you connected in the N60D Source section.  - Follow Dante: Output the sound from a Dante device you connected with Dante Controller.  - Follow Routing: Output audio from the OIP-N40E's audio input.  <The Follow Routing function can only be achieved by connecting the OIP-N60D and OIP-N40E using the Lumens Routing Switcher software.>

Follow

Routing

Talkback

Monitoring

Audio Out

Monitoring	OIP-N60D Dante-AV-H	192.168.6.90			
Follow HDMI					
Monitoring					
Audio In	OIP-N40E	192.168.6.103			

Audio Volume: 0~10

Audio Delay Time: 1~500ms

HDMI Audio Out

Audio Source

Follow Stream

Audio Volume

5

Audio Delay

Audio Delay Time(-)

1 ms

HDMI Audio Out: Enable or disable HDMI Audio out

Audio Source:

Follow Stream: Output the sound of the camera you connected in the N60D Source section.


Follow Dante: Output the sound from a Dante device you connected with Dante Controller.

Follow Routing: Output audio from the OIP-N40E's audio input.


Lumens®

15


<The Follow Routing function can only be achieved by connecting the OIP-N60D and OIP-N40E using the Lumens Routing Switcher software.>



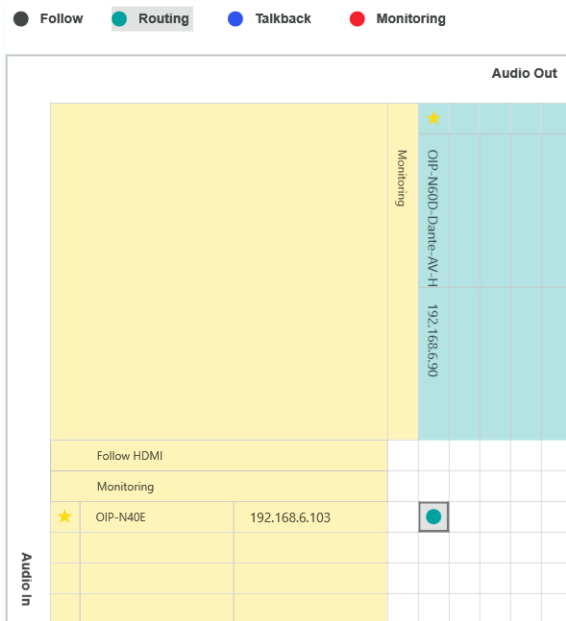


- **Audio Volume:** 0~10
- **Audio Delay Time:** 1~500ms

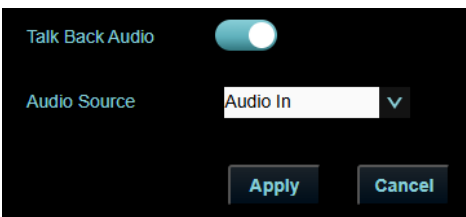


- **Talk Back Audio:** Enable or disable Talk Back
- After connecting the OIP-N60D and OIP-N40E using the Lumens Routing Switcher software (see the screenshot below), the Talk Back function enables two-way audio communication, allowing each device's input to be routed to the other device's output.

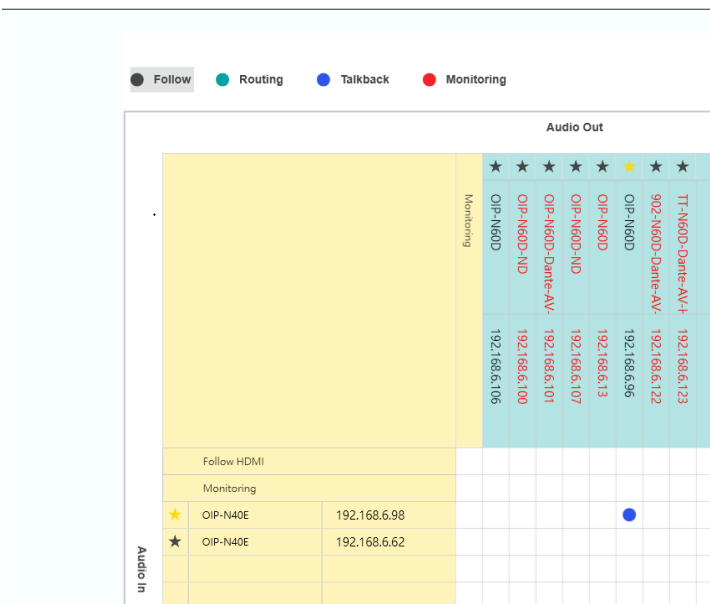


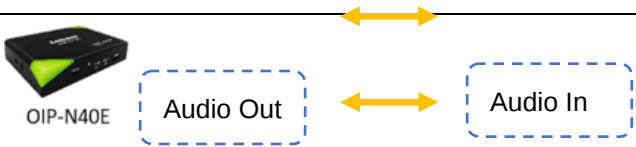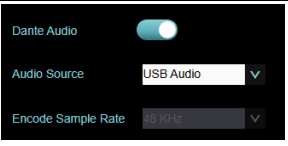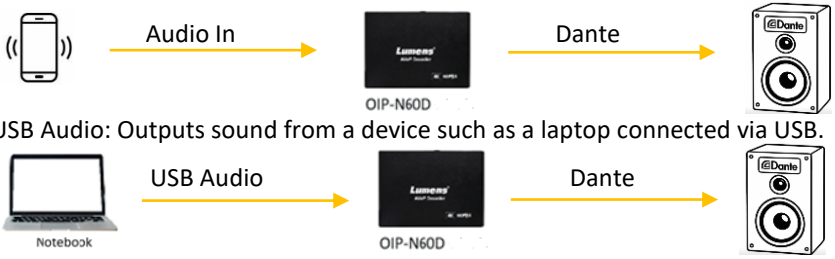		 Audio Source: - Audio in: Outputs audio from a device connected to the 3.5mm audio input on the N60D. - USB Audio: Outputs sound from a device such as a laptop connected via USB.
4	Dante Audio	 Dante Audio: Enable or disable Dante audio out Audio Source: - Audio in: Outputs audio from a device connected to the 3.5mm audio input on the N60D.  Encode Sample Rate: 48KHz

6.3.4 Layout

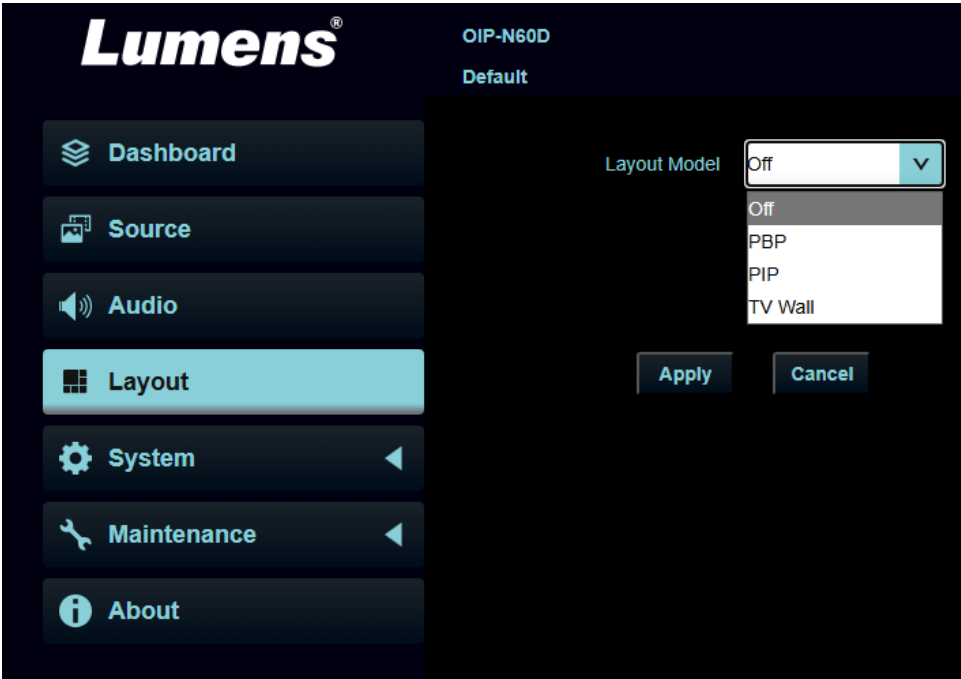		
No	Item	Description
1	Layout	Layout Model: Choose how you want the image to be displayed. - Off: Disable the layout design. - PBP: Display two sources side by side. <i>Note: Supports input resolutions up to 1080p60. Output is available via HDMI only.</i> <i>UVC output is not supported for this function.</i> Fit: Display the entire image within the monitor without cropping

Full Screen: Crop the image to fill the entire screen

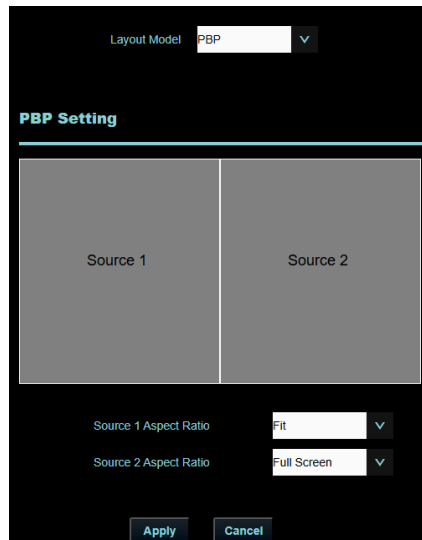


- PIP: Shrink the Source2 image into a smaller window overlaid on the Source 1 image.

*Note: Supports input resolutions up to 1080p60. Output is available via HDMI only.
UVC output is not supported for this function.*

Layout Selection: Choose the position Upper left / Upper Right / Lower left /
Lower Right

Size Selection: Choose the size Small / Normal / Large

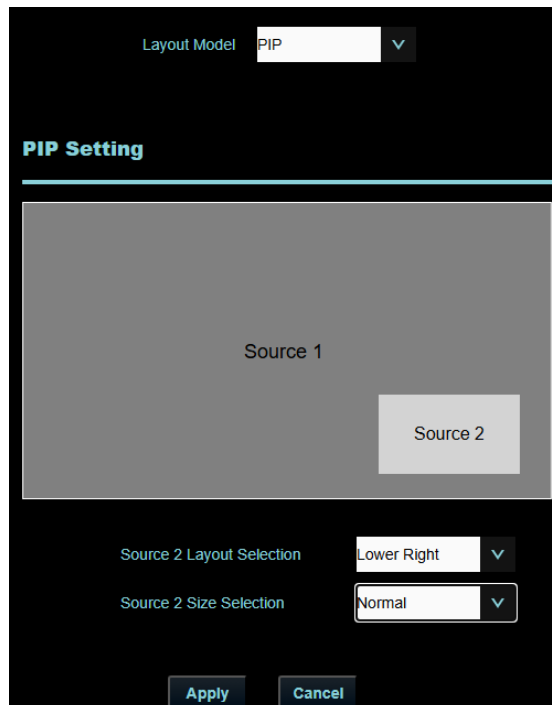

■ TV Wall

Layout Model: TV Wall

Bezel and Gap Compensation

1. Size: (unit: 0.1mm)

Overall Width(OW): 0

Overall Height(OH): 0

Video Width(VW): 0

Video Height(VH): 0

UNIT: 0.1mm

Video Wall Setting

2. Position

Horizontal Monitor Count: 1

Vertical Monitor Count: 1

Horizontal-Position: A

Vertical-Position: 1

Apply Cancel

UNIT: 0.1mm

1. Size: (unit: 0.1mm)

Overall Width: Enter the total width of the display wall

Overall Height: Enter the total height of the display wall

Video Width: Enter the width of the video signal source

Video Height: Enter the height of the video signal source

2. Position


Horizontal Monitor Count: Select how many monitors are lined up from left to right (1~3)

Vertical Mount Count: Select how many monitors are stacked from top to bottom (1~3).

Horizontal-Position: Choose the position of the monitor in a row.(A~C)

Vertical-Position: Choose the position of the monitor in a column.(1~3)

6.3.5 System- Output

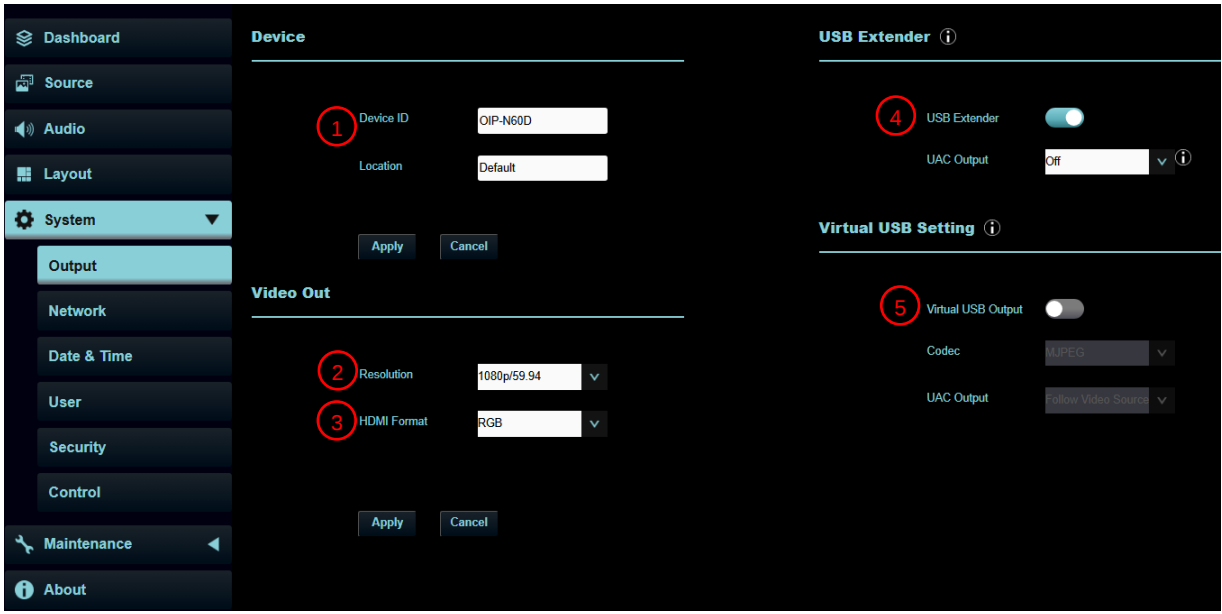		
No	Item	Description
1	Device ID/ Location	Device Name/Location - The name is limited to 1 - 12 characters - The location is limited to 1 - 11 characters - Please use uppercase and lowercase letters or numbers for characters. Special symbols such as “/” and “space” cannot be used Note Modifying this field will modify the Onvif device name/location.
2	Resolution	By Pass Native EDID 4K@60/ 59.94/ 50/ 30/ 29.97/ 25 1080p@60/ 59.94/ 50/ 30/ 29.97/ 25 720p@60/ 59.94/ 50/ 30/ 29.97/ 25
3	HDMI Format	Set HDMI format from YUV422/RGB/YUV444
4	USB Extender	Turn on/off USB network camera extension (Can only be configured when the Video output resolution is set to 4K 30 fps or lower) The USB camera will be displayed in the UAC output list once it has been detected.
5	Virtual USB output	Enable / Disable Choose from Follow Video source / Follow Dante / Follow Routing (Can only be configured when the Video output resolution is set to 4K 30 fps or lower)

6.3.6 System- Network


No	Item	Description
1	DHCP	Ethernet setting for OIP Bridge. Change of setting is available when DHCP function is disabled.
2	HTTP Port	Set HTTP port. The default Port value is 80

6.3.7 System- Date & Time

Function Descriptions

Display the current device/computer date and time, and set the display format and synchronization method
When Manually Set is selected for [Time Settings], Date & Time can be customized

6.3.8 System- User

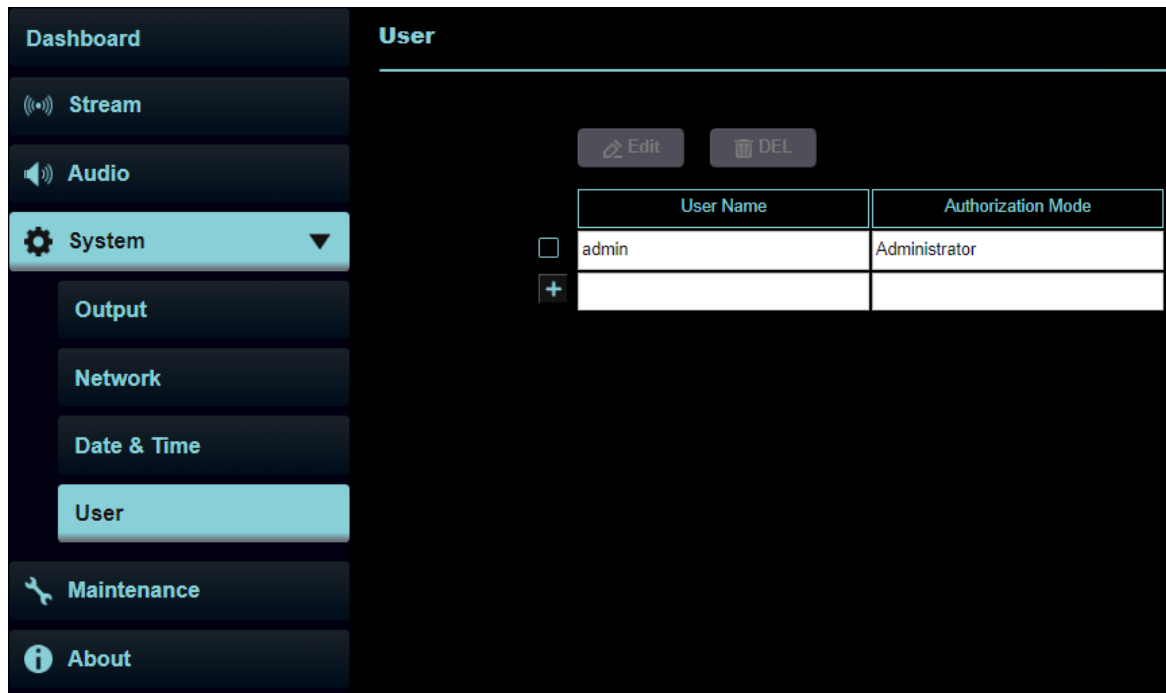

Function Descriptions

Add/Modify/Delete user account

- Supporting 4 - 32 characters for user name and password
- Please use uppercase and lowercase letters or numbers for characters. Special symbols or the underlined cannot be used
- Authentication Mode: Set the new account management permissions

User Type	Admin	Viewer
View	V	V
Setting/Account management	V	X

※When Factory Reset is executed, it will clear the user's data

6.3.9 System – Security

Dashboard

Stream

Source

Audio

System

Output

Network

Date & Time

User

Security

Control

Maintenance

About

Security

HTTP Authentication

Digest

802.1x Setting

Enable

☐

EAP Identify

EAP Password

EAP Method

PEAP

Import

Choose File

CA Certificate

Issuer DN

Subject DN

Available Period

-

Function Descriptions

HTTP Authentication: Choose from Digest / Basic / Off

802.1x Setting: Enable / Disable

6.3.10 System – Settings – VoiceConnect Mode (Requires VC-TR60A)

Dashboard

Source

Audio

Layout

System

Output

Network

Date & Time

User

Security

Settings

Maintenance

About

OIP-N60D

Default

OIP-N60D

EN

Settings

Voice Connect

Validate

Custom Image

CEC

VoiceConnect Mode

☐

Mode Setting

Standard Rectangle (2-C)

Auto-Tracking

Off

b2

Set

0

a1

Set

0

A

0

B

0

0

Set

b1

0

Set

a2

Camera Settings

Voice Trigger Settings

No.

Camera IP

Camera Stream URL

Image Flip

ZOOM LOCK

A.

☐

☐




B.

☐

☐

Apply

Cancel

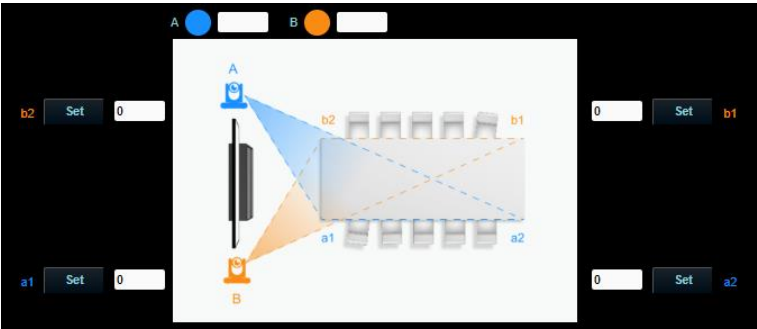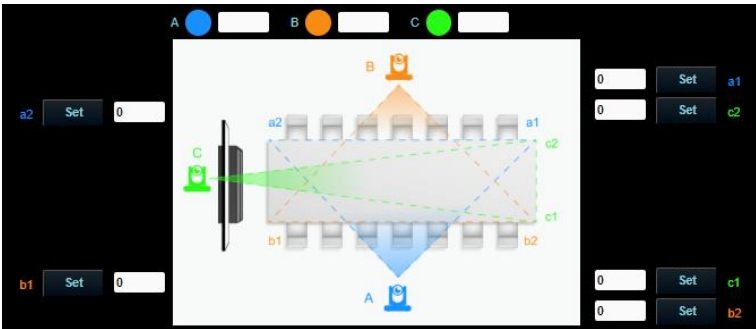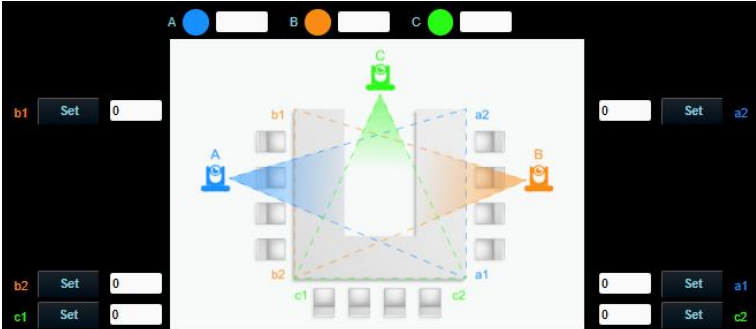	Mode	camera when that camera detects sound. (A maximum of 4 VC-TR60A units can be connected) 1. Enable / Disable VoiceConnect Mode 2. Mode Setting  - Standard Rectangle (2-Cam): Suitable for rectangular conference rooms with two cameras.  - Standard Rectangle (3-Cam): Suitable for rectangular conference rooms with three cameras.  - U-shaped (3-Cam): Suitable for U-shaped conference rooms with three cameras. 3. Auto-Tracking: Enable or disable the Auto-Tracking function.
2	Voice Trigger Settings	- a1 / a2 、 b1 / b2 、 c1 / c2: Configure the Voice Trigger zones for each camera. After speaking at the desired position, click **Set** to save the trigger point. - Set: Save the current Voice Trigger setting. <i>Voice Trigger supports multiple trigger zones based on the seating arrangement in the conference room. When the system detects sound from a configured zone, it automatically switches to the corresponding camera view.</i>
3	Camera Settings	- Camera IP: Enter the VC-TR60A's IP address. - Camera Stream URL: Enter the VC-TR60A's stream URL. - Image Flip: When enabled, the camera image is flipped horizontally. - ZOOM LOCK: When enabled, the camera zoom settings are locked.

4	Apply / Cancel	Apply or discard the changes.
---	----------------	-------------------------------

6.3.11 System – Settings – Validate

Dashboard

Source

Audio

Layout

System

Output

Network

Date & Time

User

Security

Settings

Maintenance

About

Settings

Voice Connect

Validate

Custom Image

CEC

Functions Description

Displays the conference room layout, camera positions, and Voice Trigger detection zones for validating the Voice Connect configuration.

6.3.12 System – Settings – Custom Image

Source

Audio

Layout

System

Output

Network

Date & Time

User

Security

Settings

Voice Connect

Custom Image

CEC

No Signal Screen

Show System Info :

No Signal

Default

Custom

Upload

Resolution:1920x1080

File Format:JPEG / BMP

Size(Max.):10MB


Apply

Functions Description

The user can upload a custom image (JPEG / BMP) to be displayed as the background when no signal is detected. Select [...] to locate your image, then click Upload and Apply to save it.


System Information: Enable this option to display product details such as the IP address and firmware version on the monitor.

6.3.13 System – Settings – CEC

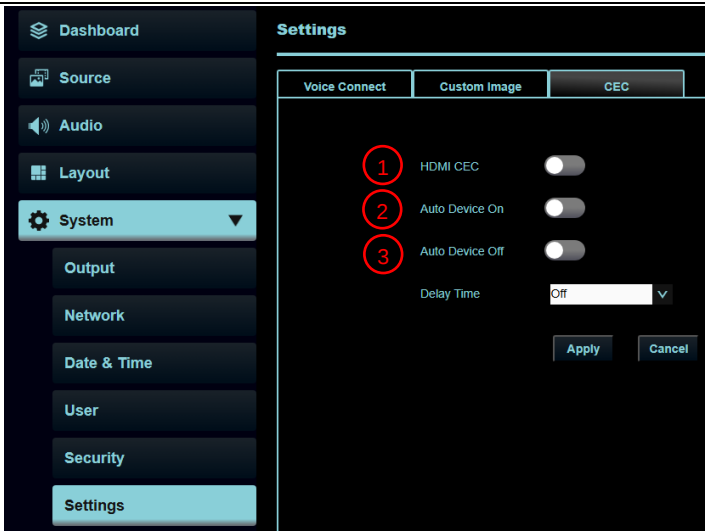

No	Item	Description
1	HDMI CEC	Enable or disable the HDMI CEC.
2	Auto Device On	The monitor will be turned on automatically when the signal is detected.
3	Auto Device Off	The monitor will turn off automatically after the configured delay time. Delay time options: Off / 0.5 min / 15 min / 60 min


6.3.14 Maintenance - Update

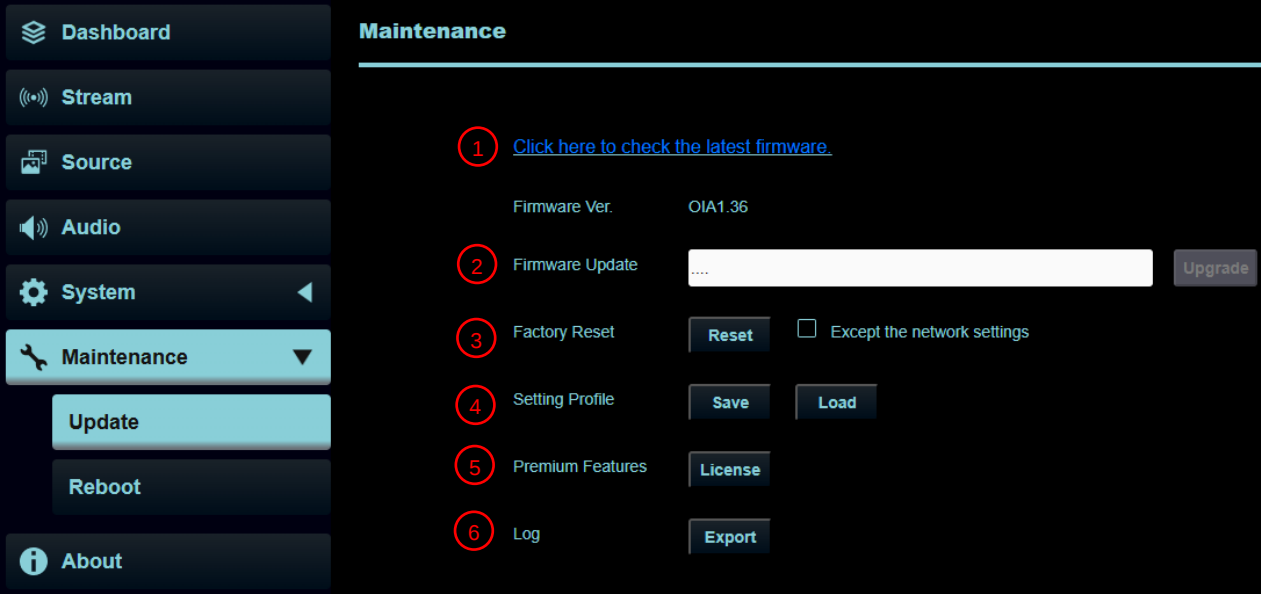

No	Item	Description
1	Firmware link	Click on the link to the Lumens website and enter the model to obtain the latest firmware version information
2	Firmware Update	Select the firmware file, and click [Upgrade] to update the firmware Note Update takes about 2 - 3 minutes Note Please do not operate or turn off the power of the device during the update to avoid firmware update failure
3	Factory Reset	Reset all configurations to factory default settings
4	Setting Profile	Save setup parameters. Users can download and upload device setup parameters


5	Premium Features	Advanced feature available through license activation.
6	Log	Export the log file containing the records from the recent period.

6.3.15 Maintenance – Reboot

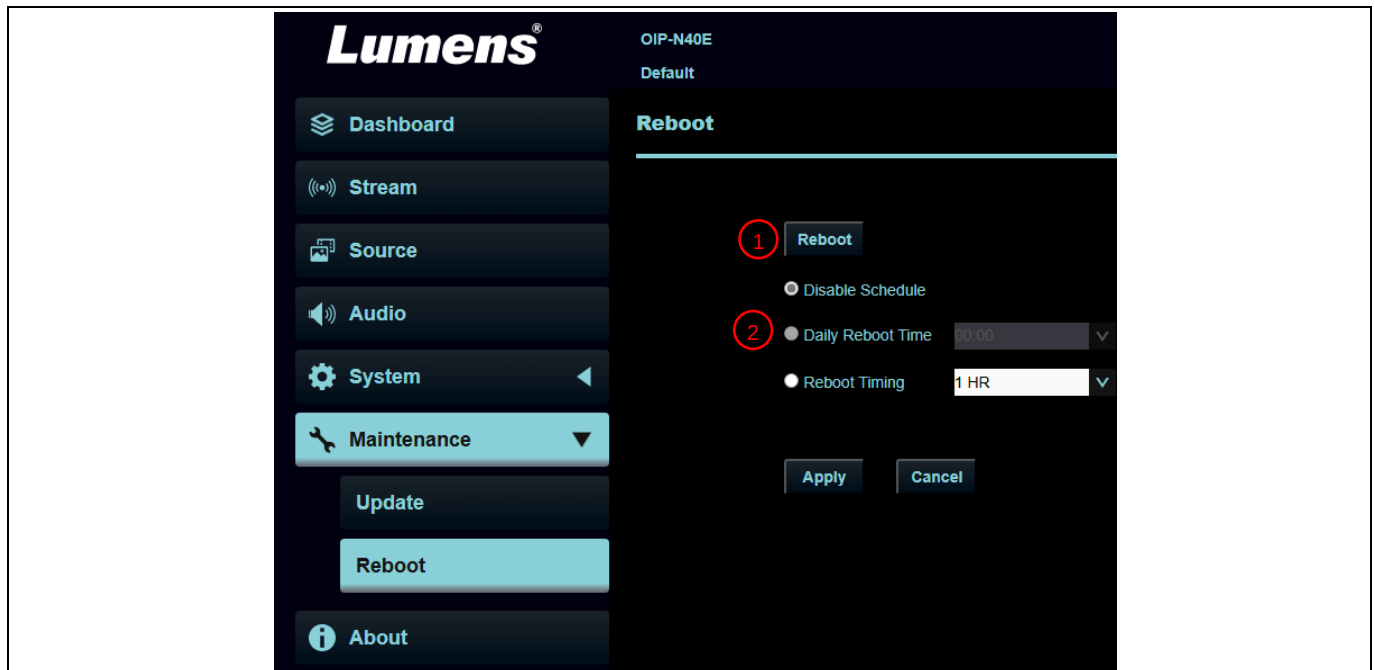

No	Item	Description
1	Reboot	Click the button to reboot the unit
2	Schedule Reboot	Disable Schedule: Turn off the schedule reboot function. Daily Reboot Time: Set the exact time the unit will automatically reboot. (Can only be enabled when SNTP is selected in the Time Setting section.) Reboot Timing: Set the reboot interval, from 1 to 24 hours.

6.3.16 About

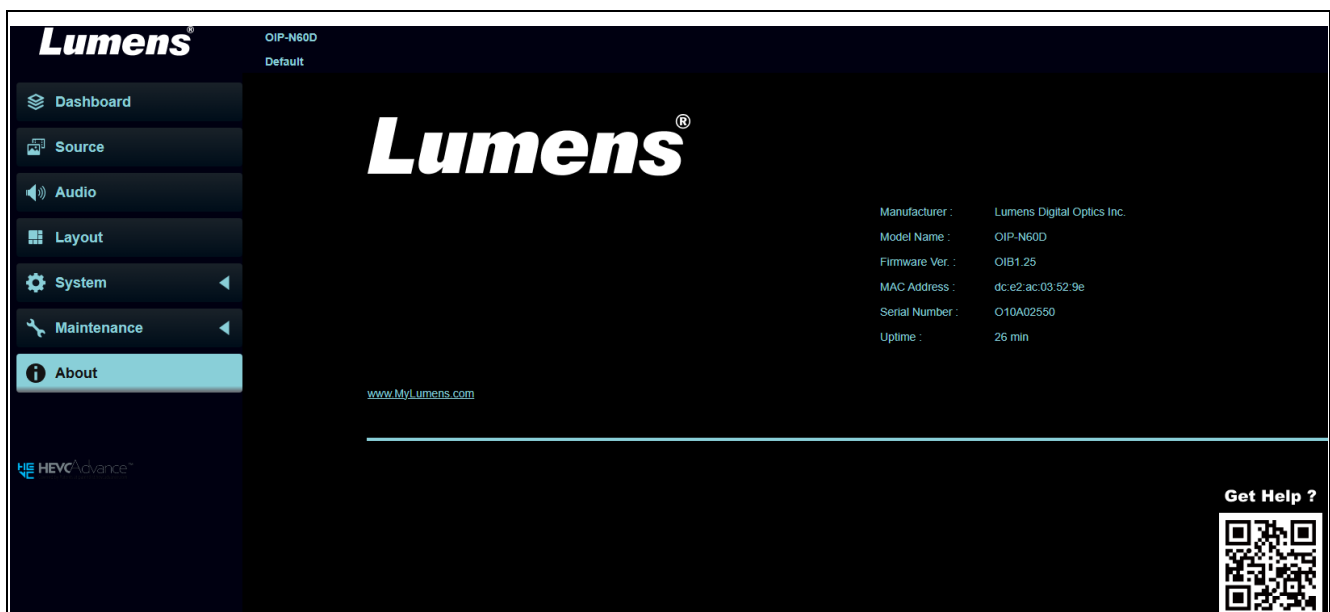

Function Descriptions

Display the firmware version, serial number, and other related information of the OIP Bridge

For technical support, please scan the QR Code at the bottom right for assistance

Chapter 7 Troubleshooting

This chapter describes problems you may encounter while using OIP Bridge. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurs, please contact your distributor or the service center.

No.	Problems	Solutions
1.	OIP-N40E webpage USB extender cannot find OIP-N60D on the same network segment	1. Confirm that the OIP-N60D has enabled the USB extender function 2. Confirm that the management switch in the network has disabled the blocking of multicast packets
2.	Recommended specifications for USB-C cables	Transfer rate of 10 Gbps or higher
3.	Recommended Switch Configuration	When using OIP-N products with a network switch, it is recommended to configure the following settings: 1. Select a switch where every port supports 1Gbps transmission 2. Use a switch that supports QoS (Quality of Service) with 4 queues and strict priority; QoS should be enabled when both 100Mbps and 1Gbps devices exist in the same local network 4. Enable IGMP Snooping 5. It is recommended to choose a managed switch (Layer 2 or above) 6. It is advisable to disable EEE (Energy Efficient Ethernet) or similar power-saving features

Chapter 8 Safety Instructions

Always follow these safety instructions when setting up and using the Document Camera:

1 Operation

- 1.1 Please use the product in the recommended operating environment, away from water or source of heat
- 1.2 Do not place the product on a tilted position or unstable trolley, stand or table.
- 1.3 Please clean the dust on the power plug prior to usage. Do not insert the product's power plug into a multiplug to prevent sparks or a fire.
- 1.4 Do not block the slots and openings in the case of the product. They provide ventilation and prevent the product from overheating.
- 1.5 Do not open or remove covers, otherwise it may expose you to dangerous voltages and other hazards. Refer all servicing to licensed service personnel.
- 1.6 Unplug the product from the wall outlet and refer servicing to licensed service personnel when the following situations happen:
 - If the power cords are damaged or frayed.
 - If liquid is spilled into the product or the product has been exposed to rain or water.

2 Installation

- 2.1 For security considerations, please make sure the standard hanging rack you bought is in line with UL or CE safety approbations and installed by technician personnel approved by agents.

3 Storage

- 3.1 Do not place the product where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
- 3.2 Unplug the product during thunderstorms or if it is not going to be used for an extended period.
- 3.3 Do not place the product or accessories on top of vibrating equipment or heated objects.

4 Cleaning

- 4.1 Disconnect all the cables prior to cleaning and wipe the surface with a dry cloth. Do not use alcohol or volatile solvents for cleaning.

■ Precautions

	This symbol indicates that this equipment may contain dangerous voltage which could cause electric shock. Do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to licensed service personnel.		WARNING This symbol indicates that there are important operating and maintenance instructions in this User Manual with this unit.
---	---	---	---

■ Battery Warning (for products or accessories with batteries)

General Safety Warnings:

- Do not heat or dispose of the battery in fire, as it may explode or leak.
- Avoid short-circuiting: Do not connect the positive and negative terminals directly or use metallic objects to connect them.
- Do not disassemble, crush, puncture, or modify the battery.
- Do not immerse the battery in water or any other liquids.

Usage and Storage Warnings:

- Do not store the battery in high-temperature environments (above 60°C) or in areas with high humidity.
- Keep away from direct sunlight and heat sources.
- If not in use for a long period, remove the battery and store it in a cool, dry place.

Disposal and Recycling Warnings:

- Do not dispose of the battery in household waste; follow local regulations for proper disposal and recycling.
- If leakage occurs, avoid contact with the leaked substance and clean the affected area immediately.

Child Safety Warnings:

- This product contains a button battery. Ingestion of a button battery can cause severe internal burns within 2 hours and may result in death.
- If a battery is swallowed or if internal battery material is contacted, seek medical attention immediately.
- Store batteries (whether new or used) in a place that is out of reach of children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.

■ FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

Notice :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

■ IC Warning

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe A prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par l'Industrie.

■ EN55032 CE Warning

Operation of this equipment in a residential environment could cause radio interference.

Copyright Information

Copyrights © Lumens Digital Optics Inc. All rights reserved.

Lumens is a trademark that is currently being registered by Lumens Digital Optics Inc.

Copying, reproducing or transmitting this file is not allowed if a license is not provided by Lumens Digital Optics Inc. unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, the information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies without any intention of infringement.

Disclaimer of warranties: Lumens Digital Optics Inc. is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.