

# VC-WM12 Installation Guide


## 1. Accessory

1.1 M3 screws x 10


1.2 Quick Installation Guide

## 2. Installation


1. Secure the wall-mounted rack to the wall

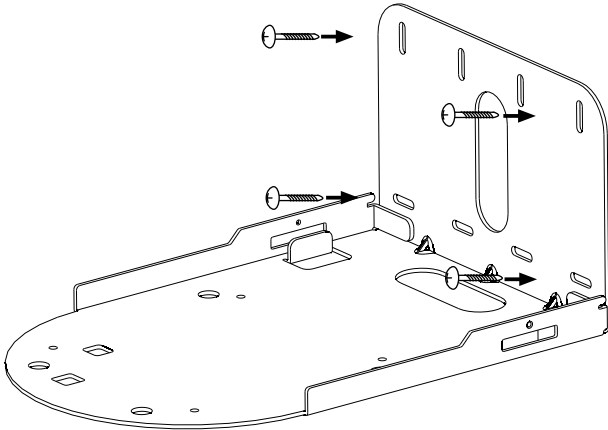


2. Screw in the M3 screws to attach the PTZ camera to the tray

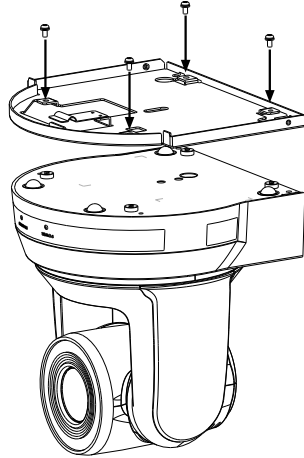

3. Slide the tray with the PTZ camera fixed to it into the grooves of the L-shaped stand. Then tighten the screws on both sides.

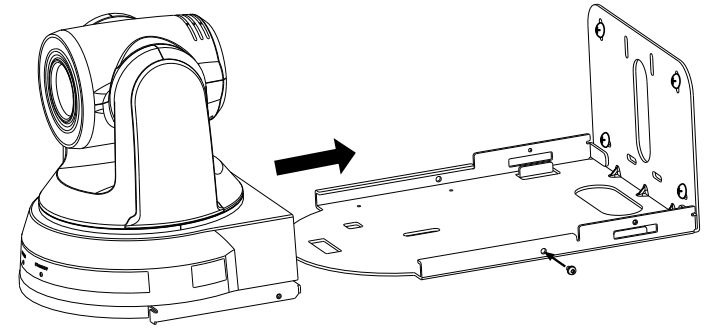


4. Connect the cable and power cord to the PTZ camera, and place the baffle board onto the stand.

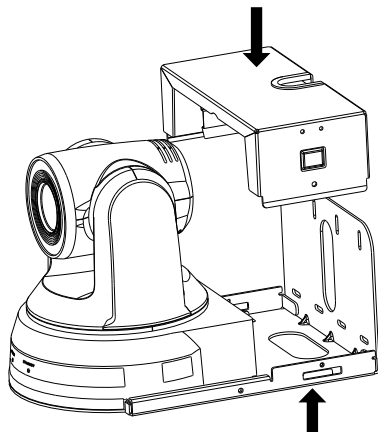


Cable and power cord


5. Finished  
5.1 Right-side up

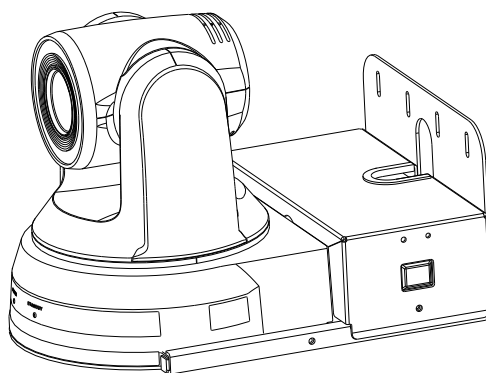

5.2 Upside down

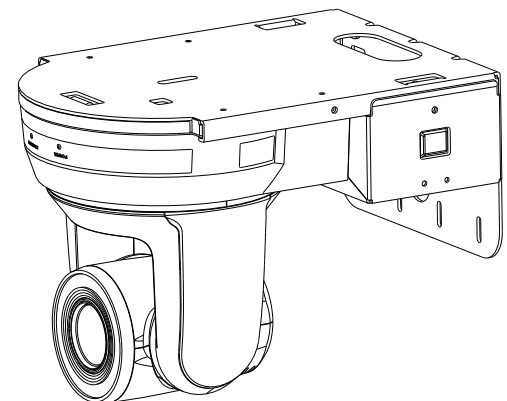

## 3. Size

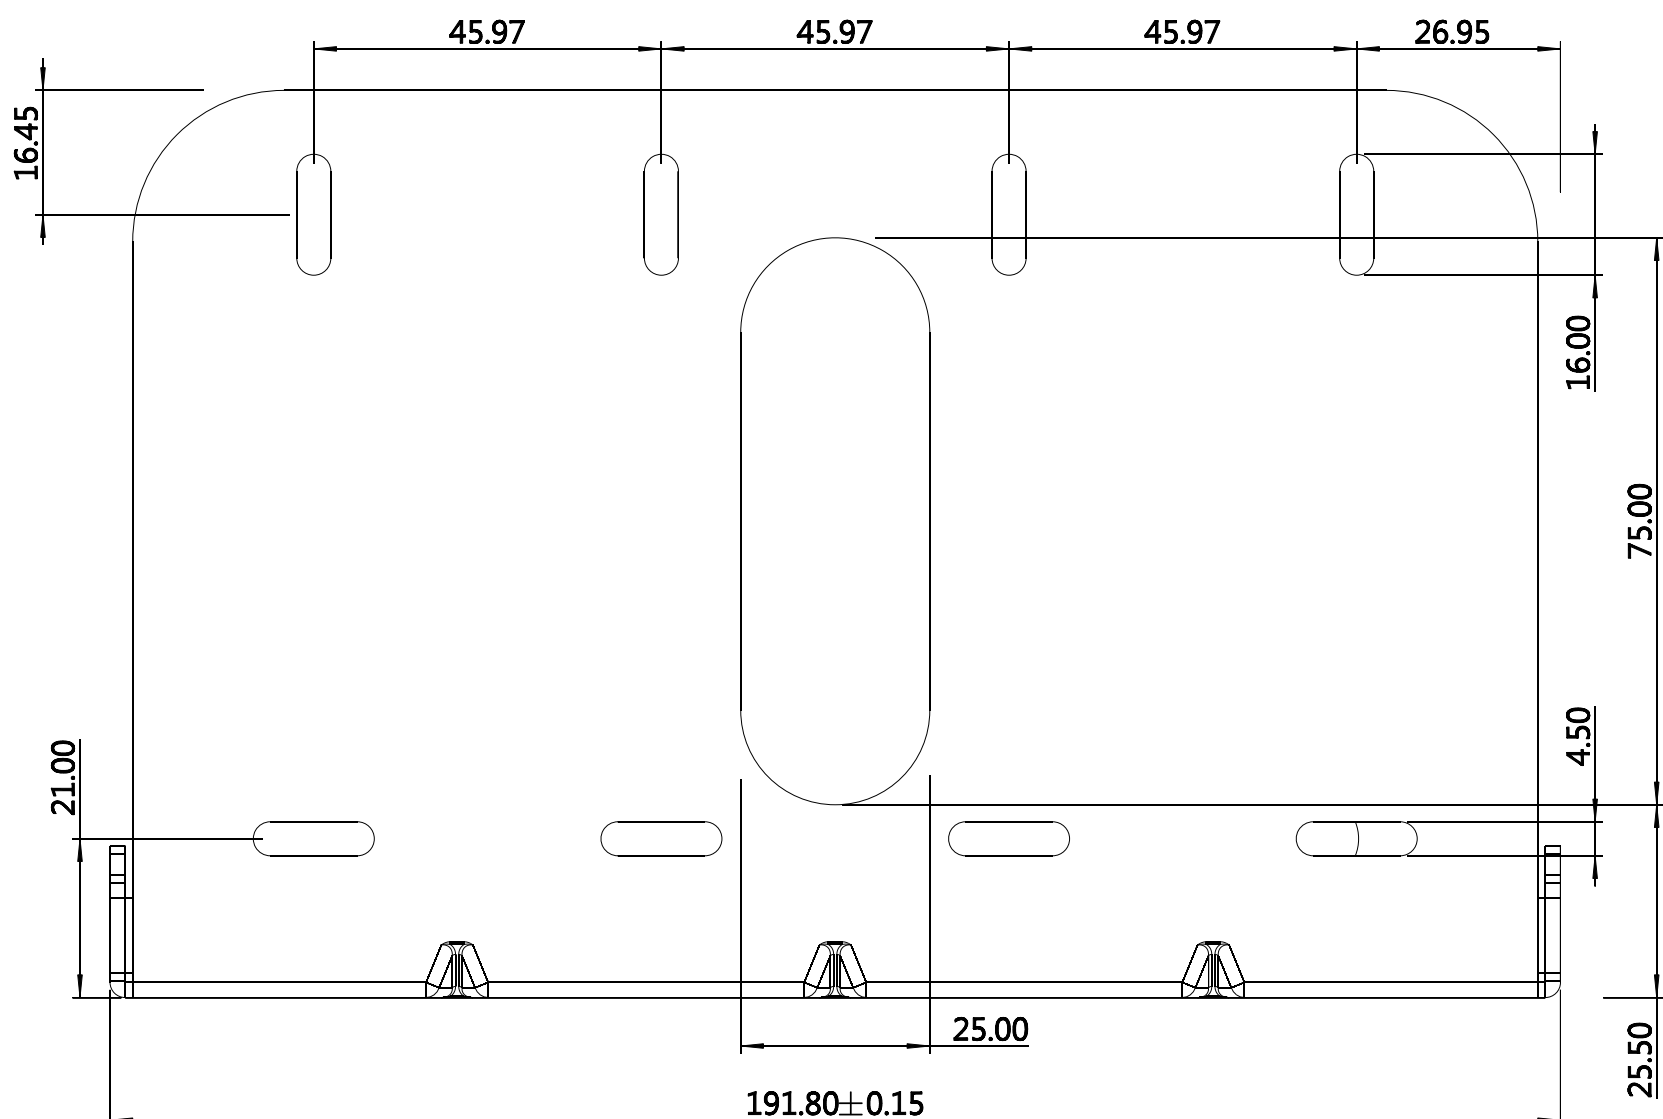

\* In 1:1 scale




# VC-WM12安装说明

## 1. 配件


- 1.1 摄像机固定用M3螺丝 x10
- 1.2 简易安装说明

## 2. 安装

- 1. 将壁挂架锁附于牆面上
- 2. 将拖盘放置于摄像机上，锁上M3螺丝
- 3. 将与摄像机锁固之拖盘滑入L型架溝槽後，於兩邊鎖孔鎖上螺絲固定

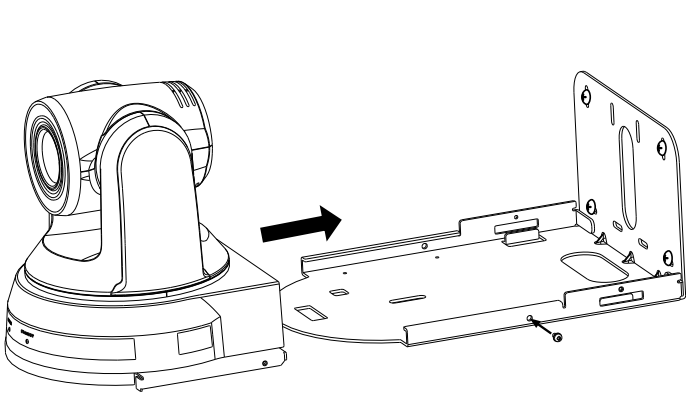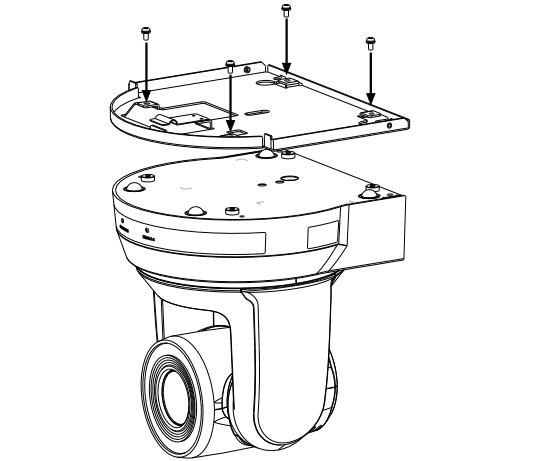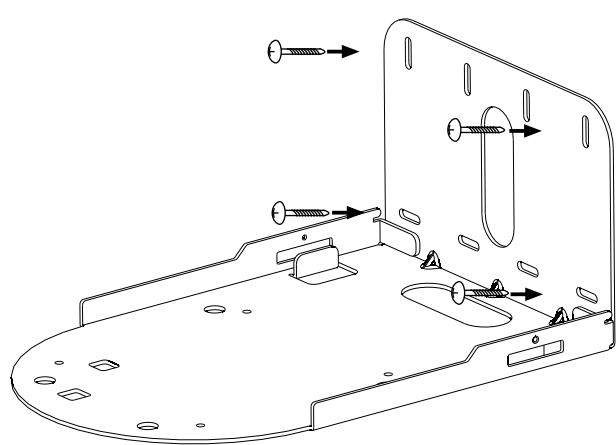


- 4. 将连结线、电源线与摄像机连接，再将擋板扣上

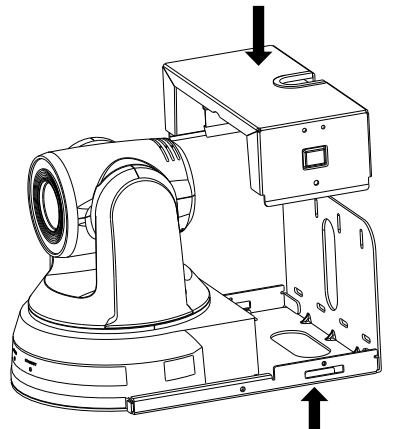


连结线及电源线


- 5 完成图
- 5.1 正掛完成图

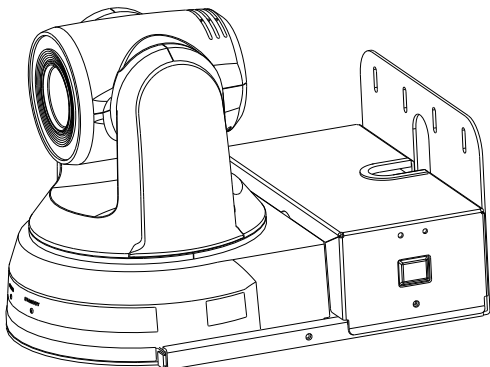

- 5.2 倒掛完成图

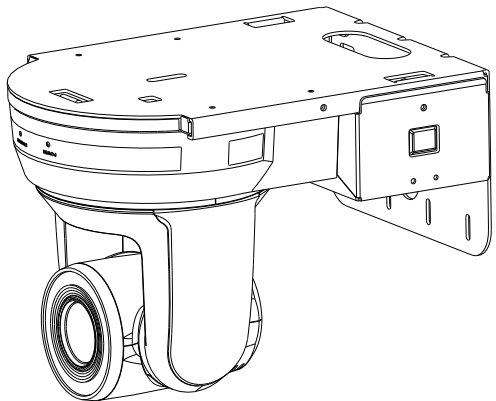

## 3. 尺寸

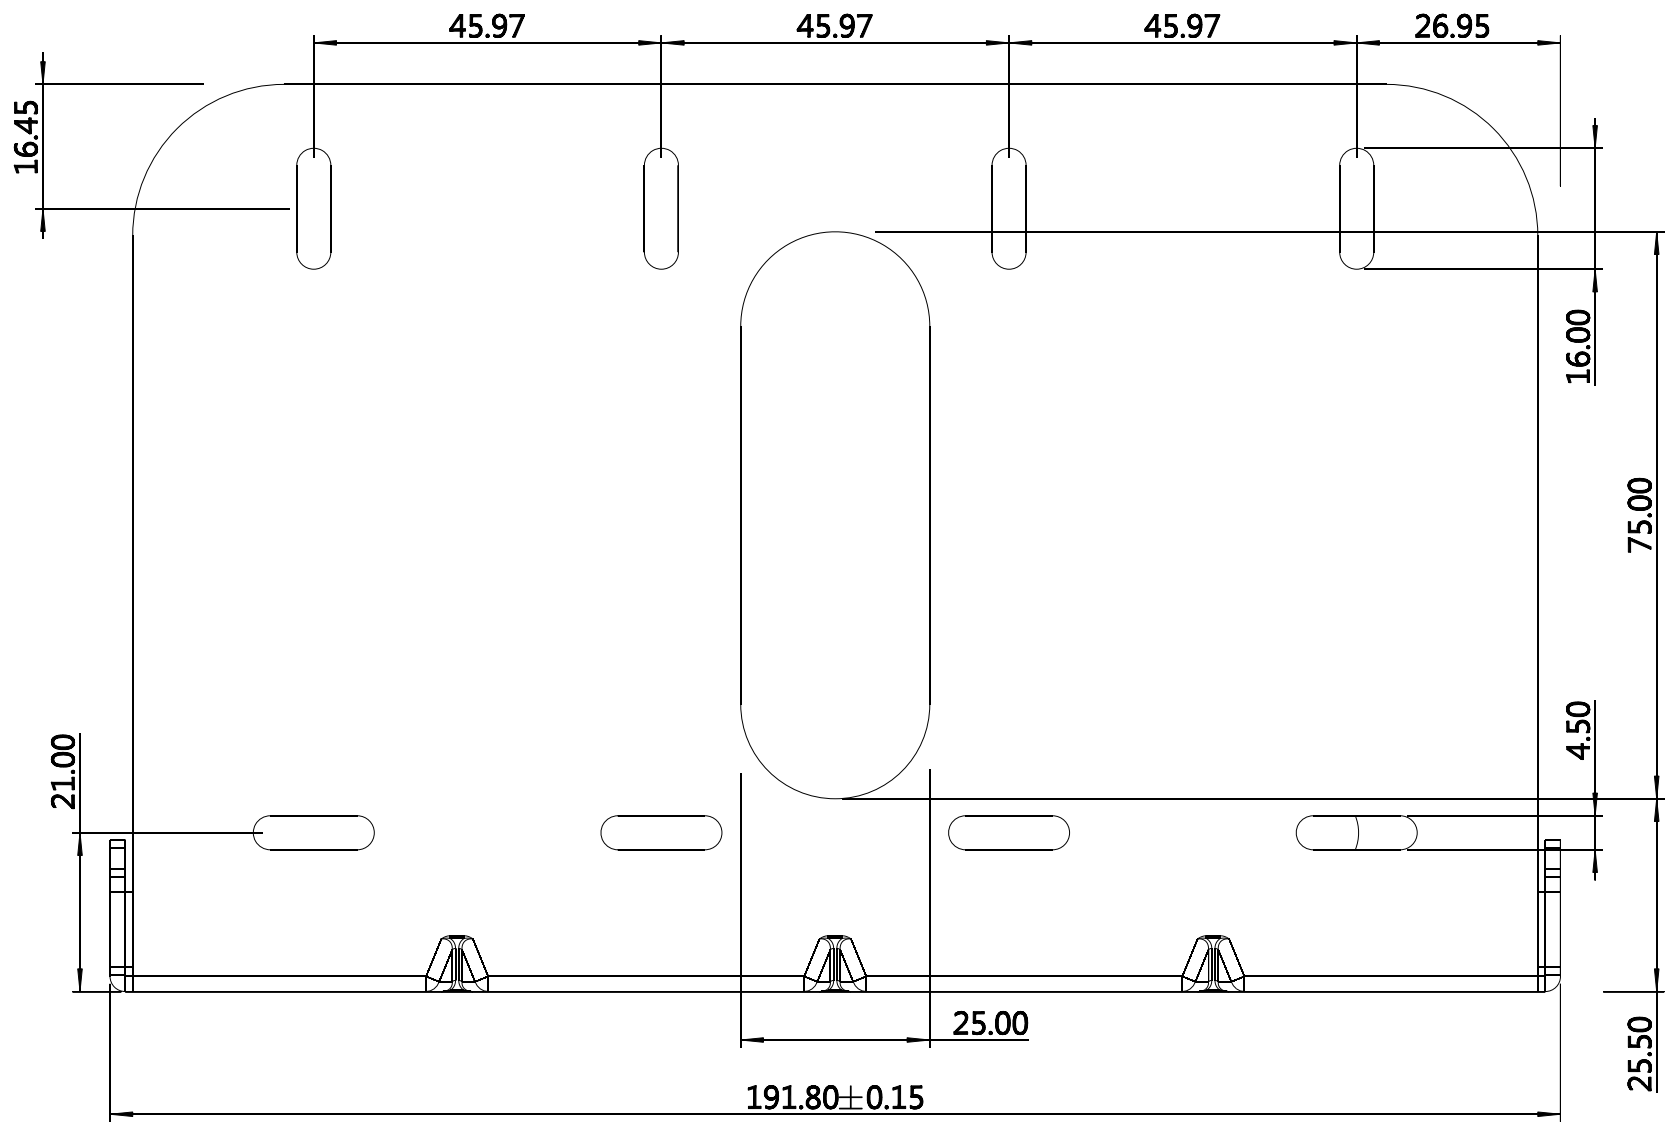

\*尺寸圖為1:1圖示