


# DC136 Installation Guide

## ⚠ Important


- \* Please activate your warranty: [www.MyLumens.com/reg](http://www.MyLumens.com/reg) .
- \* To download the updated software, user guides, and Quick Start Guide, please visit Lumens web site at: [www.MyLumens.com/support](http://www.MyLumens.com/support) .

## 1. Product Overview

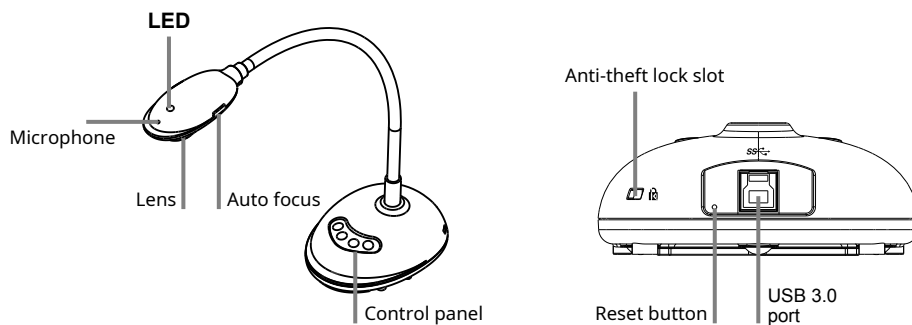


## 2. Installation and Connections

### ▼ Connecting to a computer


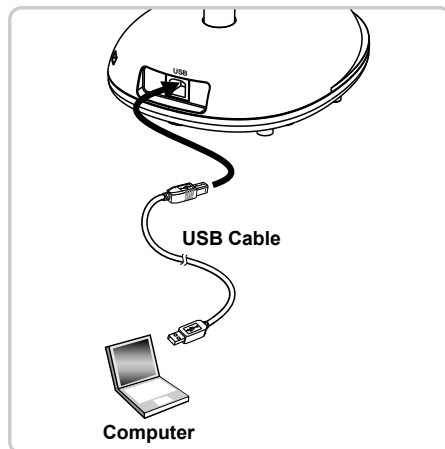


### ▼ Connecting to an Interactive Whiteboard (IWB)

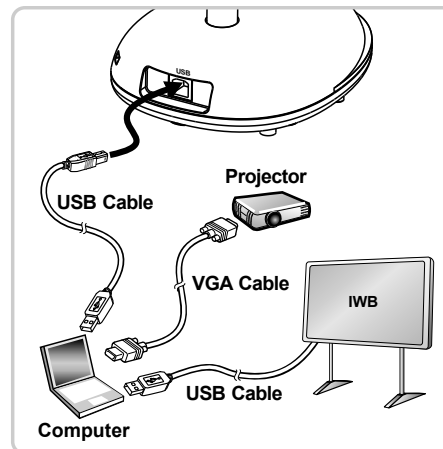

⚠ Once the USB is connected to the computer, the power is ON.

## 3. Start Using

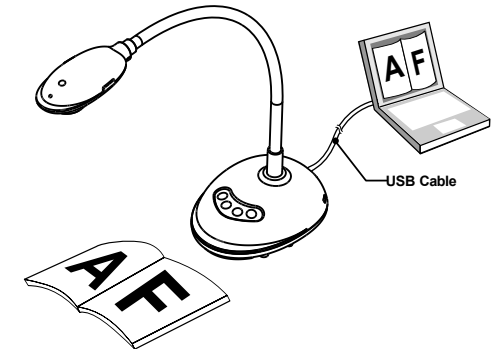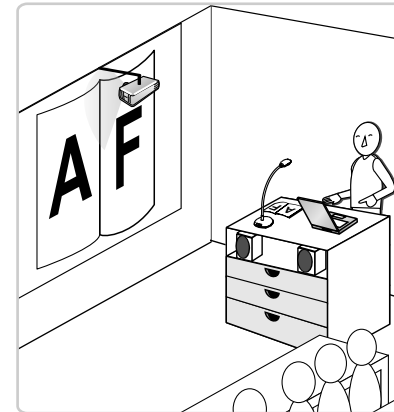


1. After installing Ladibug, double-click the icon to open the software to view the images and control DC136.

\* POWER Frequency setting page will display during the first use, please complete the settings following the instructions on the screen.

For Windows: 

For MAC: 

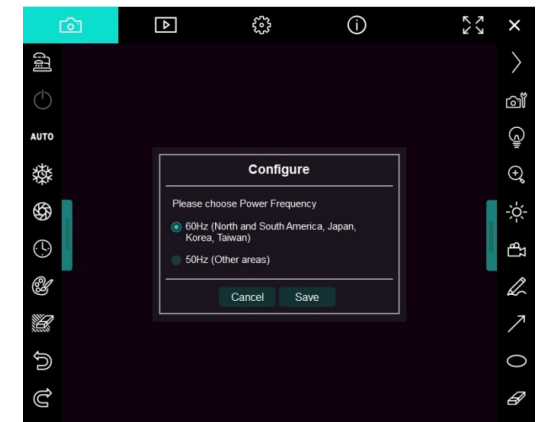

2. Place an object to be displayed under the camera.

3. Press **AUTO** button to optimize the image.

4. You are ready to teach/present.


\*Please download Ladibug software from Lumens website.

\*When connected to a computer via a USB cable, DC136 can also be used with video software, such as Skype and Zoom.

## ⚠ 重要


\* 最新版本的软体、使用手册及快速使用手册，可至 Lumens 网站下载 [www.Lumens.cn/support](http://www.Lumens.cn/support)。

## 1. 产品外观说明

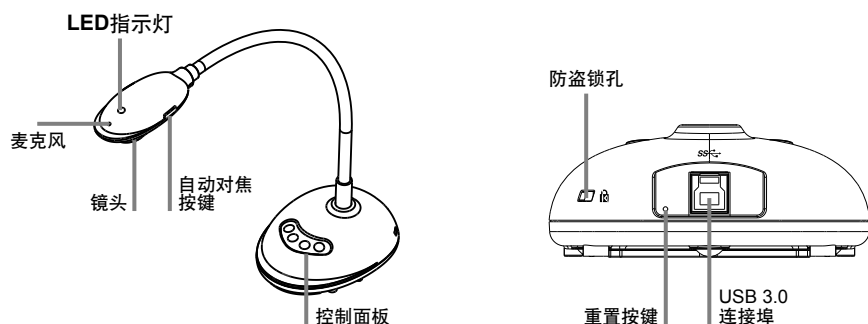


## 2. 安装与连接

### ▼ 连接电脑


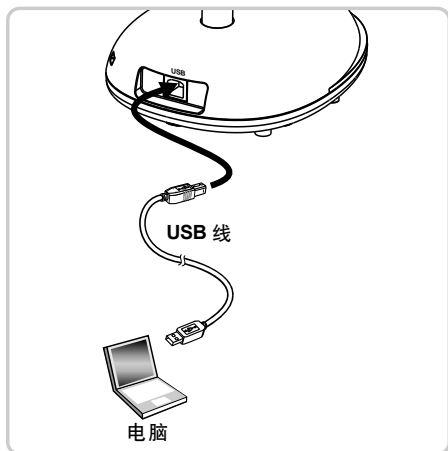


### ▼ 连接互动式电子白板 (IWB)

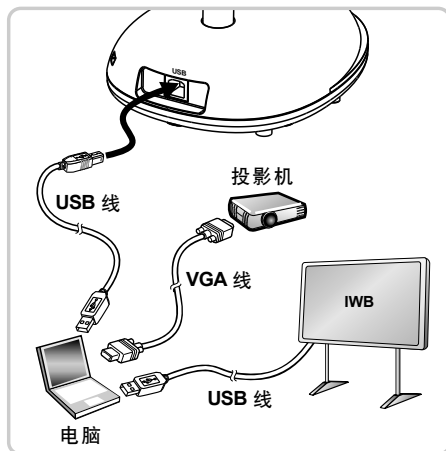


⚠ 当USB连接上电脑，电源即启动。

## 3. 开始使用

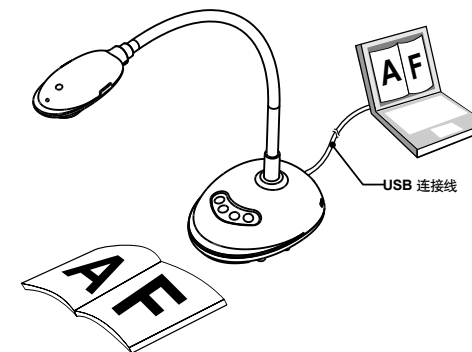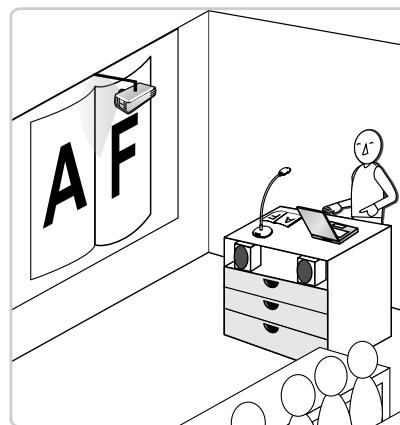

1. 安装Ladibug 软体后，双击图示以开启软体观看影像并控制DC136。  
\*第一次使用会出现POWER Frequency设定画面，请依画面指示设定。

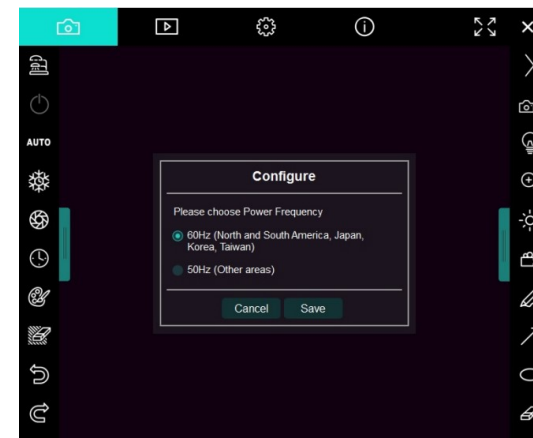

2. 放置投影物件至镜头下。  
3. 按 **AUTO** 按钮调整影像最佳化。  
4. 你可以开始教学或简报。

\*Ladibug 软体请至Lumens网站下载。

\*DC136透过USB线与电脑连接时，亦可搭配视讯软体使用，如：Skype、Zoom等软体。