

**queue
(MAC)**


**Visual Presenter Image Software
User Manual**

Date: 2009/03/30

Contents

Chapter 1 User Interface	1
Chapter 2 Toolbars and Buttons	2
2.1 Basic Operation	2
2.2 Annotation Tools	3
2.3 Camera Settings	4
2.4 Options	4
Chapter 3 Descriptions of Functions	5
3.1 Start the Visual Presenter	5
3.2 I would like to freeze the live image	5
3.3 I would like to capture images	5
3.4 I would like to annotate the displayed image	5
3.5 I would like to add textual annotation to images.	6
3.6 I would like to record video	7
3.7 I would like to display full screen	7
Chapter 4 Uninstall	8
4.1 Uninstall queue	8


Chapter 1 User Interface

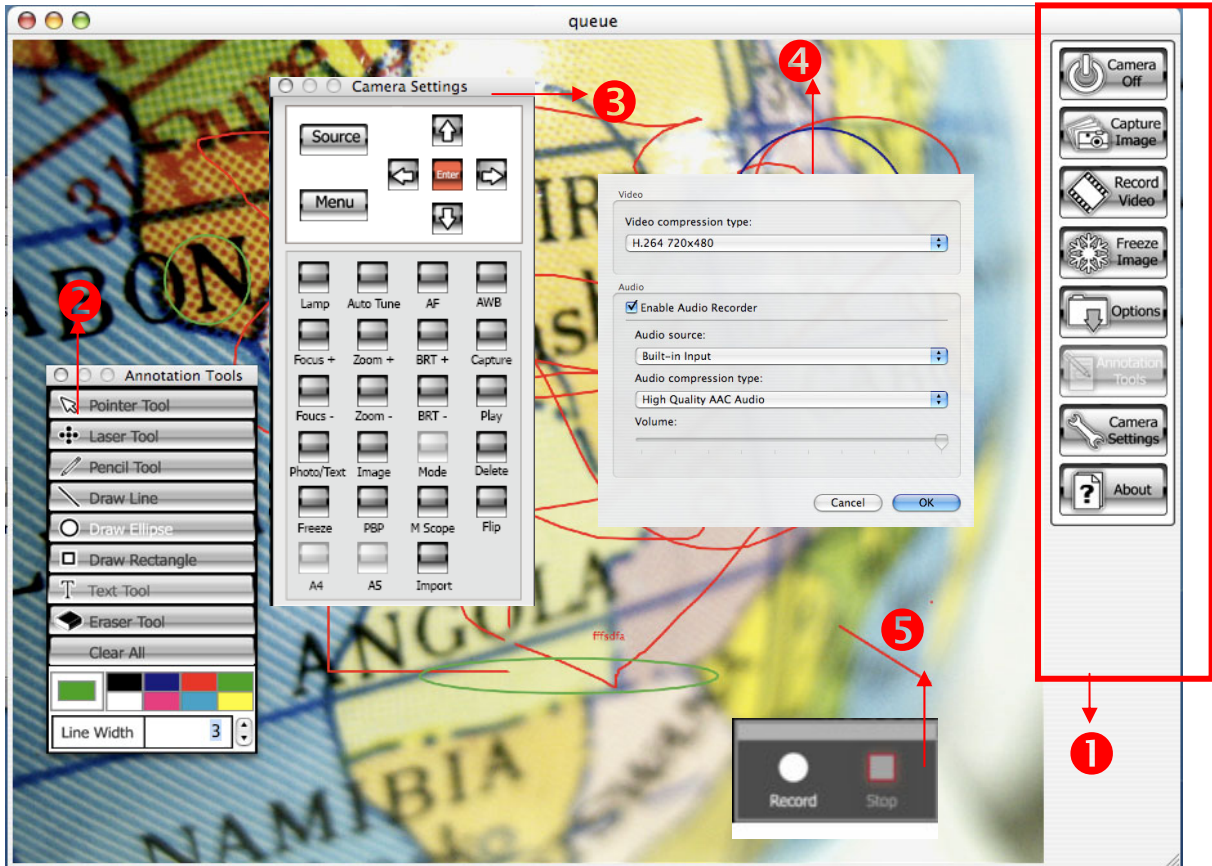

#	Toolbar	Functions
1	Basic Operation	Functions such as capture images, freeze images, live images and etc.
2	Annotation Tools	Provide annotation tools to mark or annotate the displayed image.
3	Camera Settings	Provide operation functions which are the same with keys on the remote control / machine's control panel.
4	Options	Provide video and audio setting.
5	Video Tools	Provide video functions : Start and stop recording.

Chapter 2 Toolbars and Buttons


2.1 Basic Operation




Turn on / Turn off the **visual presenter**.



Capture the live image and save.

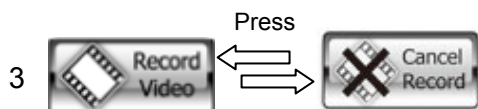

Open / Close the video tools.

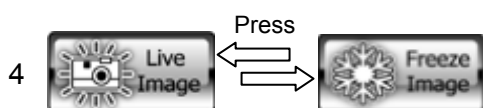

Display the live image. / Freeze the live image of queue.



Open the dialogue box of options setting. Refer to [2.4 Options](#) for more information.



It provides annotation tools to mark or annotate the displayed image. Refer to [2.2 Annotation tools](#) for more information.



Adjust the live image. Refer to [2.3 Camera Settings](#) for more information.




Provide general information and user manual for queue.



Switch to Full Screen Mode

2.2 Annotation Tools

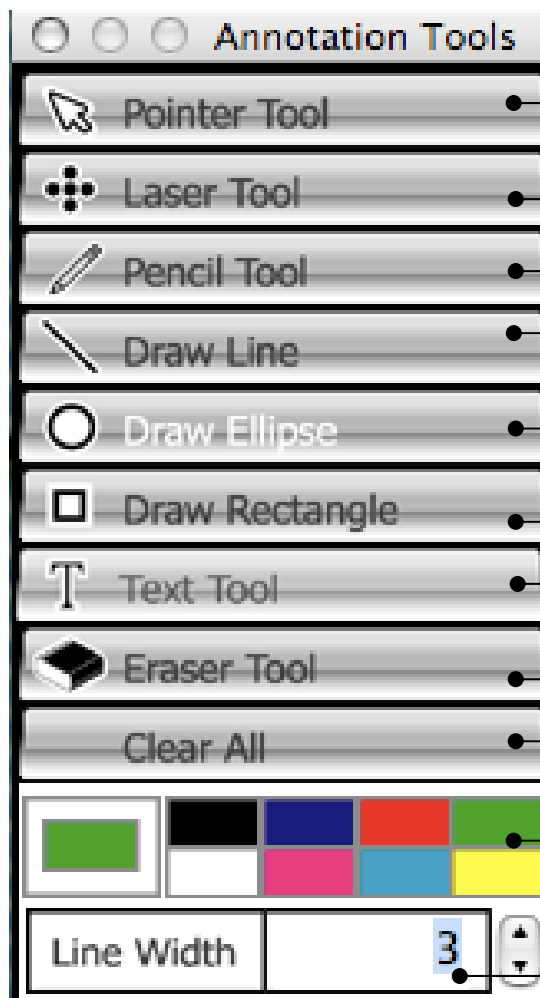


The image shows a toolbar titled "Annotation Tools" with the following tools and their functions:

- Pointer Tool**: This is the default mode.
- Laser Tool**: Draw a small color dot.
- Pencil Tool**: Draw free-handedly.
- Draw Line**: Draw a straight line.
- Draw Ellipse**: Draw an oval or circular graph.
- Draw Rectangle**: Draw a square or rectangle.
- Text Tool**: Add text.
- Eraser Tool**: Erase the drawing.
- Clear All**: Clear the drawing altogether.
- Color Selection**: Choose the color for the selected drawing.
- Line Width**: Increase or decrease the thickness of the lines. (If the value is higher, the line is thicker).


2.3 Camera Settings

Control the live image via the **Camera Settings** interface. The operating procedure is the same as the **remote control** and **control panel** of the **Visual Presenter**. Refer to the user manual for more information.

<Note> The display of the button may vary depending on product functions. An inactive button will grey out.

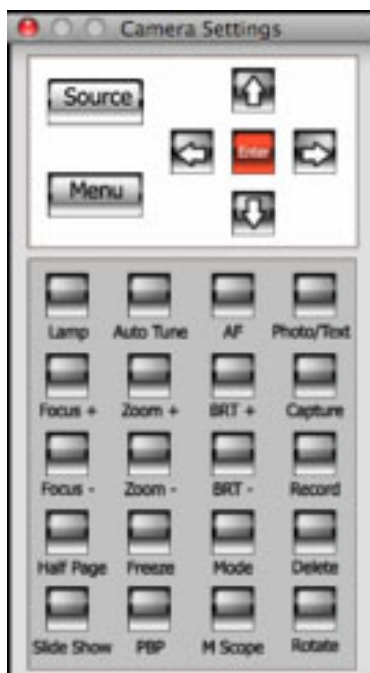

2.4 Options

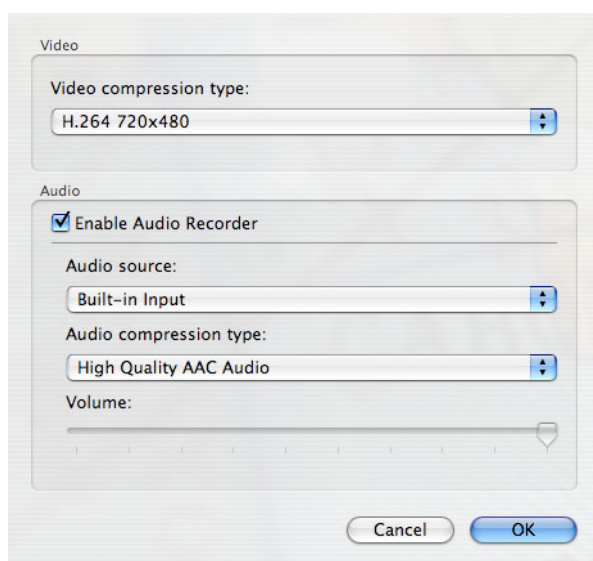

1. **Video compress type** : Set the video format.
2. **Enable Audio Recorder** : Enable the audio recorder.
3. **Audio source** : Set the audio source.
4. **Audio compression type** : Set the audio compression type.


<Note>You need to enable the [Enable Audio Recorder] before setting the [Audio compression type].

Chapter 3 Descriptions of Functions

3.1 Start the Visual Presenter

3.1.1 Press  to start the camera.


3.2 I would like to freeze the live image

3.3.1 Press  to freeze the live image of queue.

3.3 I would like to capture images

3.4.1 Press  then a **Save As** window will be displayed.


3.4.2 Key in the file name then press [Save].

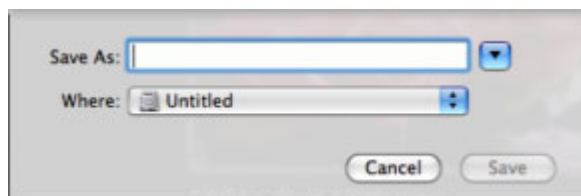

3.4 I would like to annotate the displayed image

3.5.1 Press  to open the annotation tools.

3.5.2 The default mode is [**Pointer Tool**]. You can select another annotation tool.

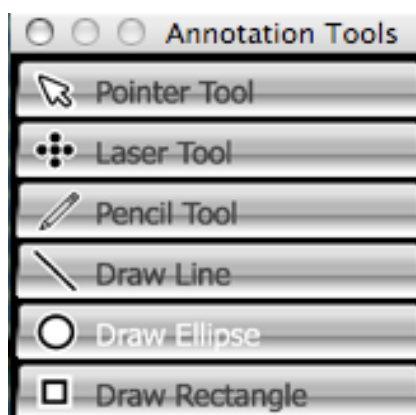


3.5.3 Select a color for drawing.



3.5.4 Set the value of Line width (If the value is higher, the line is thicker).



3.5.5 Mark or annotate the displayed image.

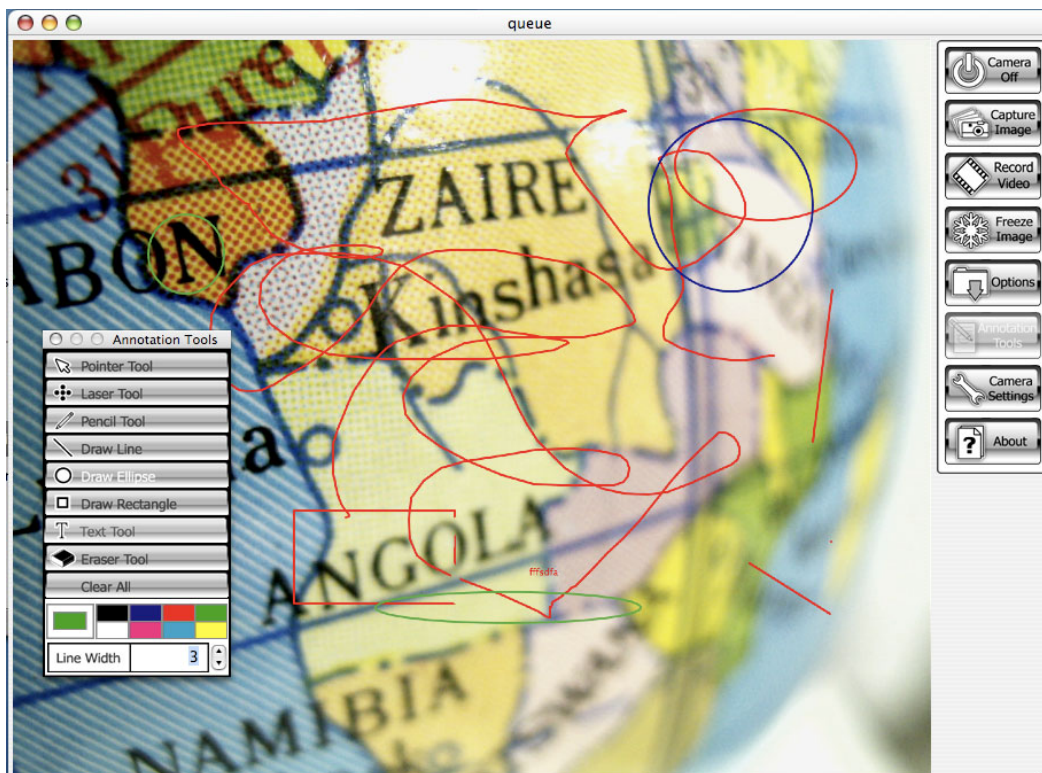


<Remark>You can press  to capture images that you draw.

3.5 I would like to add textual annotation to images.


3.6.1 Press  to open the annotation tools.

3.6.2 Select [Text Tool]

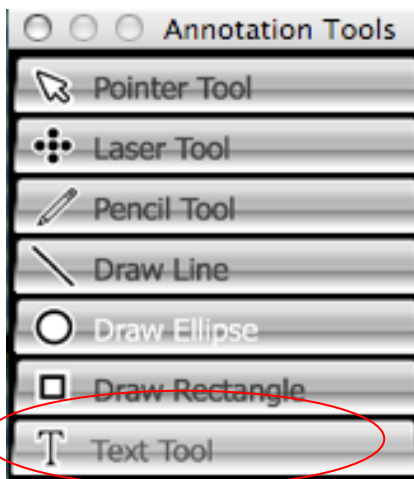

3.6.3 The [Text Tool] window will pop up when you click the screen for the text to be added in.

3.6.4 Enter the text in blank fields and click [OK].

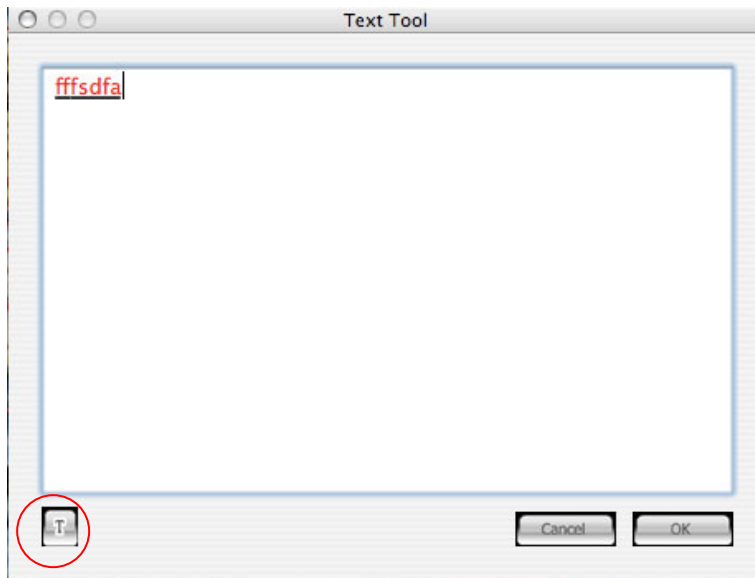

3.6.5 Click [T] to change fonts settings (size/color/effect).

<Remark> You can press  to capture images that you draw.


3.6 I would like to record video

<Note> Please make sure the mode is live image.

<Remark> If you want to record audio at the same time, please refer to [2.4 Options, Enable Audio Recorder](#)

3.6.1 Press  to open the video tool

3.6.2 Press [Record]  then a **Save As** window will be displayed.

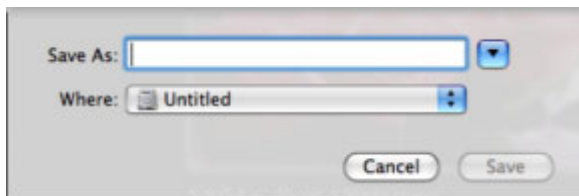

3.6.3 Key in the file name then press [Save] to start recording.

3.6.4 Press [Stop] to stop recording.

3.6.5 Press  to close the record tool.

3.7 I would like to display full screen

3.7.1 Press  to switch to full screen mode.


3.7.2 Press [ESC] key to return the normal mode

<Remark> While in the full screen display mode, right-clicking can activate Annotation Tools.

Chapter 4 Uninstall


4.1 Uninstall queue

4.1.1 Select queue Uninstall.

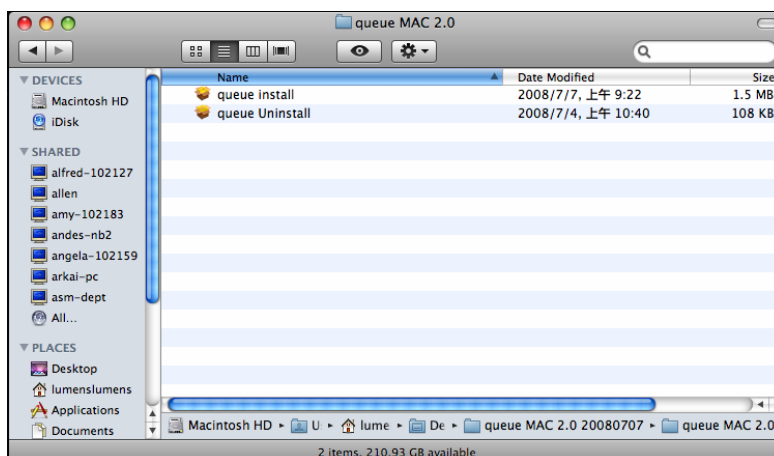

4.1.2 Uninstall wizard will start.

4.1.3 The system will start running uninstall applications and removing related components.

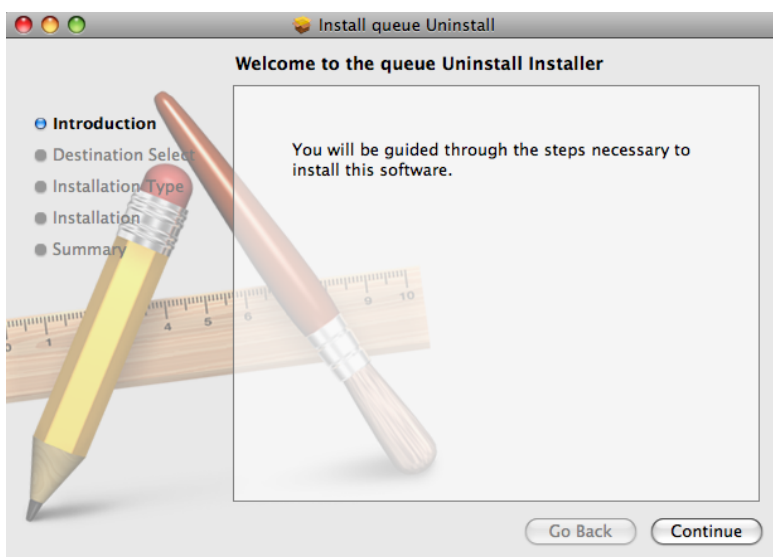

4.1.4 The uninstall application is completed, and the system will automatically exit the uninstall wizard.

