Lumens®

YAMAHA RM-W Setting Guide

Download RM Device Finder

Download Link:
https://info.uc.yamaha.com/rm-device-finder

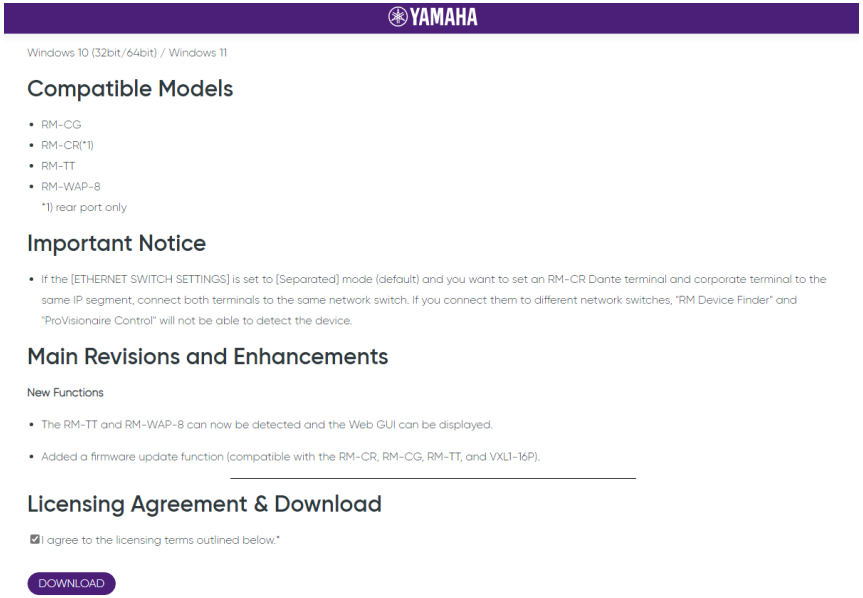
YAMAHA

Windows 10 (32bit/64bit) / Windows 11

Compatible Models

- RM-CG
- RM-CR(*1)
- RM-TT
- RM-WAP-8

*1) rear port only

Important Notice

- If the [ETHERNET SWITCH SETTINGS] is set to [Separated] mode (default) and you want to set an RM-CR Dante terminal and corporate terminal to the same IP segment, connect both terminals to the same network switch. If you connect them to different network switches, "RM Device Finder" and "ProVisionaire Control" will not be able to detect the device.

Main Revisions and Enhancements

New Functions

- The RM-TT and RM-WAP-8 can now be detected and the Web GUI can be displayed.
- Added a firmware update function (compatible with the RM-CR, RM-CG, RM-TT, and VXL1-16P).

Licensing Agreement & Download

☑ I agree to the licensing terms outlined below.*

DOWNLOAD

Lumens®

Copyright © Lumens. All rights reserved.

Find Device IP by RMDeviceFinder

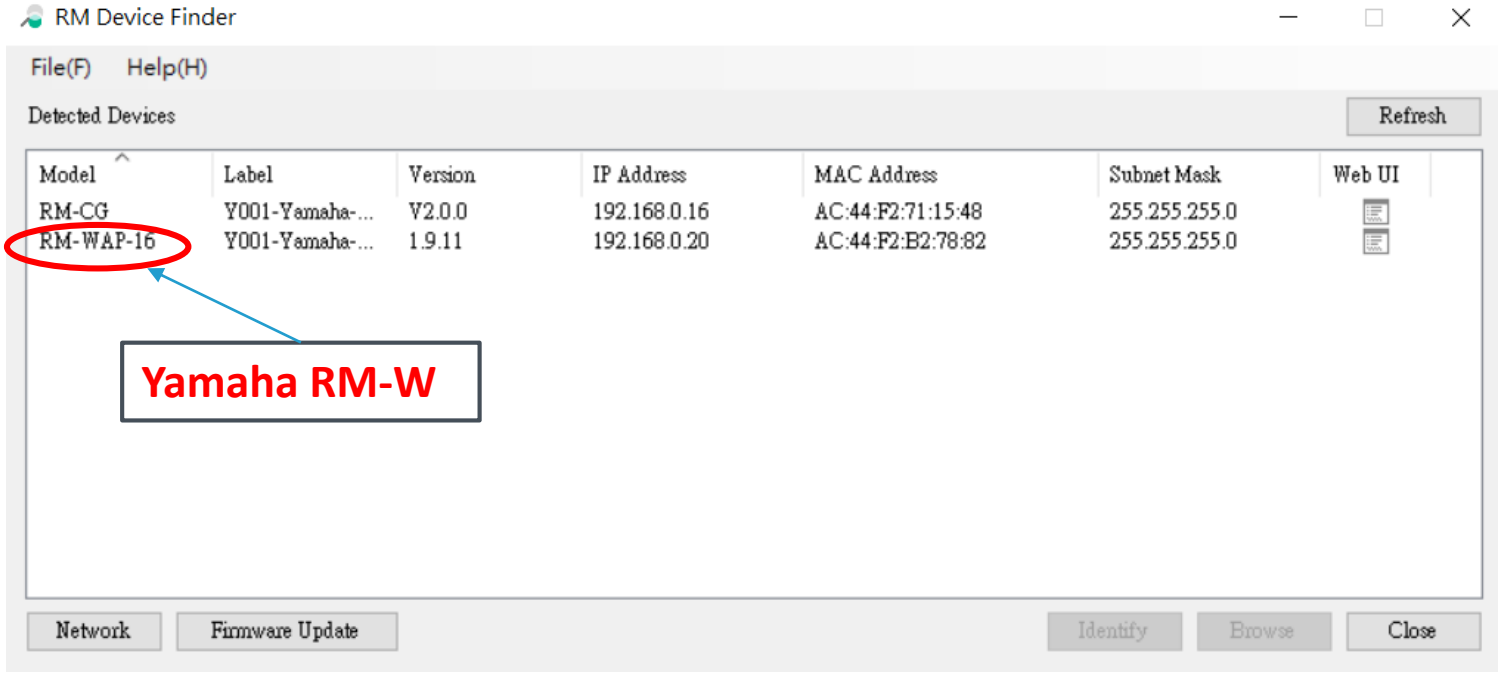

Lumens®
Copyright © Lumens. All rights reserved.

YAMAHA RM-W Desktop Microphone Setting

Lumens®

Copyright © Lumens. All rights reserved.

Set up Yamaha RM-W

RM-WAP-16/RM-WAP-8

RM-W Wireless Microphone

- Use PoE to power on RM-WAP-16/RM-WAP-8
- Power on RM-W Wireless Microphone and press “pair” button 3-5 secs and it will flash blue twice. The microphone pair successfully to RM-WAP-16/RM-WAP-8.

Lumens®

Copyright © Lumens. All rights reserved.

Set a password of Yamaha RM-W

- Enter Device IP address into browser.
- Specify a password in the password settings window, and then click the [SET PASSWORD] button

Lumens®
Copyright © Lumens. All rights reserved.

Login in Yamaha RM-W Webpage

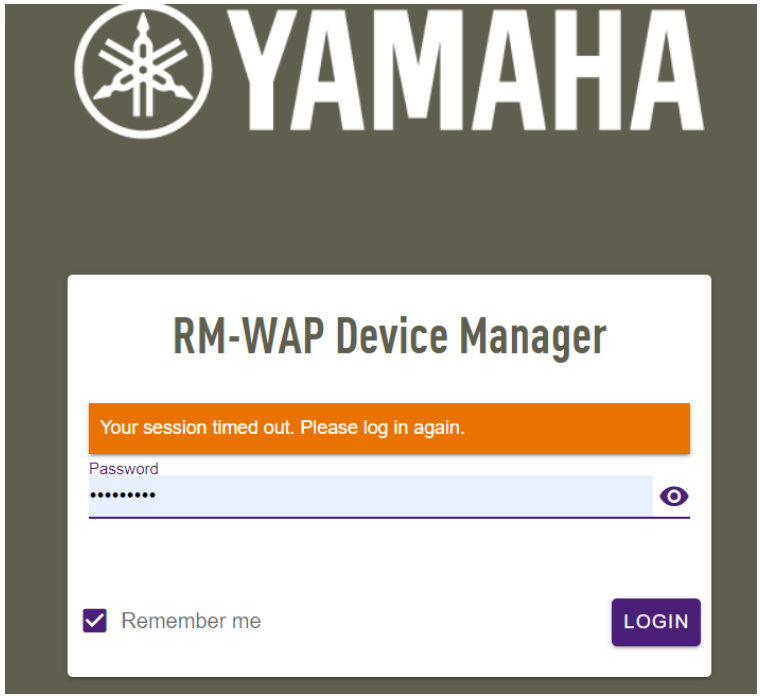

- Type the password into the login window, and then click the [LOGIN] button.

Lumens®
Copyright © Lumens. All rights reserved.

Identify microphone

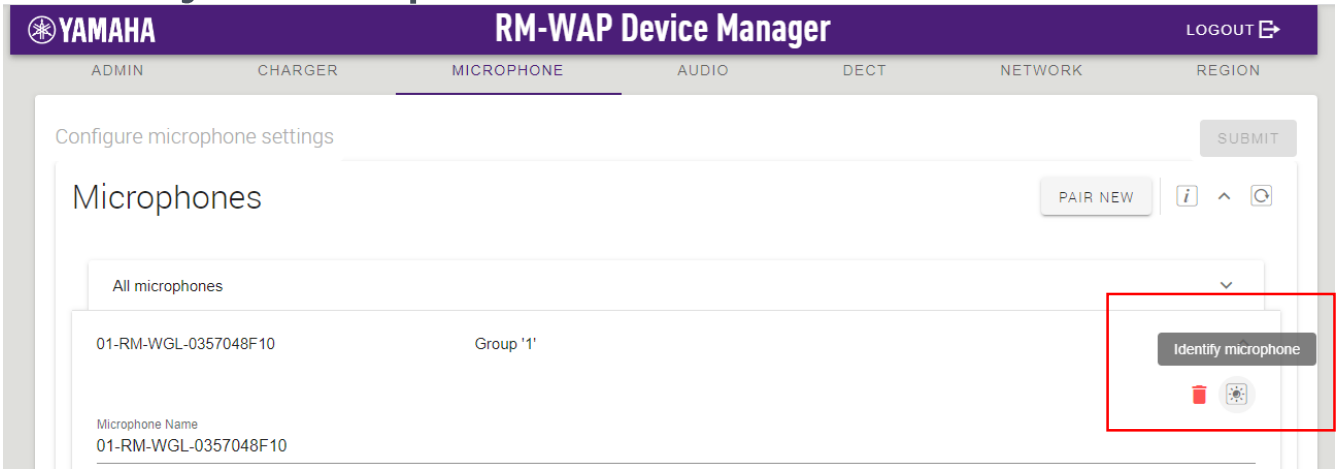

- Click the button to identity the device. After clicking, microphone will flash purple.

Lumens®

Copyright © Lumens. All rights reserved.

Microphone Status

- Go to webpage “ Home” tab
- Mic shows orange means it is connected.
- Audio shows green means it can receive the voice.
- Dante channel No. matches CamConnect Pro

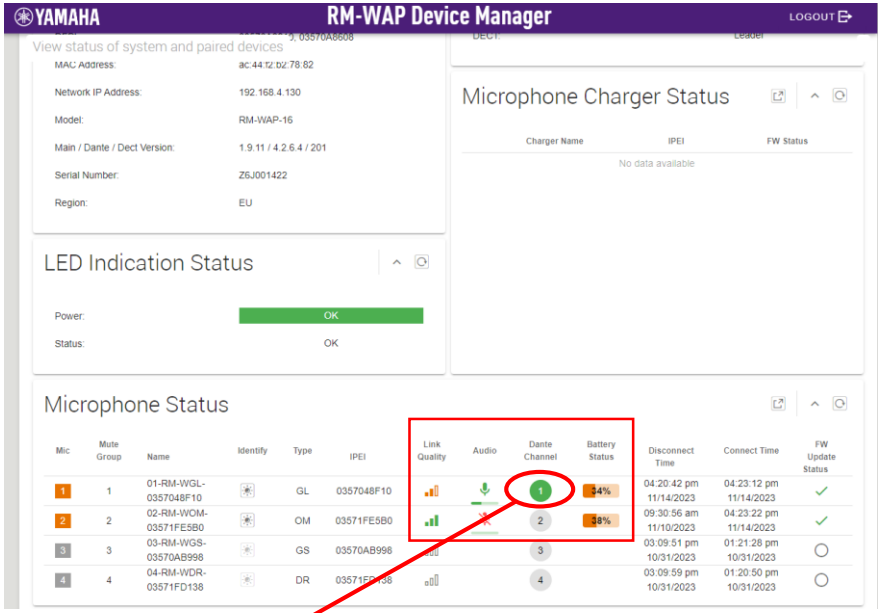

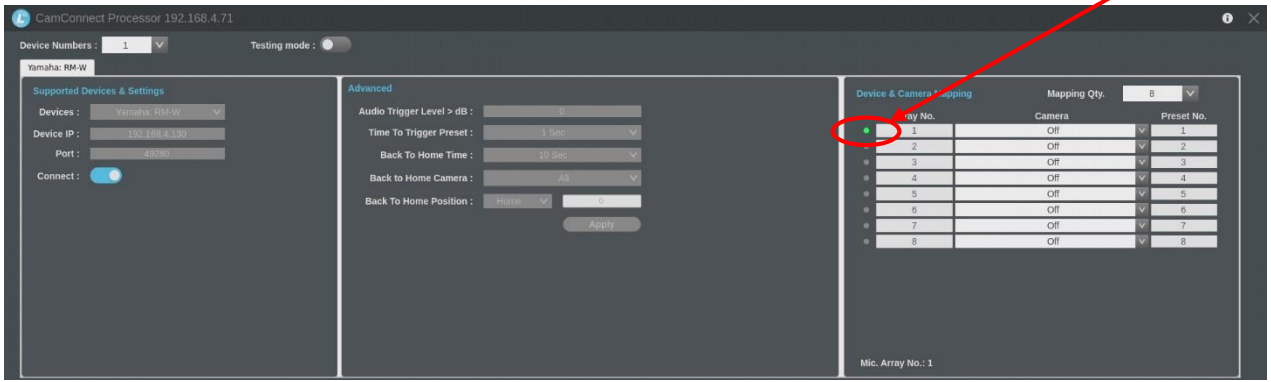

Lumens®

Copyright © Lumens. All rights reserved.

CamConnect Pro (AI-BOX1) Settings

Lumens®

Copyright © Lumens. All rights reserved.

Support Device & Settings

1. Pull down the Device item and selects [Yamaha RM-W]
2. Enter the IP address of Yamaha RM-W
3. Switch the [Connect] button to connect with Yamaha RM-W

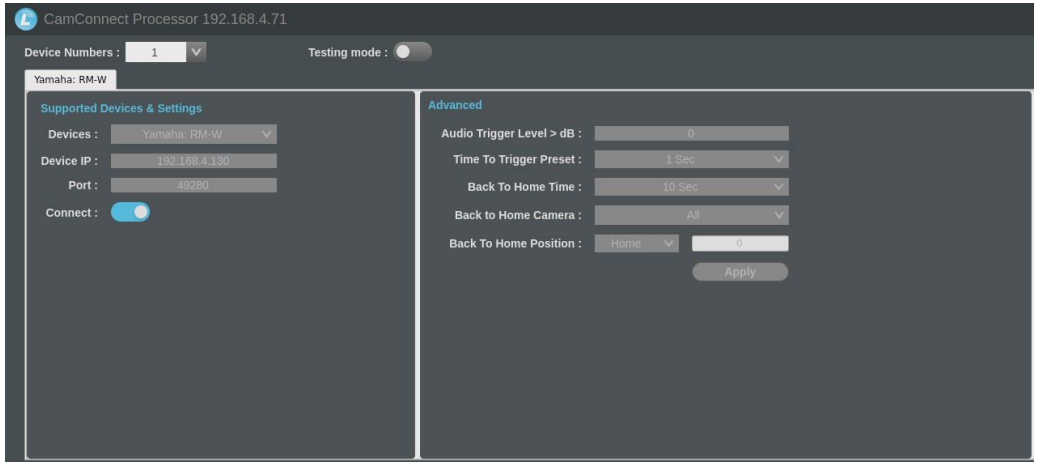

Notice: It's not recommend to use Yamaha CM-CR, RM-W, RM-CG in the same subnetwork. Yamaha CM-CR will integrate all microphone into one source.

Copyright © Lumens. All rights reserved.

Lumens®
Your Reliable Partner

Thank You!

MyLumens.com

Contact Lumens